




RD2X4 Quad Remote Display Interconnection Guide

This interconnection guide has been supplied in addition to the RD2 Remote Display Installation Manual, 3601-M511-O1. The RD2 manual should be consulted for information concerning specifications, indicator compatibility, and setup and configuration of the RD2X4 remote displays.

Please read the RD2 manual and this guide before attempting installation and keep both available for future reference.


Refer to Figure No. 2 on page 2 for the RD2X4 Rear Sub-Assembly Wiring Diagram

Figure No. 1 illustrates the wiring diagram of the RD2X4 Quad Remote Display consisting of the four displays to show the weight from each of three platforms and a total weight driven by a single serial port on the weight indicator.

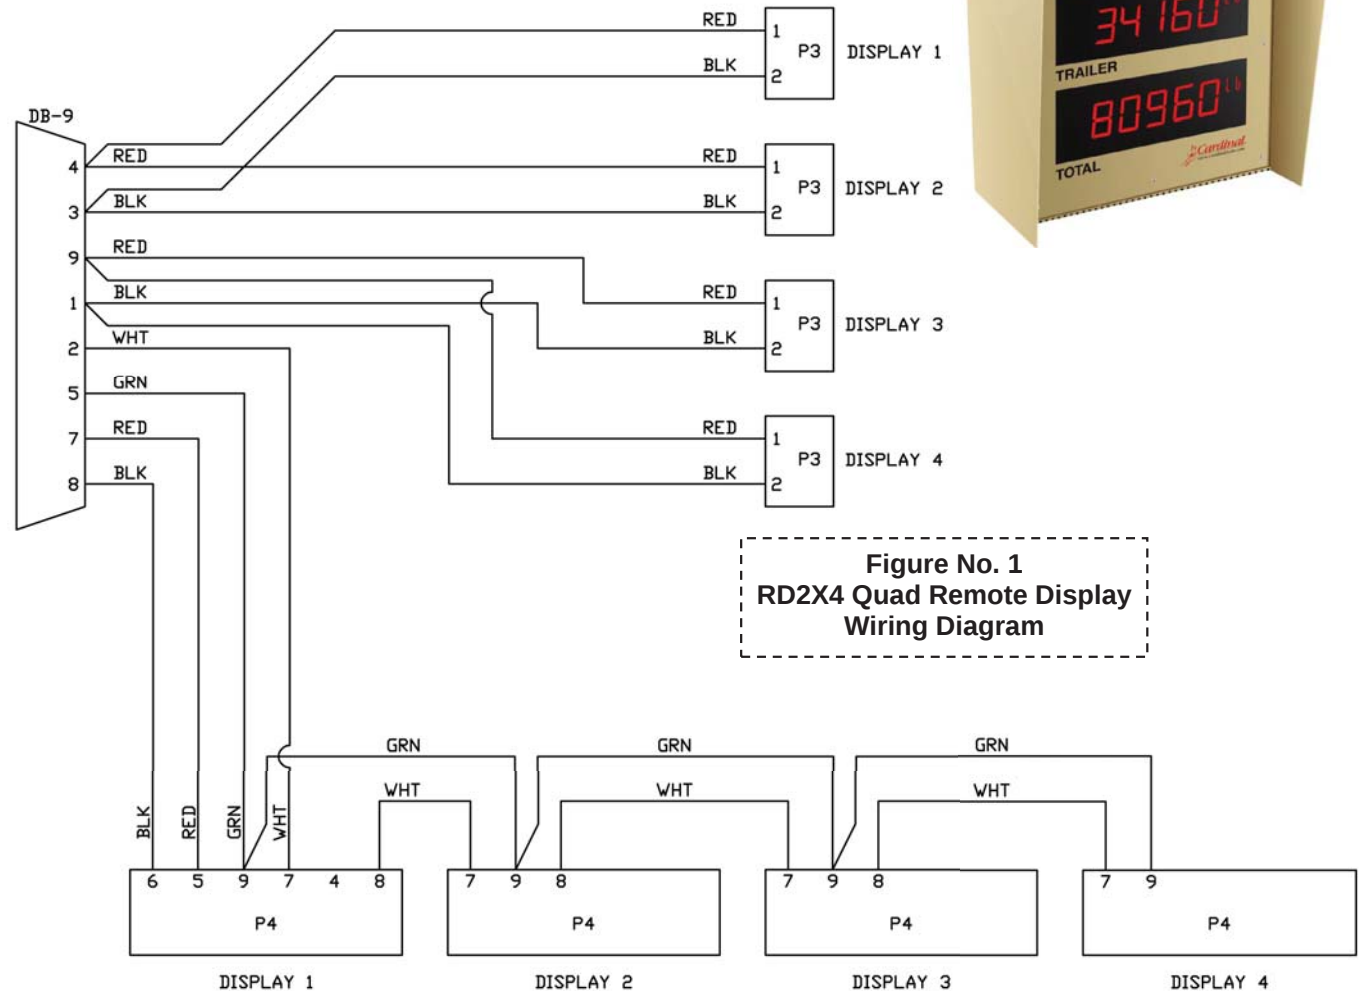

RD2X4 REAR SUB-ASSEMBLY WIRING DIAGRAM

Figure No. 2
RD2X4 Rear Sub-Assembly
Wiring Diagram

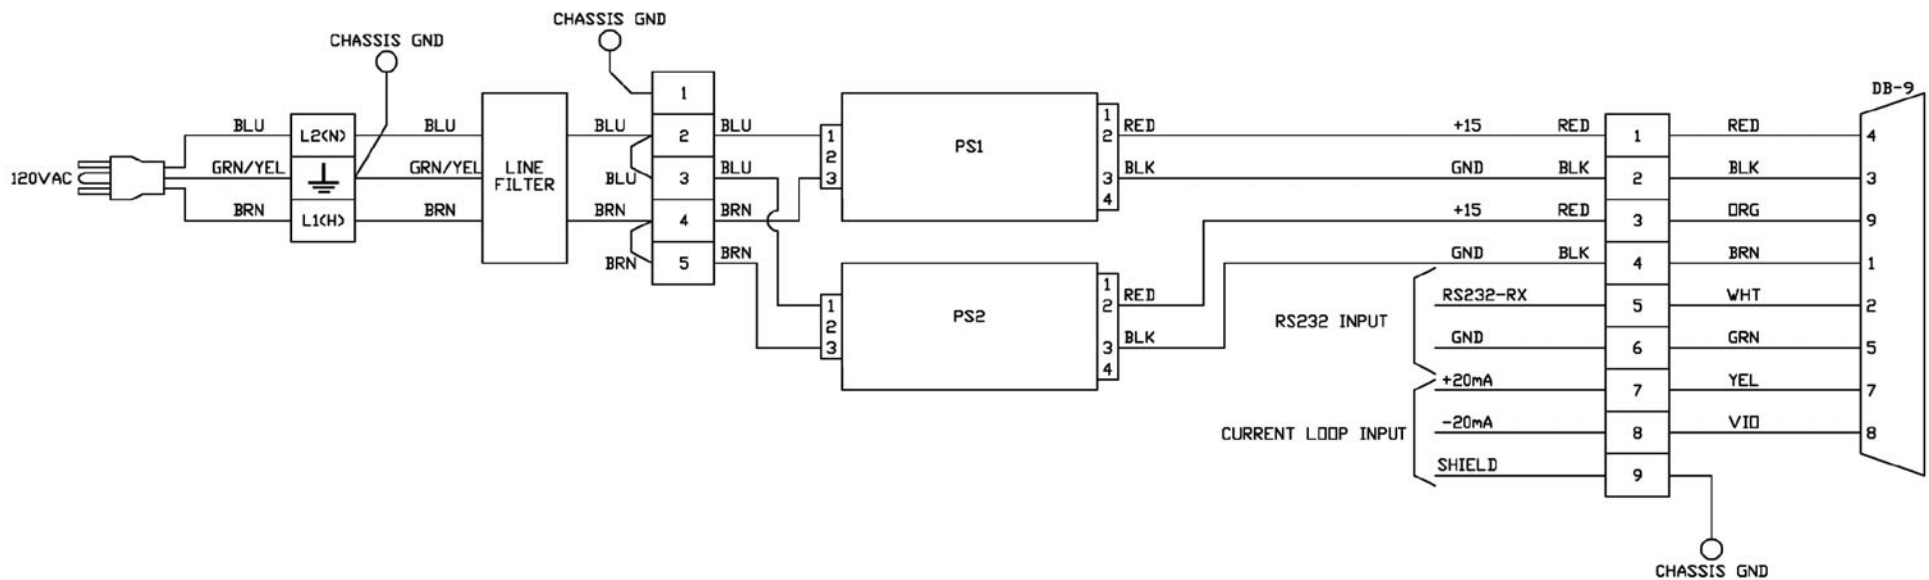

Cardinal Scale Mfg. Co.

102 E. Daugherty, Webb City, MO 64870 USA

Ph: 417-673-4631 or 1-800-641-2008

Fax: 417-673-2153

www.cardinalscales.com

Technical Support: 1-866-254-8261

E-mail: tech@cardet.com