




# SCBD Load Cell Update Instructions for the 825D

**IMPORTANT!** Make sure the 825D-DLC card has been updated to the current version software (which includes the appropriate SCBD load cell image).

1. Turn on power to the 825D. The display should show the 825 startup screen.

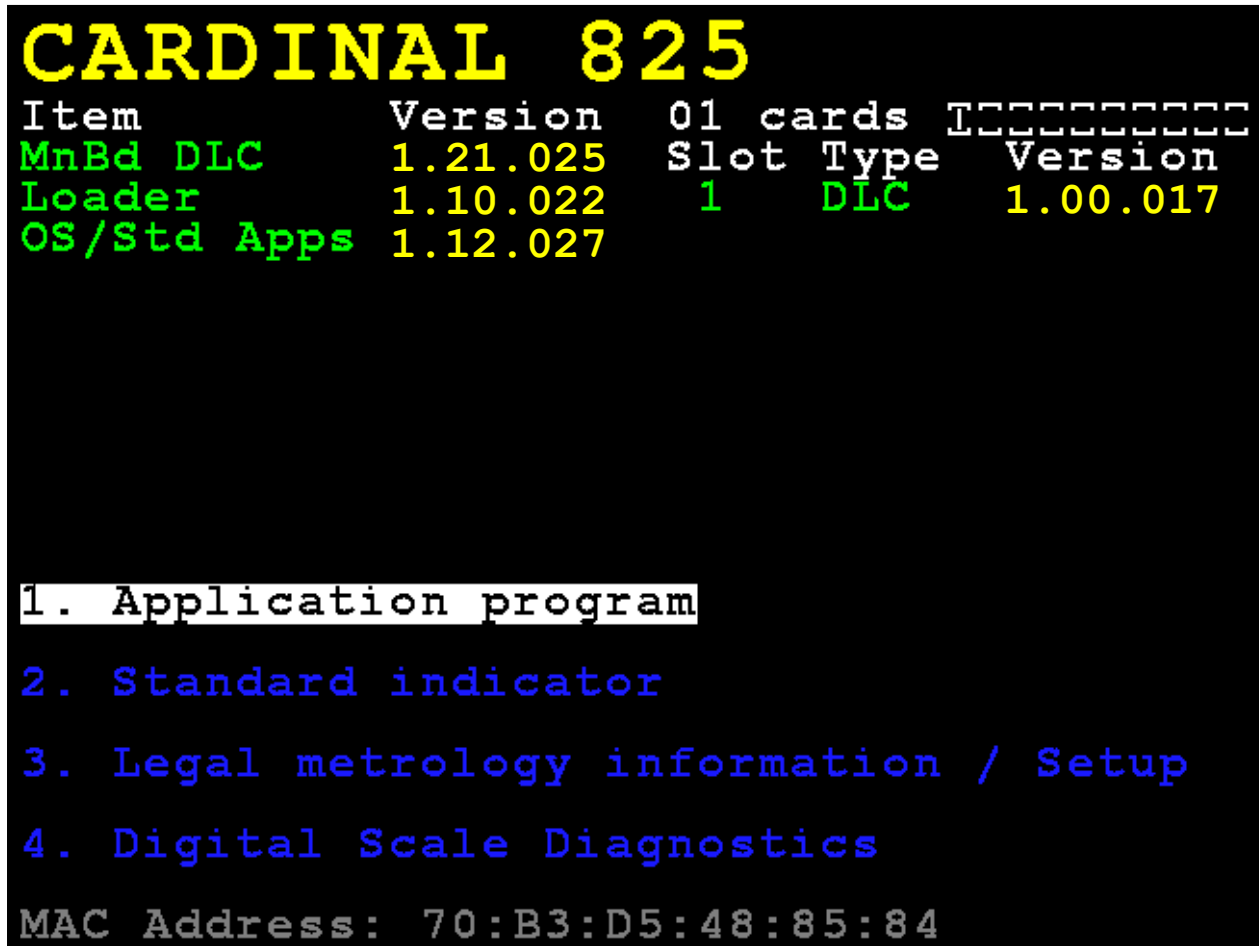

2. Press the **3** key to select **3. Legal metrology information / Setup** or use the Navigation Keys  $\nabla$  Down Arrow or  $\Delta$  UP Arrow to (highlight)
3. **Legal metrology information / Setup** and then press the **ENTER** key.

3. With the **Legal metrology information / Setup** screen displayed, press the **3** key to select **3. Setup menu** or use the Navigation Keys ▾ Down Arrow or △ UP Arrow to (highlight) **3. Setup menu** and then press the **ENTER** key.



**NOTE:** The Setup Login may be required.

## **Legal metrology information / Setup**

**Press:**

**1. View event counters**

**2. View certifications / ID information**

**3. Setup menu**

**MAC Address: 00:CF:34:DE:BF**

4. With the **Login** screen and prompt displayed, use the alphanumeric keys to enter the Login, and then press the Navigation Keys ▾ Down Arrow to advance to the password prompt.

Enter the Password using the alphanumeric keys, and then press the **ENTER** key to proceed to the Setup Menu.



5. With the Setup Menu displayed, press the **3** key, or use the Navigation Keys to select (highlight) **3. Calibration**, and then press the **ENTER** key. The display will change to show the **Setup Scale Number** screen.

## Setup Menu

Press:

1. Date/Time

2. Communication

3. Calibration

4. Update software menu

5. Preferences

6. Diagnostics

7. Operators

MAC Address: 70:B3:D5:48:85:84

6. With the Setup Scale Number screen displayed, press the **D** key, or use the Navigation Keys to select (highlight) **D. Configure DLC**, and then press the **ENTER** key. The display will change to show the **Setup DLC Card 1** screen.

## Setup Scale Number

1. Scale 1

T. Total

D. Configure DLC

7. Leave the **Scales:**, **Cells:**, and other settings unchanged and press the **ENTER** key.

```
Setup DLC Card 1

Scales:      1  iSITE SO:123456
Cells:       8  DHCP:      Yes
First Cell:  1
Last Cell:   2

                Man DNS: No

                Advanced: No
```

8. The display will change to show the **DLC CARD 1 CELL ASSIGNMENT** screen.

```
DLC CARD 1 CELL ASSIGNMENT


  Num    Cell ID    Scale    Unassigned ID
>  1     1D6BFF0F    1
  2     15D64531    1
  3     0B5B616F    1
  4     101BA5C1    1
  5     115DC621    1
  6     049AED9F    1
  7     0B2E2ECF    1
  8     0AF79DC1    1

Use navigation keys to move selection
Press SPACE to configure selected item
Press 'U' to unassign selected item
```

9. With the **DLC CARD 1 CELL ASSIGNMENT** screen displayed, use the Navigation Keys to select a cell ID, and then press the **F** key to initiate the cell software update.

10. The display (at the bottom of the screen) will prompt for the Cell ID to update.

**NOTE:** By default, the screen will show the cell ID that was selected in the previous step. However, any cell ID may be entered if preferred

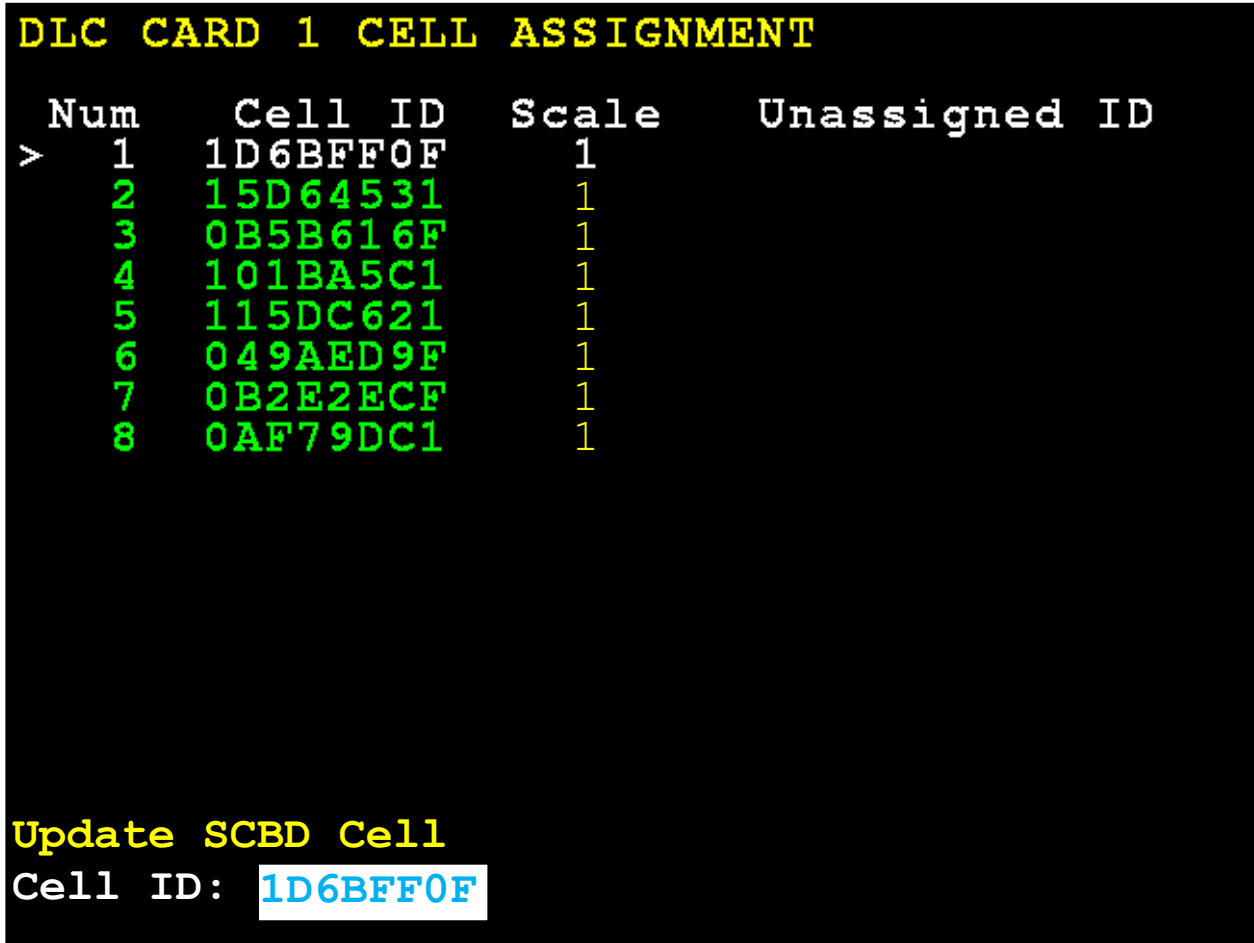



11. The updating process will begin, and the display (at the bottom of the screen) will change to show that the process is starting.

```
DLC CARD 1 CELL ASSIGNMENT

Num      Cell ID      Scale      Unassigned ID
> 1      1D6BFF0F      1
  2      15D64531      1
  3      0B5B616F      1
  4      101BA5C1      1
  5      115DC621      1
  6      049AED9F      1
  7      0B2E2ECF      1
  8      0AF79DC1      1

Update cell 1D6BFF0F starting
  0 % complete
```

The process may take a couple of minutes to update the load cell. During the updating process, the display (at the bottom of the screen) will be updated with the percentage of the process completed.

```
DLC CARD 1 CELL ASSIGNMENT

  Num    Cell ID    Scale    Unassigned ID
>  1     1D6BFF0F    1
  2     15D64531    1
  3     0B5B616F    1
  4     101BA5C1    1
  5     115DC621    1
  6     049AED9F    1
  7     0B2E2ECF    1
  8     0AF79DC1    1

Update cell 1D6BFF0F running
79 % complete
```

12. When the process is finished, the display (at the bottom of the screen) will show:

**Update cell 1D6BFF0F success,  
100 % complete            Press any key.**

*Note that the Cell ID shown is for illustration purposes only. Your Cell ID will be different.*

```
DLC CARD 1 CELL ASSIGNMENT

  Num      Cell ID      Scale      Unassigned ID
>  1      1D6BFF0F      1
  2      15D64531      1
  3      0B5B616F      1
  4      101BA5C1      1
  5      115DC621      1
  6      049AED9F      1
  7      0B2E2ECF      1
  8      0AF79DC1      1

Update cell 1D6BFF0F success
100 % complete            Press any key
```

13. Press any key to return the display to the **DLC CARD 1 ASSIGNMENT** screen.

Repeat step 9 to update the remaining load cells.

```
DLC CARD 1 CELL ASSIGNMENT

  Num    Cell ID    Scale    Unassigned ID
>  1     1D6BFF0F    1
  2     15D64531    1
  3     0B5B616F    1
  4     101BA5C1    1
  5     115DC621    1
  6     049AED9F    1
  7     0B2E2ECF    1
  8     0AF79DC1    1

Use navigation keys to move selection
Press SPACE to configure selected item
Press 'U' to unassign selected item
```


14. When all load cells have been updated, press **ESCAPE** to return to the Startup Screen and then press the **4** key to select **4. Digital Scale Diagnostics** or use the Navigation Keys  $\nabla$  Down Arrow or  $\triangle$  UP Arrow to (highlight) **4. Digital Scale Diagnostics** and then press the **ENTER** key.

```
CARDINAL 825
Item          Version  01 cards  I[ ] [ ] [ ] [ ] [ ] [ ] [ ] [ ] [ ] [ ]
MnBd DLC      1.21.025 Slot Type  Version
Loader        1.10.022  1   DLC    1.00.017
OS/Std Apps  1.12.027

1. Application program
2. Standard indicator
3. Legal metrology information / Setup
4. Digital Scale Diagnostics

MAC Address: 70:B3:D5:48:85:84
```

15. With the **Digital Load Cell Diagnostics** screen displayed, press **N** for Next until the screen changes to show **Load Cell IDs / Software Versions**.

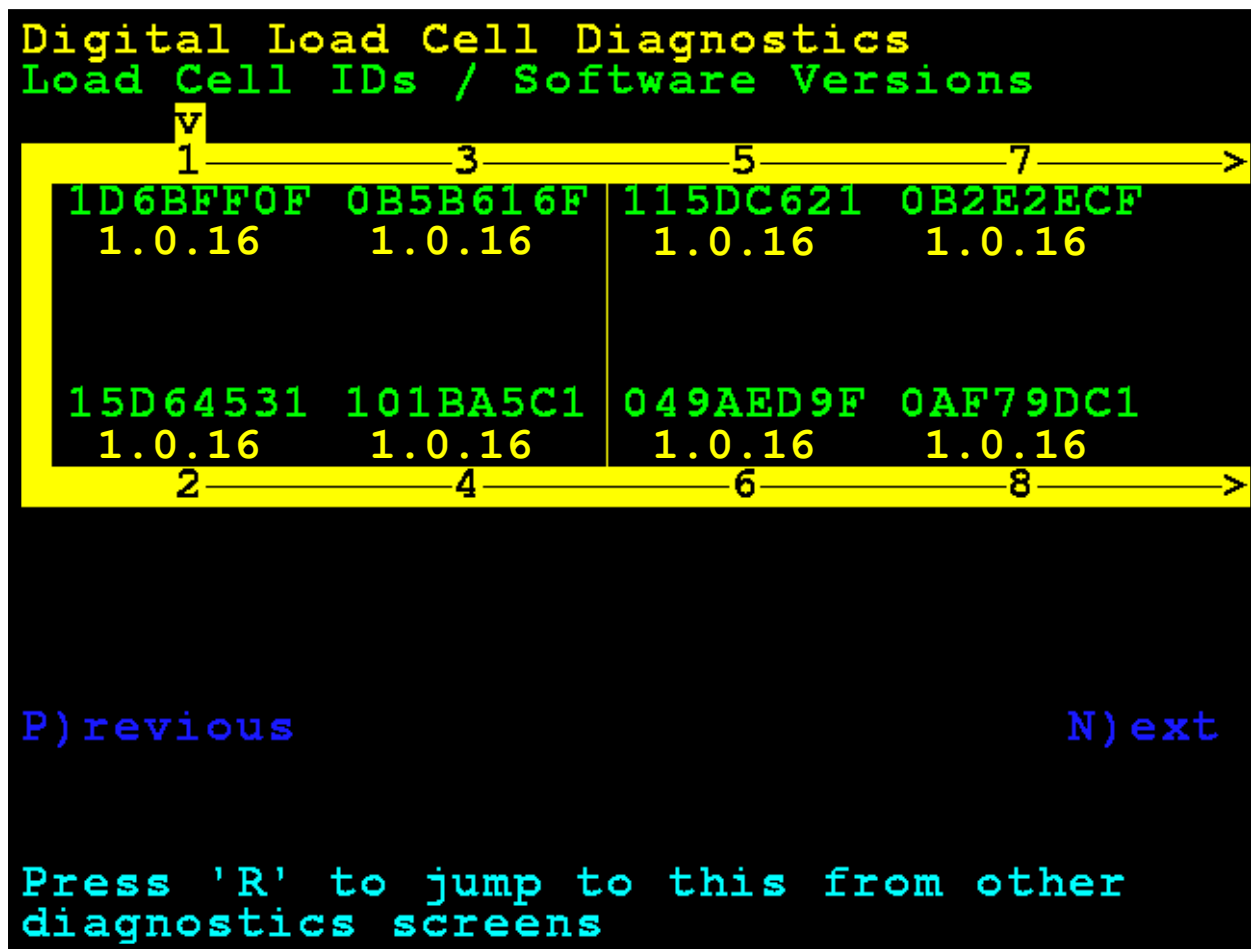

16. With the **Load Cell IDs / Software Versions** screen displayed, ensure that all load cells show the correct software versions.
17. When the software version in all load cells has been verified, press **ESCAPE** to return to the Startup Screen.

## Cardinal Scale Mfg. Co.

102 E. Daugherty, Webb City, MO 64870 USA  
Ph: 417-673-4631 or 1-800-641-2008  
Fax: 417-673-2153  
[www.cardinalscales.com](http://www.cardinalscales.com)

Technical Support: 1-866-254-8261  
E-mail: [tech@cardet.com](mailto:tech@cardet.com)