



CARDINAL®

825

**Checkweigher
Operation Guide**

Introduction

The Cardinal 825 features a Checkweigher with on-screen confirmation of weight ranges and an animated slider to indicate which range the weight lies within.

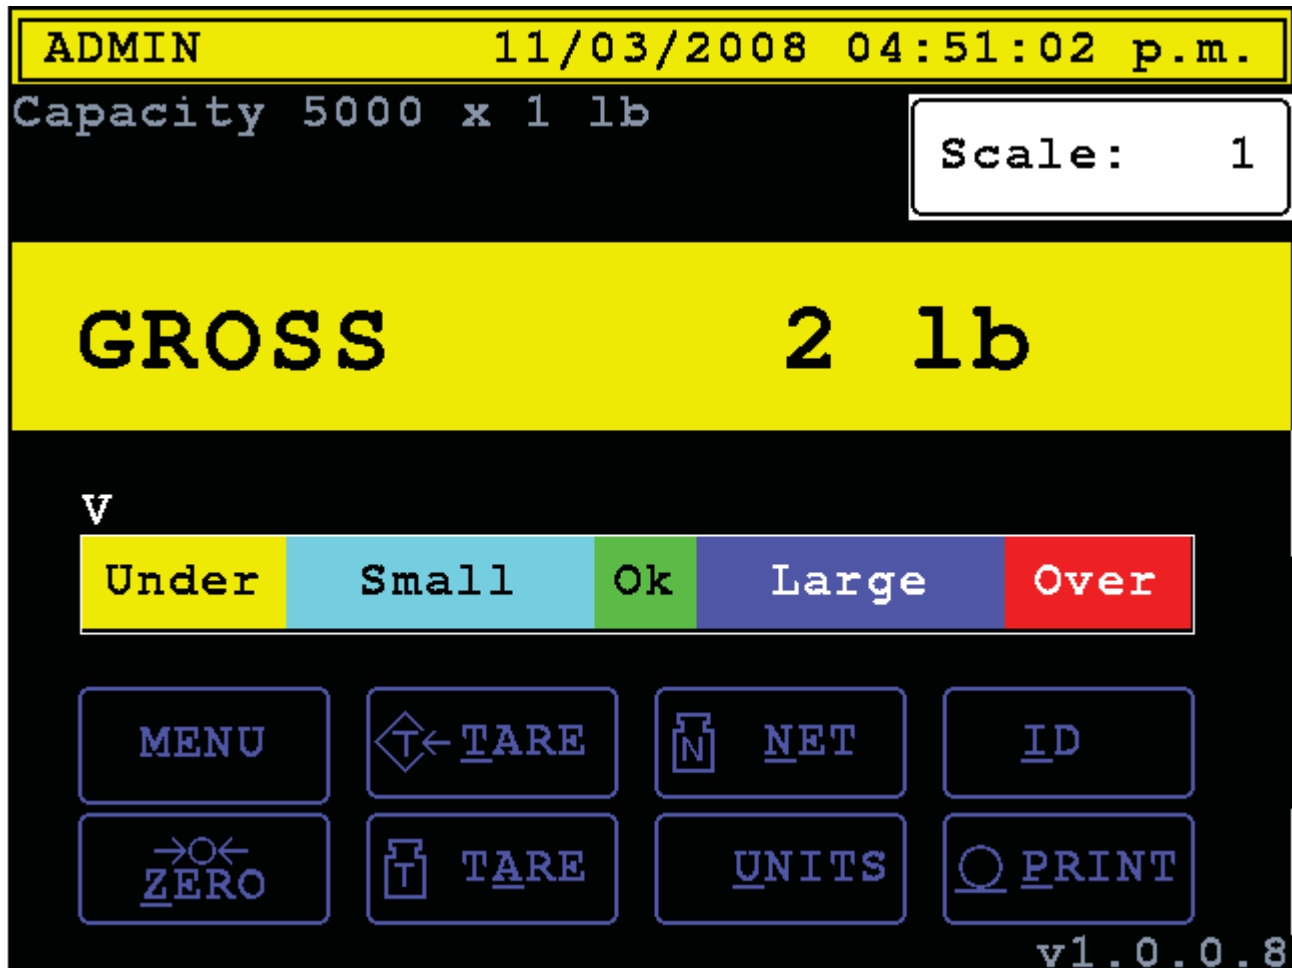


Figure 1: Cardinal 825 Checkweigher

- Configurable ranges from one to five zone.
- Configurable foreground and background colors for each zone.
- Configurable text displays for each zone.

Setup

1. Configuring zones
 1. Touch the **MENU** button or press “M” to access the Checkweigher menu.
 2. Touch the **3. Presets** button or press “3” to access the presets menu.

3. The **Add/Edit Presets** menu shows all zone configurations and gives a graphical representation of what the current zone configuration will look like (figure 2).

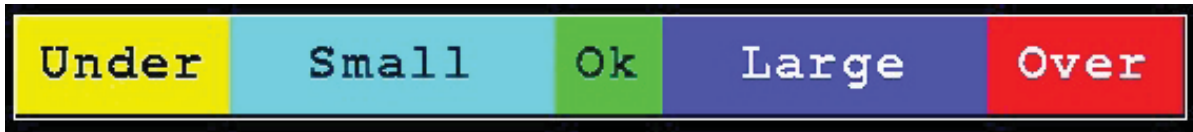


Figure 2: Graphical representation of Checkweigher zone configurations.

4. Touch a configuration item or select one using the **UP/DOWN** navigation keys and pressing **ENTER**.
5. Use the navigation keys to select any item you wish to edit:
 1. Enabled – If set to yes, the zone configuration is active.
 2. Label – Defines the text label to be placed on the zone.
 3. Background – Defines the background color for the label.
 4. Foreground – Defines the foreground color for the label.
 5. Weight – Defines the **upper limit** for the zone.
6. Press the **ENTER** key to save the configuration or the **ESC** key to cancel changes.
7. Press the **BACK ARROW** or **ESC** key to exit the **Add/Edit Presets** menu.
8. Touch the **5. Exit** button or press the **ESC** key to exit the menu.

Cardinal Scale Mfg. Co.

102 E. Daugherty, Webb City, MO 64870 USA

Ph: 417-673-4631 or 1-800-641-2008

Fax: 417-673-2153

www.cardinalscale.com

Technical Support: 1-866-254-8261

E-mail: tech@cardet.com

Printed in USA

825 Checkweigher Operation Guide