


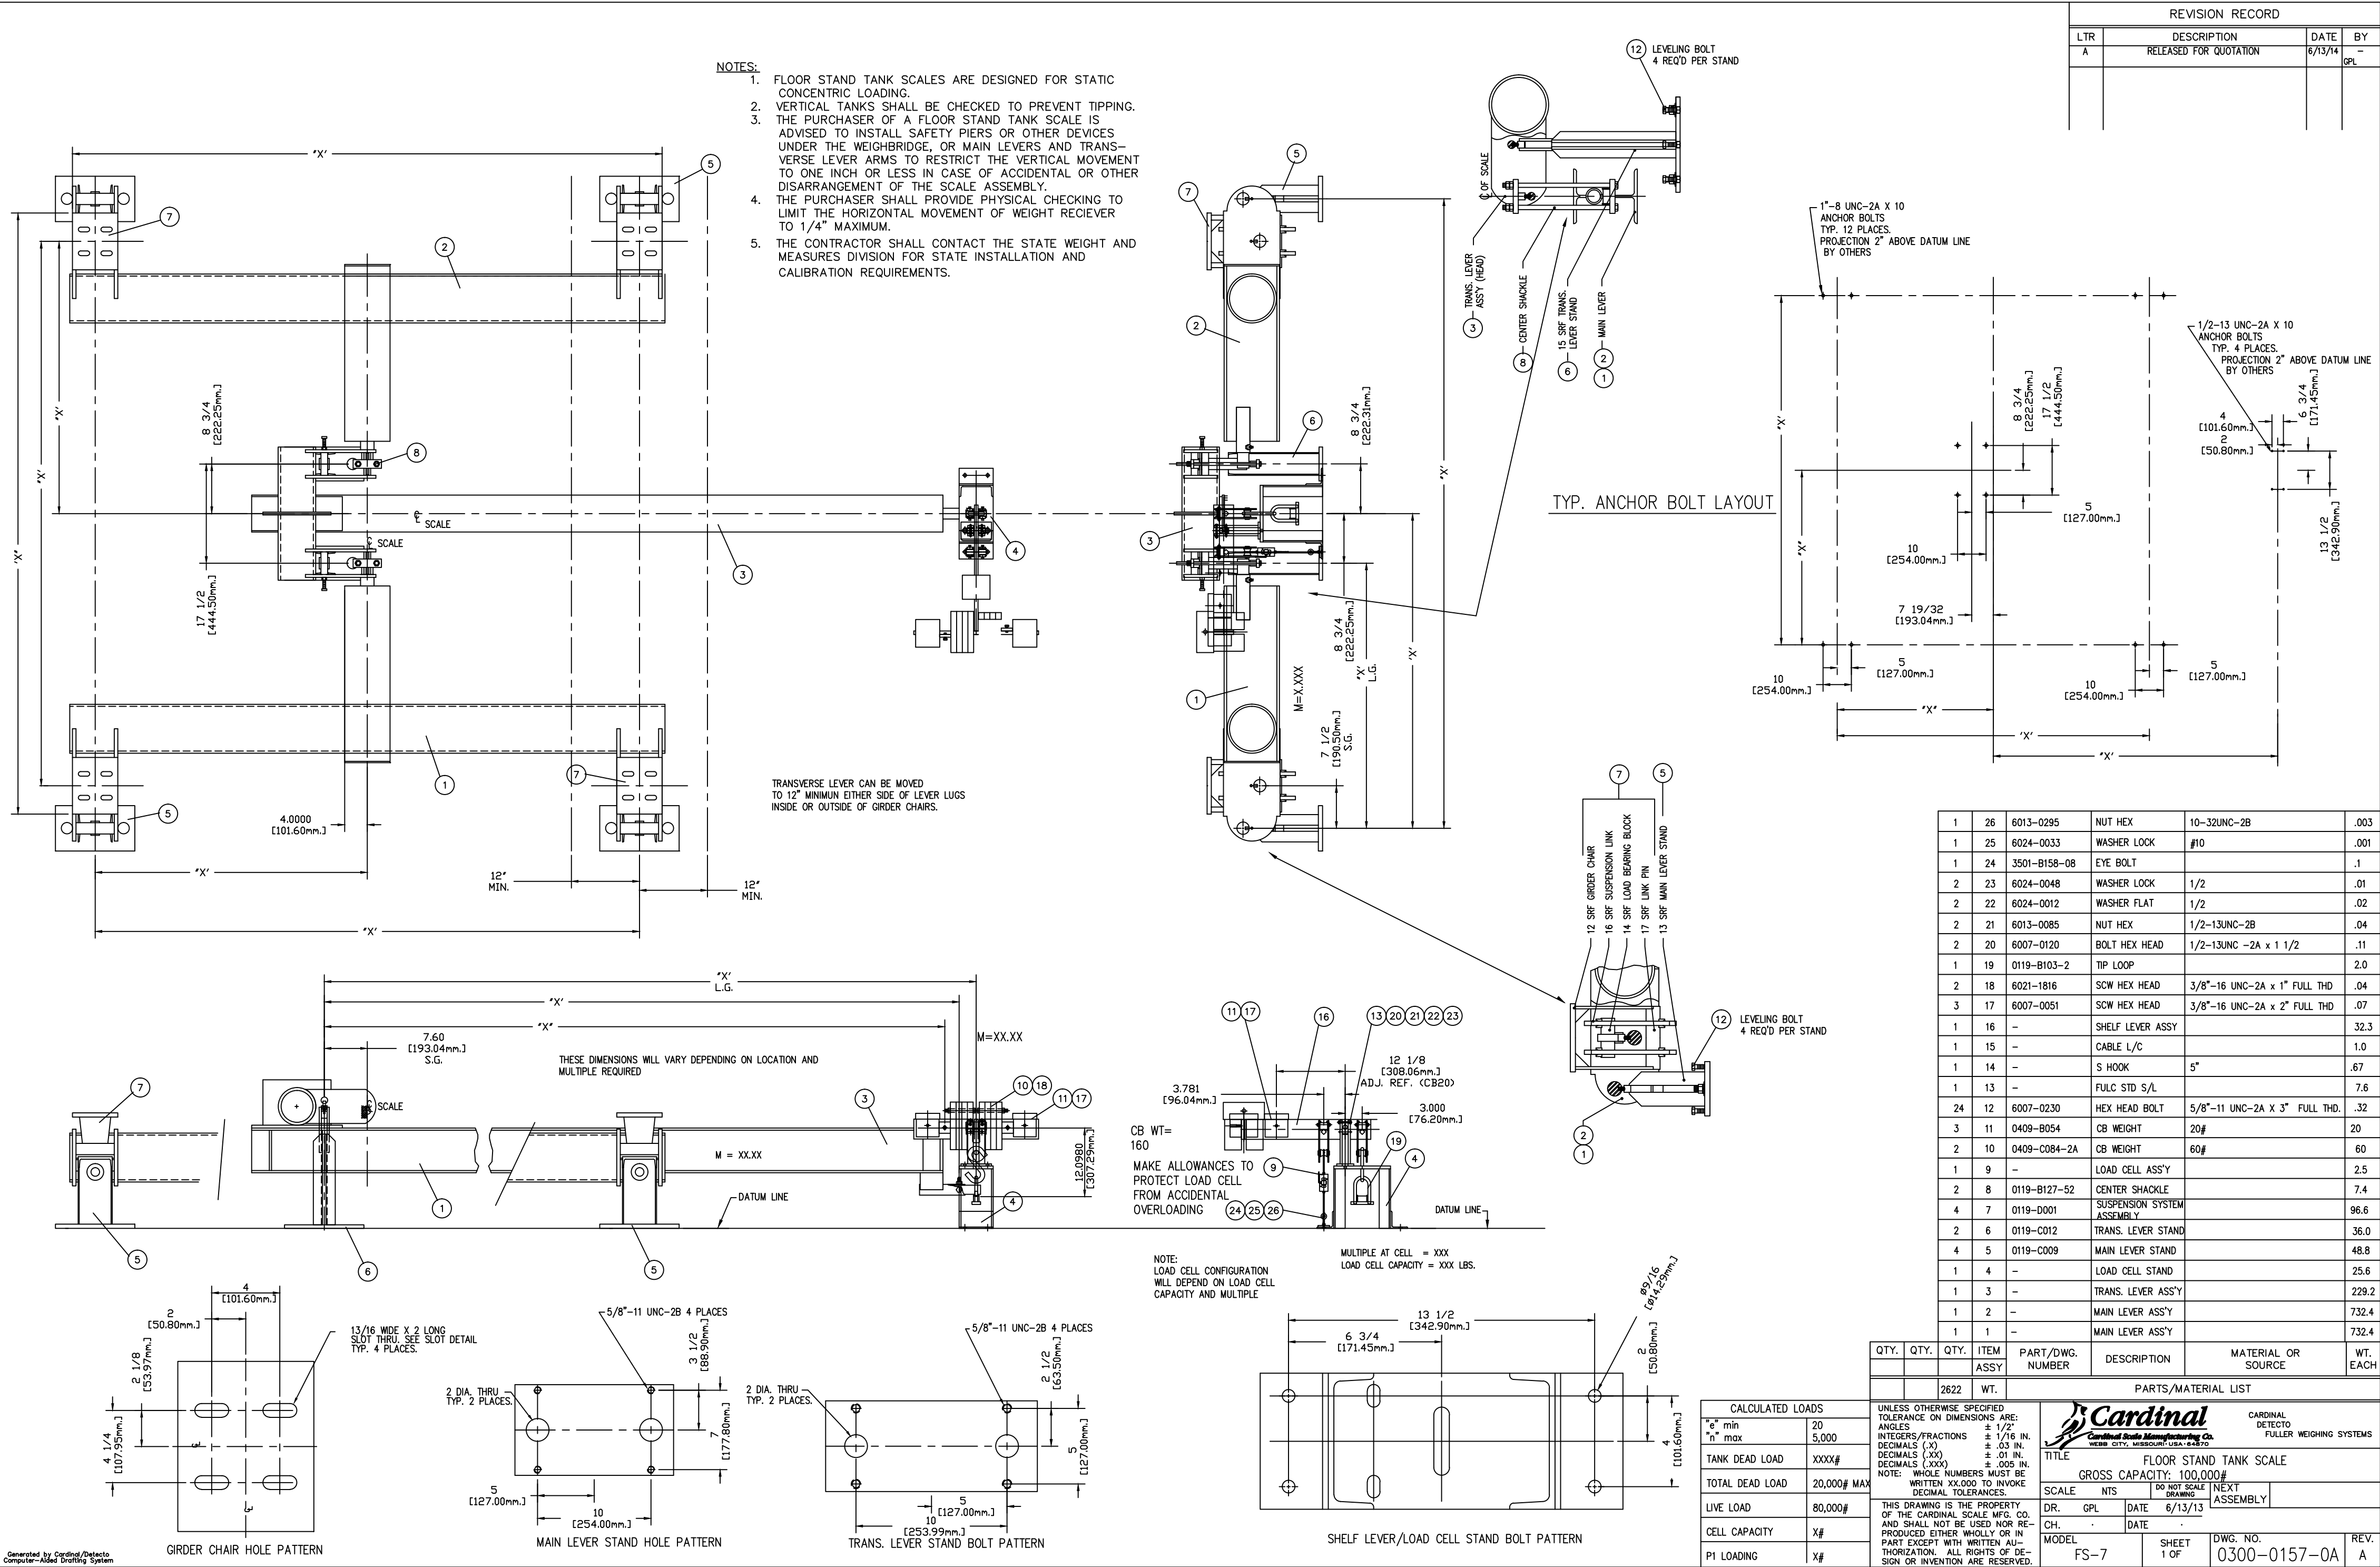

NOTES:

- FLOOR STAND TANK SCALES ARE DESIGNED FOR STATIC CONCENTRIC LOADING.
- VERTICAL TANKS SHALL BE CHECKED TO PREVENT TIPPING.
- THE PURCHASER OF A FLOOR STAND TANK SCALE IS ADVISED TO INSTALL SAFETY PIERS OR OTHER DEVICES UNDER THE WEIGHBRIDGE, OR MAIN LEVERS AND TRANSVERSE LEVER ARMS TO RESTRICT THE VERTICAL MOVEMENT TO ONE INCH OR LESS IN CASE OF ACCIDENTAL OR OTHER DISARRANGEMENT OF THE SCALE ASSEMBLY.
- THE PURCHASER SHALL PROVIDE PHYSICAL CHECKING TO LIMIT THE HORIZONTAL MOVEMENT OF WEIGHT RECIEVER TO 1/4" MAXIMUM.
- THE CONTRACTOR SHALL CONTACT THE STATE WEIGHT AND MEASURES DIVISION FOR STATE INSTALLATION AND CALIBRATION REQUIREMENTS.

TRANSVERSE LEVER CAN BE MOVED TO 12" MINIMUM EITHER SIDE OF LEVER LUGS INSIDE OR OUTSIDE OF GIRDER CHAIRS.

THESE DIMENSIONS WILL VARY DEPENDING ON LOCATION AND MULTIPLE REQUIRED

MAKE ALLOWANCES TO PROTECT LOAD CELL FROM ACCIDENTAL OVERLOADING

MULTIPLE AT CELL = XXX
LOAD CELL CAPACITY = XXX LBS.

NOTE:
LOAD CELL CONFIGURATION WILL DEPEND ON LOAD CELL CAPACITY AND MULTIPLE

QTY.	QTY.	QTY.	ITEM	PART/DWG. NUMBER	DESCRIPTION	MATERIAL OR SOURCE	WT. EACH
2622	WT.	ASSY	PARTS/MATERIAL LIST				
1	26	6013-0295	NUT HEX	10-32UNC-2B			.003
1	25	6024-0033	WASHER LOCK	#10			.001
1	24	3501-B158-08	EYE BOLT				.1
2	23	6024-0048	WASHER LOCK	1/2			.01
2	22	6024-0012	WASHER FLAT	1/2			.02
2	21	6013-0085	NUT HEX	1/2-13UNC-2B			.04
2	20	6007-0120	BOLT HEX HEAD	1/2-13UNC-2A x 1 1/2			.11
1	19	0119-B103-2	TIP LOOP				2.0
2	18	6021-1816	SCW HEX HEAD	3/8"-16 UNC-2A x 1" FULL THD			.04
3	17	6007-0051	SCW HEX HEAD	3/8"-16 UNC-2A x 2" FULL THD			.07
1	16	-	SHELF LEVER ASSY				32.3
1	15	-	CABLE L/C				1.0
1	14	-	S HOOK	5"			.67
1	13	-	FULC STD S/L				7.6
24	12	6007-0230	HEX HEAD BOLT	5/8"-11 UNC-2A x 3" FULL THD.			.32
3	11	0409-B054	CB WEIGHT	20#			20
2	10	0409-C084-2A	CB WEIGHT	60#			60
1	9	-	LOAD CELL ASS'Y				2.5
2	8	0119-B127-52	CENTER SHACKLE				7.4
4	7	0119-D001	SUSPENSION SYSTEM ASSEMBLY				96.6
2	6	0119-C012	TRANS. LEVER STAND				36.0
4	5	0119-C009	MAIN LEVER STAND				48.8
1	4	-	LOAD CELL STAND				25.6
1	3	-	TRANS. LEVER ASS'Y				229.2
1	2	-	MAIN LEVER ASS'Y				732.4
1	1	-	MAIN LEVER ASS'Y				732.4