

- High-quality, economical durable weight indicator
- Bright-green backlit LCD for easy viewing
- Available with rechargeable battery power
- Washdown IP66-rated for harsh environments
- Available in two models (185 and 185B)



**WEIGHT INDICATOR** 







# ECONOMICAL DIGITAL WEIGHT INDICATORS



#### **Applications:**

- Ideal for bench scales used in commercial foodservice and general weighing applications
- High visibility for warehouse and distribution facility floor scales
- Recycling and outdoor materials weighing
- Industrial vessel weighing where high visibility is beneficial
- NTEP, Measurement Canada, and OIML approved

IP66-RATED ABS ENCLOSURE FOR WASHDOWN ENVIRONMENTS



#### **Features:**


- Bold 1-inch/25-mm high backlit LCD
- Attractive molded ABS enclosure built for durability in harsh indoor or outdoor applications
- Stainless steel mounting bracket included
- Ib, oz, kg, and g weighing units
- Ability to drive up to four 350Ω load cells
- Built-in, bi-directional RS232 port for printing or connection to PC
- Battery level indicator on model 185B
- Piece counting mode
- Easy-to-manage, 4-screw, 2-piece enclosure
- Simple 7 button operation
- Internal audit trail for NTEP and OIML requirements
- Country of Origin: USA



# PRICE PRICE CONOMICAL PRICE COMBINED WITH HIGH-QUALITY DURABILITY FOR INDUSTRIAL WEIGHING APPLICATIONS

#### **REMOTE DISPLAY USE**

Remote display feature for long-range viewing when connected to another weight display. The 1-in/25-mm high bold green LCD is visible from a distance.

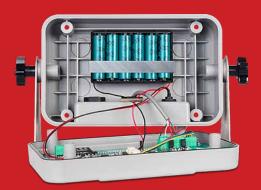

### RECHARGEABLE BATTERY POWER AVAILABLE

The model 185B is powered by six standard, off-the-shelf AA Alkaline or rechargeable Ni-Cad or NiMH batteries. Internal battery circuitry automatically detects the battery type for charging.



## WATERPROOF GLAND CONNECTORS

RS232 serial output for connectivity with a PC or printer. The watertight power connector meets washdown requirements.



# ROTATIONAL DISPLAY POSITIONING

The 185's anti-slip mounting bracket includes rotational lock-in set points adjustable in discrete 15° increments for exact positioning of the display right where you want it.



The 185 and 185B indicators come with a versatile stainless steel swivel mounting bracket for desktop or wall mount.



# RIJAL WEIGHT INDICATOR



185



## 185 185B



Power Requirements

100 to 240 VAC 50/60Hz 12
VDC 1 A wall plug-in UL/
CSA listed AC power adapter
(Cardinal part number 84000182-0A)

Six "AA" Alkaline, Ni-Cad or NiMH batteries (not included) **OR** 

185B

100 to 240 VAC 50/60Hz 12 VDC 1 A wall plug-in UL/ CSA listed AC power adapter (Cardinal part number 8400-0182-0A)

Construction

IP66-rated ABS indicator enclosure with versatile stainless steel wall or desktop mounting bracket

Operating

Temperature: 14 to 104 °F (-10 to +40 °C)

 Environment
 Humidity: 90% non-condensing (maximum)

 Weight Display
 Six-digit, seven-segment, 1.0 in (25 mm) high, backlit green LCD

Battery Life 70-hour typical operation with full charge

 Load Cell Excitation
 5.0 VDC

 Signal Input Range
 0mV min. to 40mV max.

 Number of Load Cells
 Up to 4 at 350 Ohm minimum resistance

 Load Cell Cable
 1500 feet (450 meters) maximum with sense lines

 Length
 30 feet (9 meters) maximum without sense lines

 Division Value
 1, 2 or 5 x 10, 1, 0.1, 0.01, 0.001

| Scale Divisions: | 100 to 100,000 | NON-COMMERCIAL | 100 to 100,000 | 100 to 6,000 (Class III/IIIL) | 100 to 6,000 (Class 3)

**Internal Resolution** 

Tare CapacityScale capacitySample Rate10 samples per secondAuto Zero Range0.5 or 1 through 9 divisions

Weighing Units Pounds (lb), Ounces (oz), Kilograms (kg), Grams (g)

 Keypad
 7-key Membrane type

 Keys
 ON/OFF, ZERO, TARE/←I, NET/GROSS, UNITS/◀, FN/♠

Standard I/O(1) bi-directional RS-232 portStandard FeaturesPiece Counting, Millivolt Display Diagnostic Function


 Enclosure Dimensions:
 7.7 in W x 4.7 in H x 2.6 in D (19.6 cm W x 11.9 cm H x 6.6 cm D)

 Net Weight
 2.3 lb (0.95 kg)
 2.5 lb (1.04 kg)

 Shipping Dimensions
 13 in L x 11 in W x 8 in H (33 cm L x 28 cm W x 20.3 cm H)

 Shipping Weight
 3.2 lb (1.45 kg)
 3.4 lb (1.54 kg)

 Country of Origin
 USA





Approval Number AM-6109



Cert. No. R-76/2006-A-DK2-18.04

EU Type-Examination: Certificate No. 0200-NAWI-03187

Cardinal Scale reserves the right to improve, enhance, or modify features and specifications without prior notice.

1 part in 16,777,216

# Cardinal Scale Manufacturing Co.

203 E. Daugherty, Webb City, MO 64870 USA Ph: 417-673-4631 or 800-441-4237 • Fax: 417-673-2153 www.CardinalScale.com **SOLD BY:**