

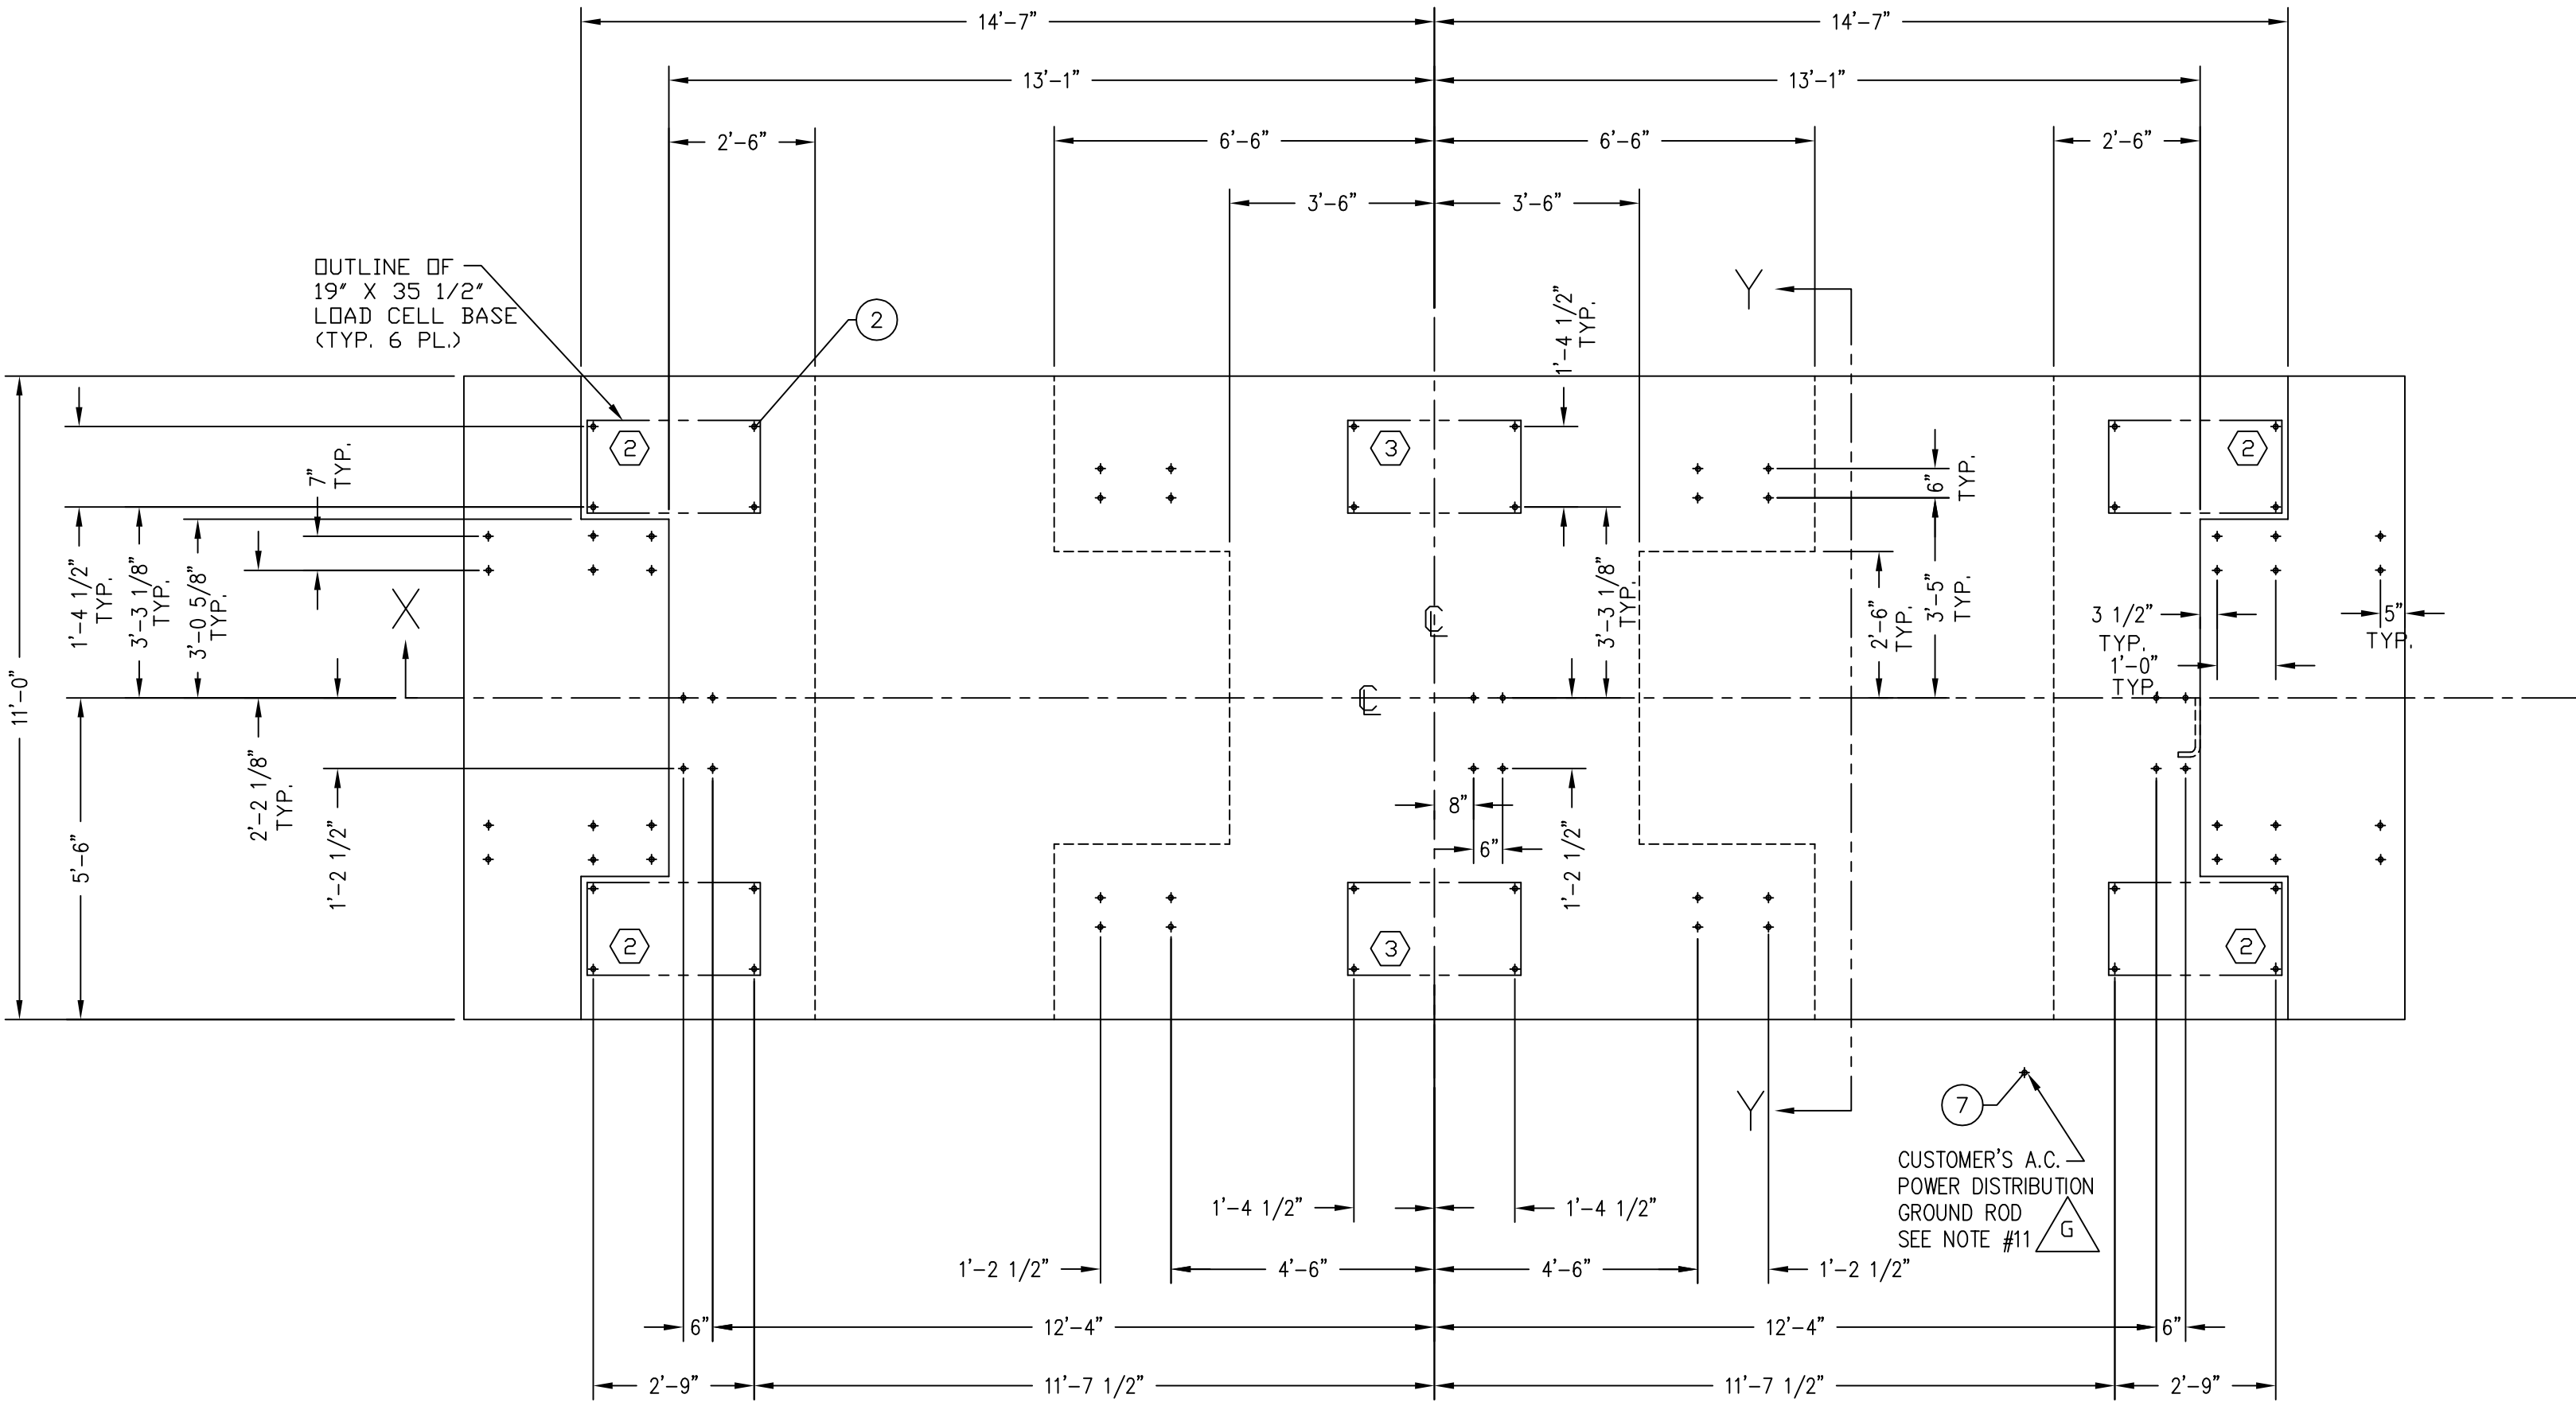



REVISION RECORD			
LTR	DESCRIPTION	DATE	BY
C	REDRAWN ON CAD SYSTEM	8/29/89	JAT
D	ADDED -200 TO MODEL NO. ECO: #13634	10-6 -93	KA
E	ITEM 2 WAS 2 1/2" THREAD LENGTH	10-26 -94	14169 C.H.
F	ITEM 1 WAS 6007-0353 HEX HEAD BOLT, ITEM 2 WAS 6007-0351 HEX HEAD BOLT	6/6/97	15666 RN
G	SHOW GROUND ROD LOCATED OFF THE FOUNDATION TO INDICATE USING THE CUSTOMER'S A.C. POWER DISTRIBUTION GROUND ROD.	3/24/06	23438 JAT/SC
H	ALL ANCHOR BOLTS NOW 15" LONG. DELETE ITEM 1 ANCHOR BOLT 0849-B092-08 ITEM 2 QUANTITY WAS 52	1/17/13	21256 JAT

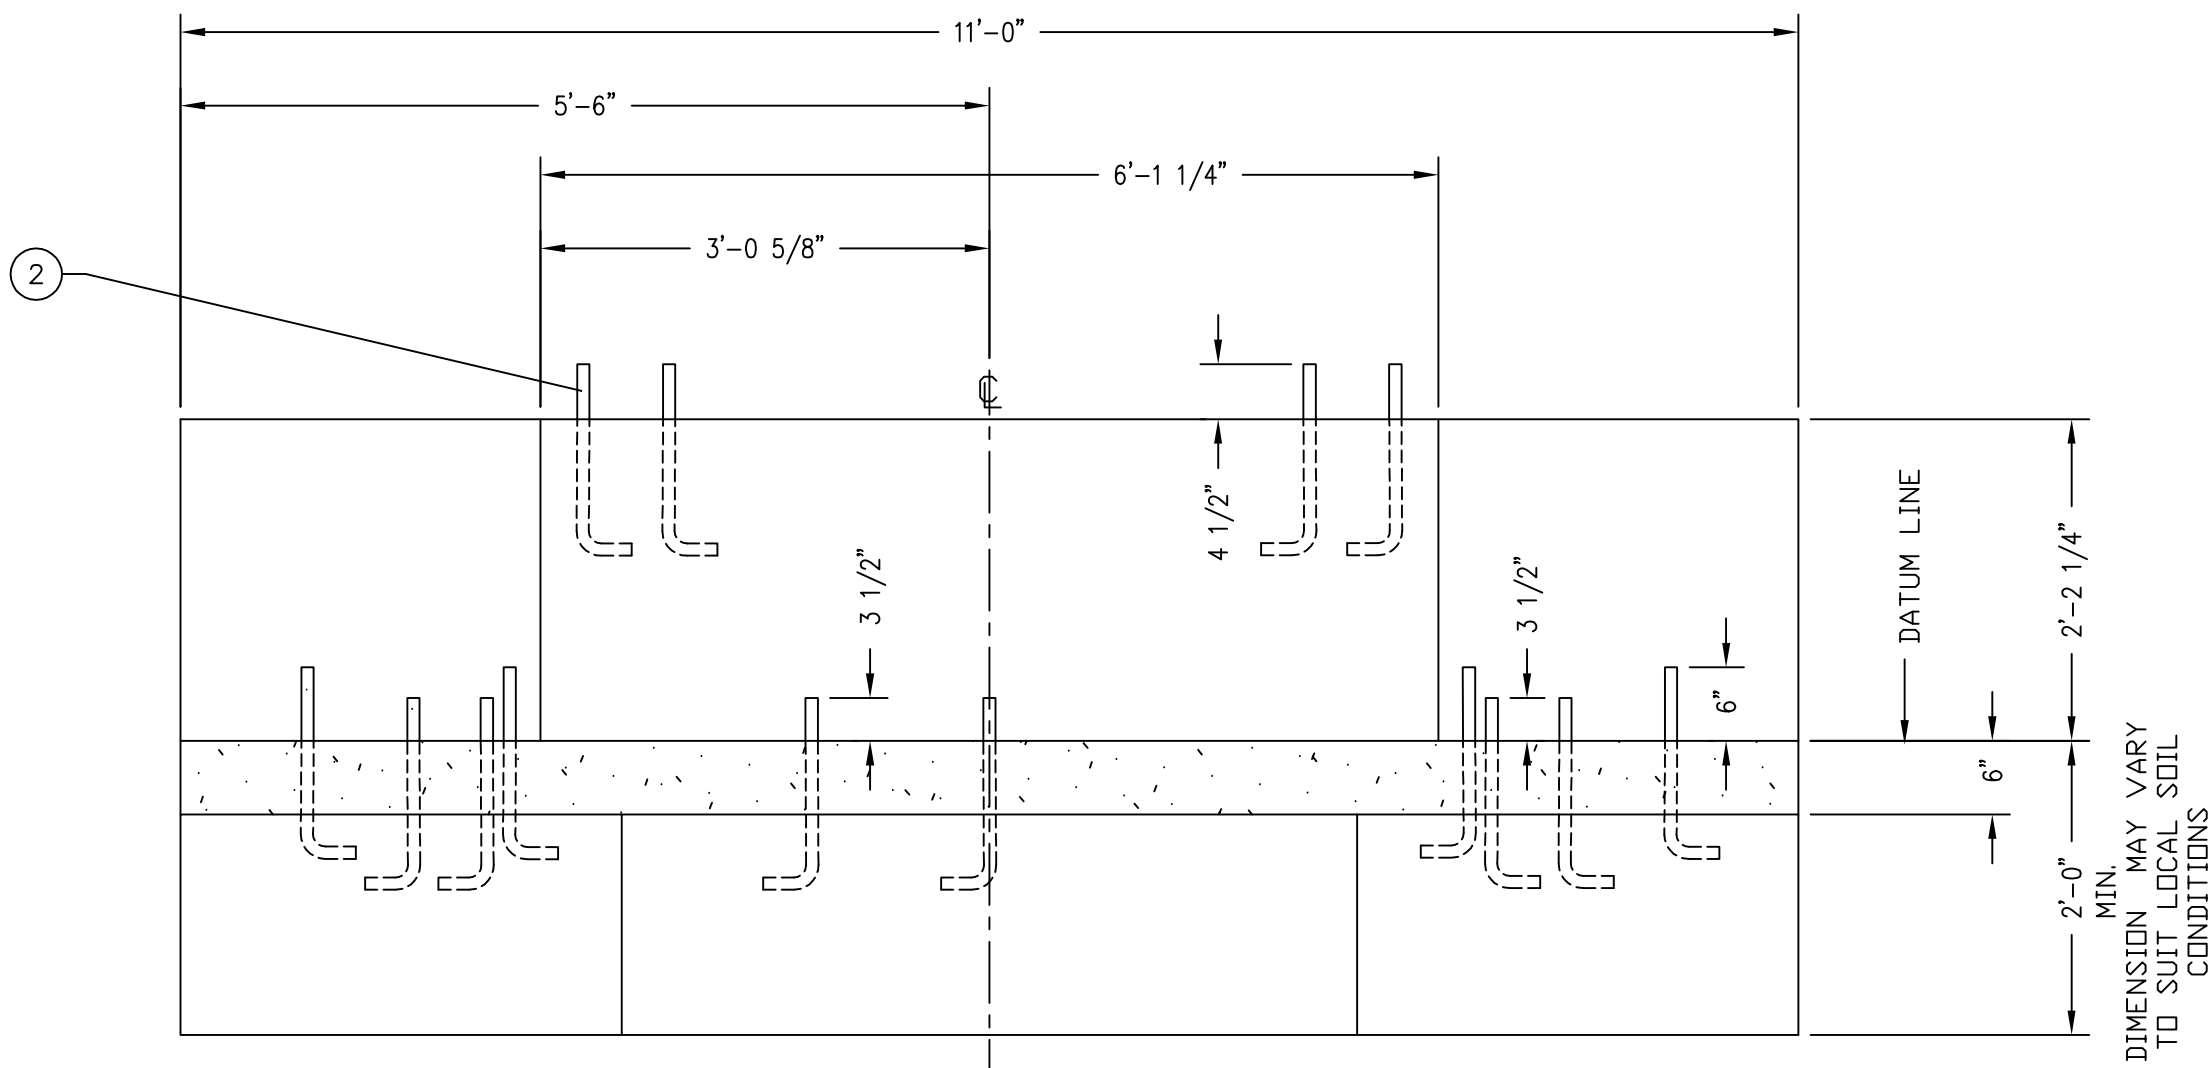

PIER LOADINGS AT COOPER E-80 LOAD RATING	
PIER	LOADING
②	101 KIP
③	104 KIP

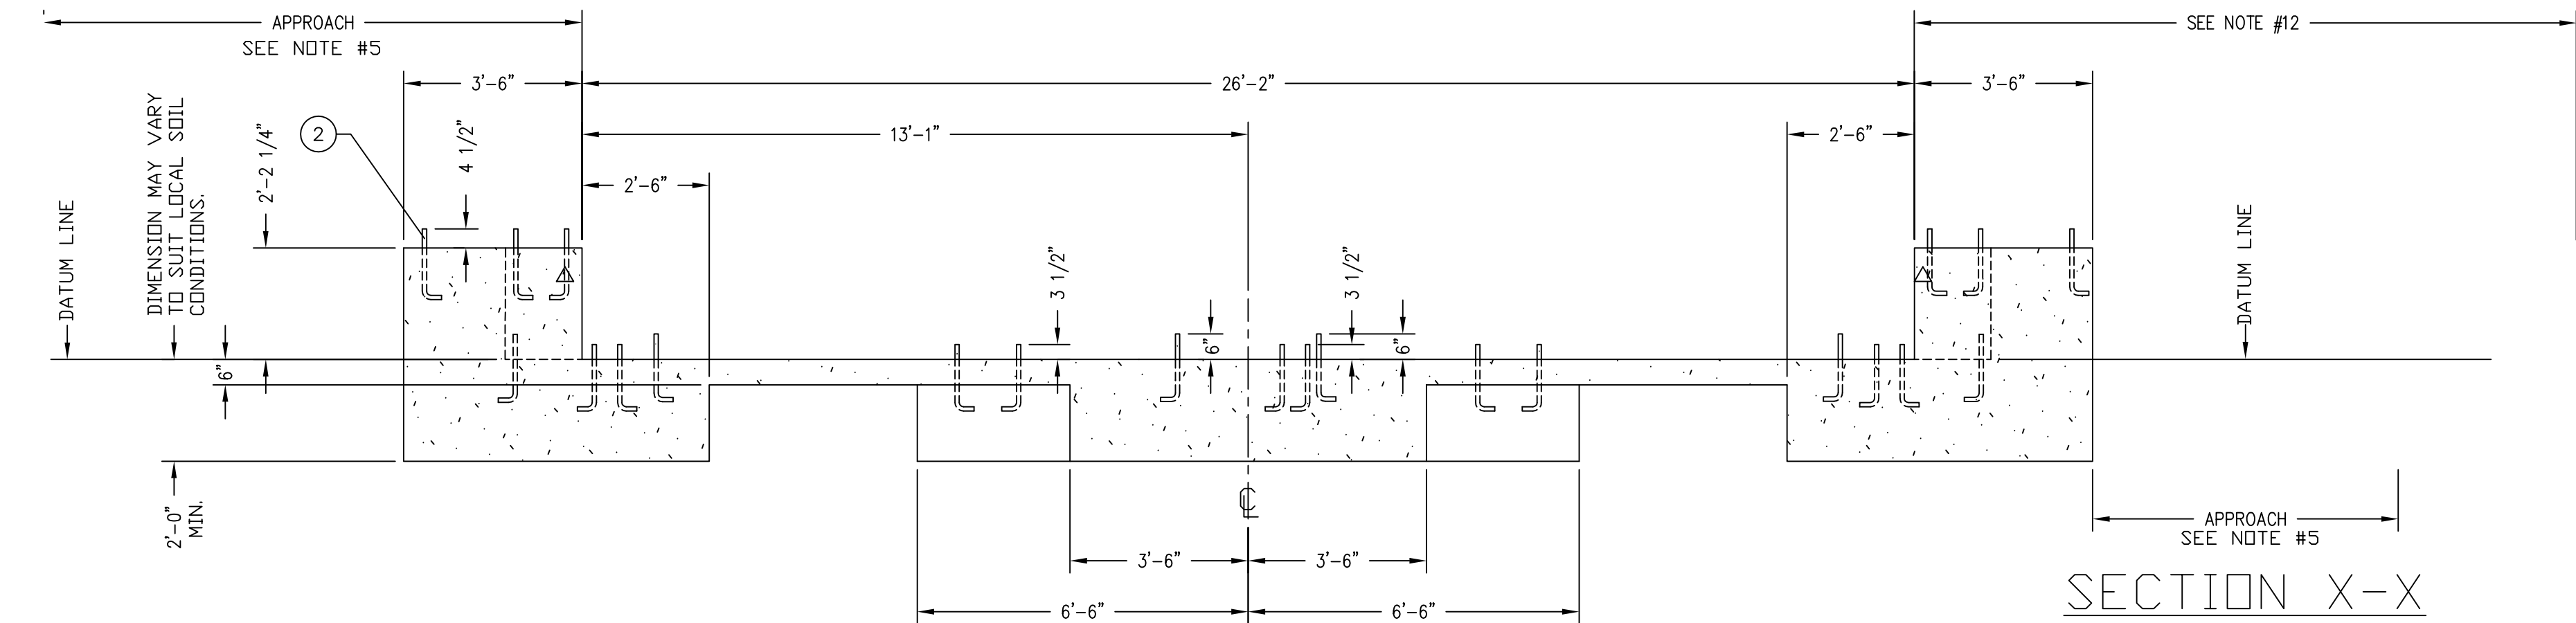

SECTION Y-Y

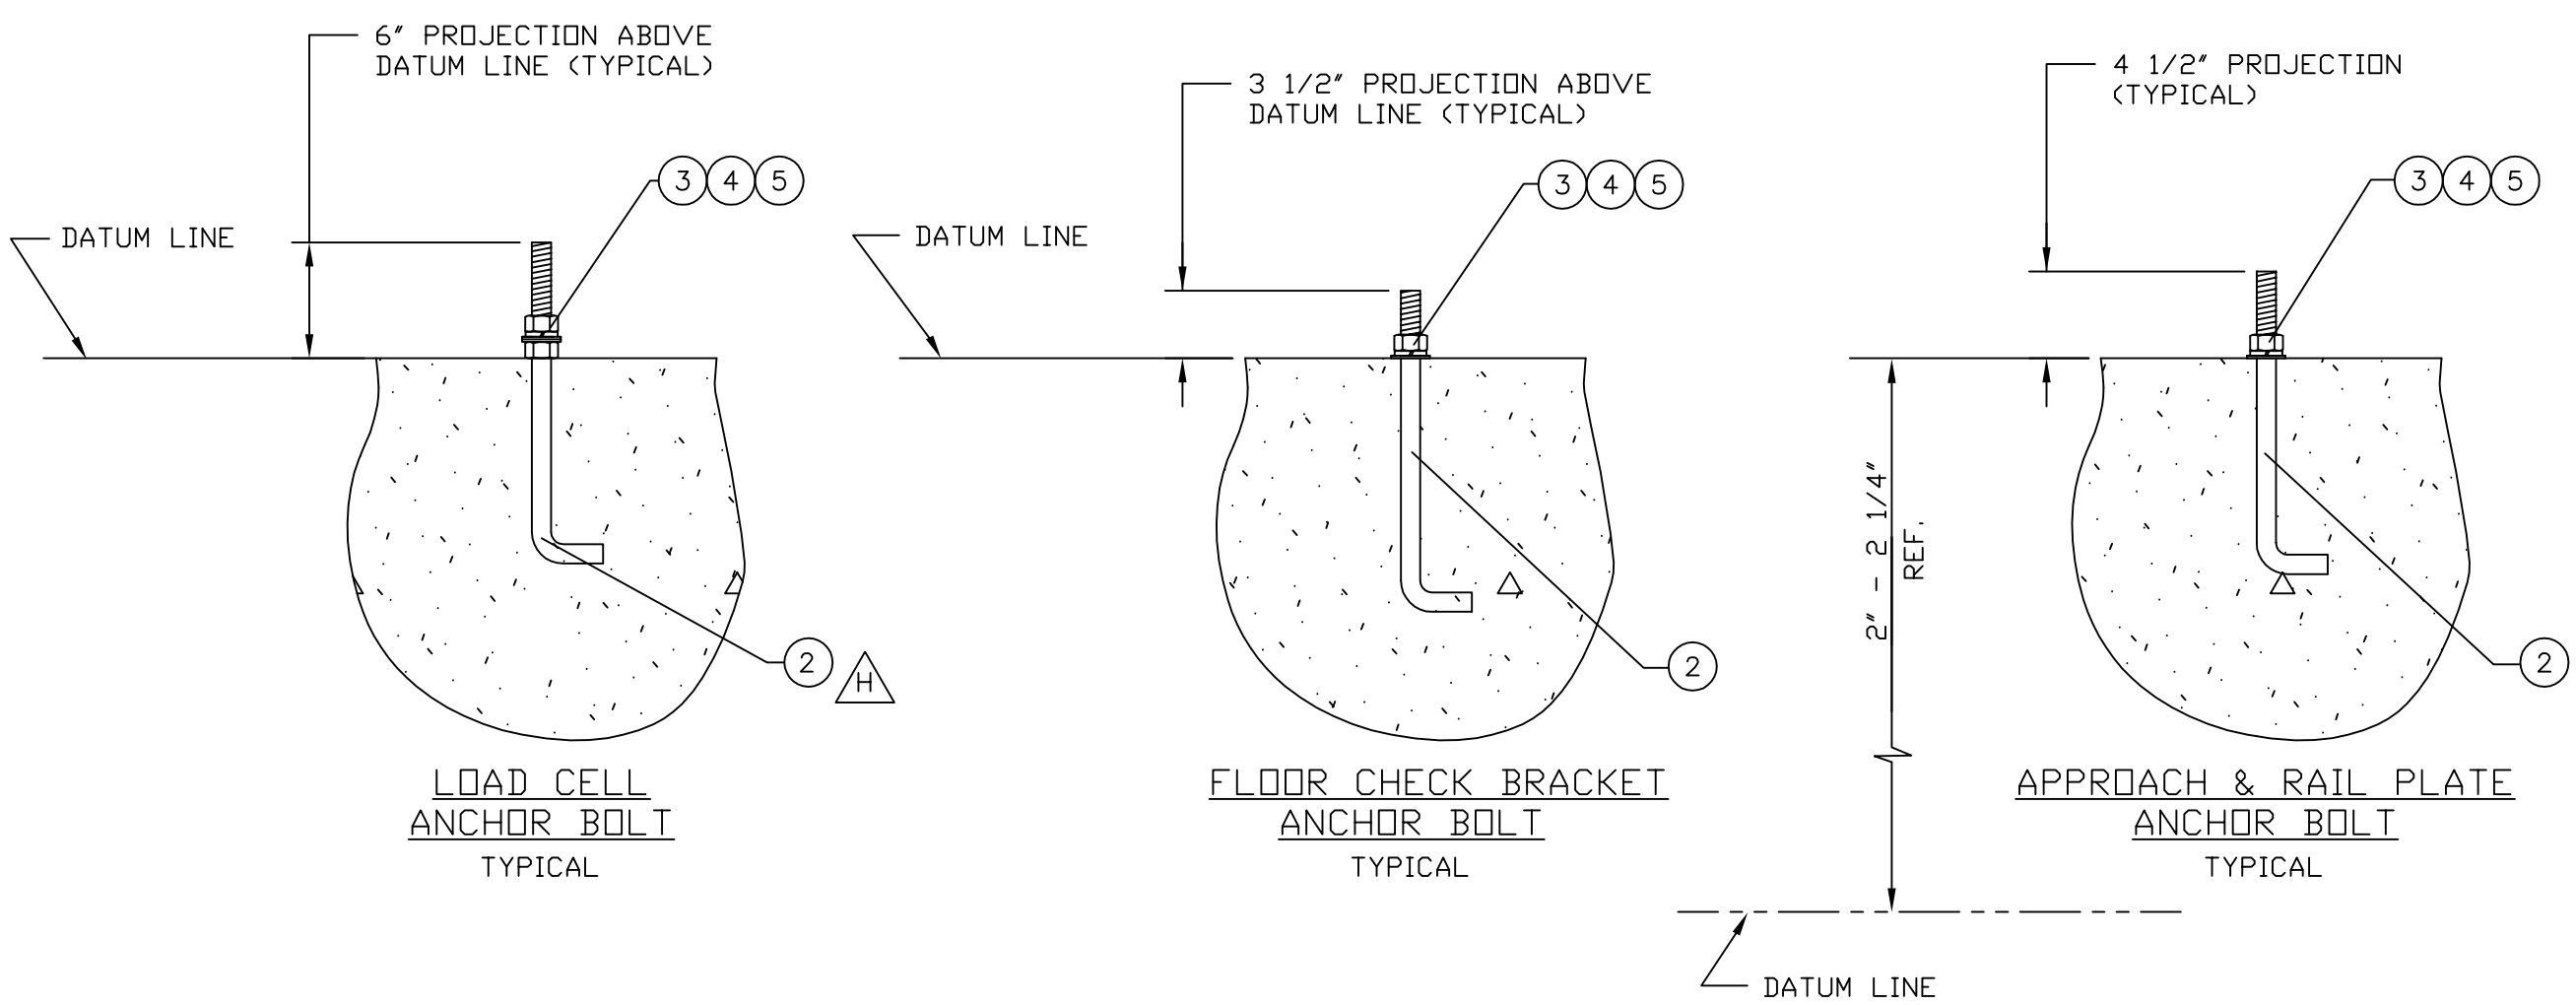

FOR REFERENCE
ONLY!

	1	6	3502-B011-51	GROUNDING KIT		20.6	
	100	5	6024-0027	FLAT WASHER	1"	0.19	
	76	4	6024-0060	LOCK WASHER	1"	0.08	
	100	3	6013-0165	HEX NUT	1"-8 UNC-2B	0.29	
	76	2	0849-B091-08	ANCHOR BOLT	1"-8 UNC-2B X 15" 4 1/2" THREAD LENGTH	3.69	
		1					
QTY.	QTY.	QTY.	ITEM	PART/DWG.	DESCRIPTION	MATERIAL OR	WT.
		-0A	ASSY	NUMBER		SOURCE	EACH
		3551	WT.	PARTS/MATERIAL LIST			
UNLESS OTHERWISE SPECIFIED TOLERANCE ON DIMENSIONS ARE: ANGLES ± 1/2" INTEGERS/FRACTIONS ± 1/16 IN. DECIMALS (X) ± .03 IN. DECIMALS (XX) ± .01 IN. DECIMALS (XXX) ± .005 IN. NOTE: WHOLE NUMBERS MUST BE WRITTEN XX.000 TO INVOKE DECIMAL TOLERANCES.				 CARDINAL DETECTO FULLER WEIGHING SYSTEMS			
TITLE FOUNDATION PLAN: E-80 FULL ELECTRONIC LOW PROFILE RAILWAY TRACK SCALE 26' LONG A.R.E.M.A.							
SCALE				N.T.S.	DO NOT SCALE DRAWING	NEXT ASSEMBLY	0860-D010-0A
DR. JAT				DATE	11/5/86	D	
CH. C WALLS JR.				DATE	6 NOV 86		
MODEL				SHEET	1 OF 1	DWG. NO.	REV.
26-80 LPRA-200						0860-D011-0A	H