

# PORTABLE DIGITAL FLOOR SCALES

## 5852F S E R I E S



## 8852F S E R I E S

- 2 capacities and 4 different weight indicators available
- Constructed entirely of heavy-duty welded steel
- Electrostatic powder paint coating for long life
- 19 in W x 28 in D / 48 cm W x 71 cm D platform
- Battery power available on some models



*5 in/13 cm  
diameter  
rubolene wheels  
and guide  
handles for  
maneuverability*

Model  
5852F-185B



LEGAL FOR TRADE




MEASUREMENT CANADA



# PORTABLE PLATFORM SCALES

## DIGITAL SPEED AND ACCURACY

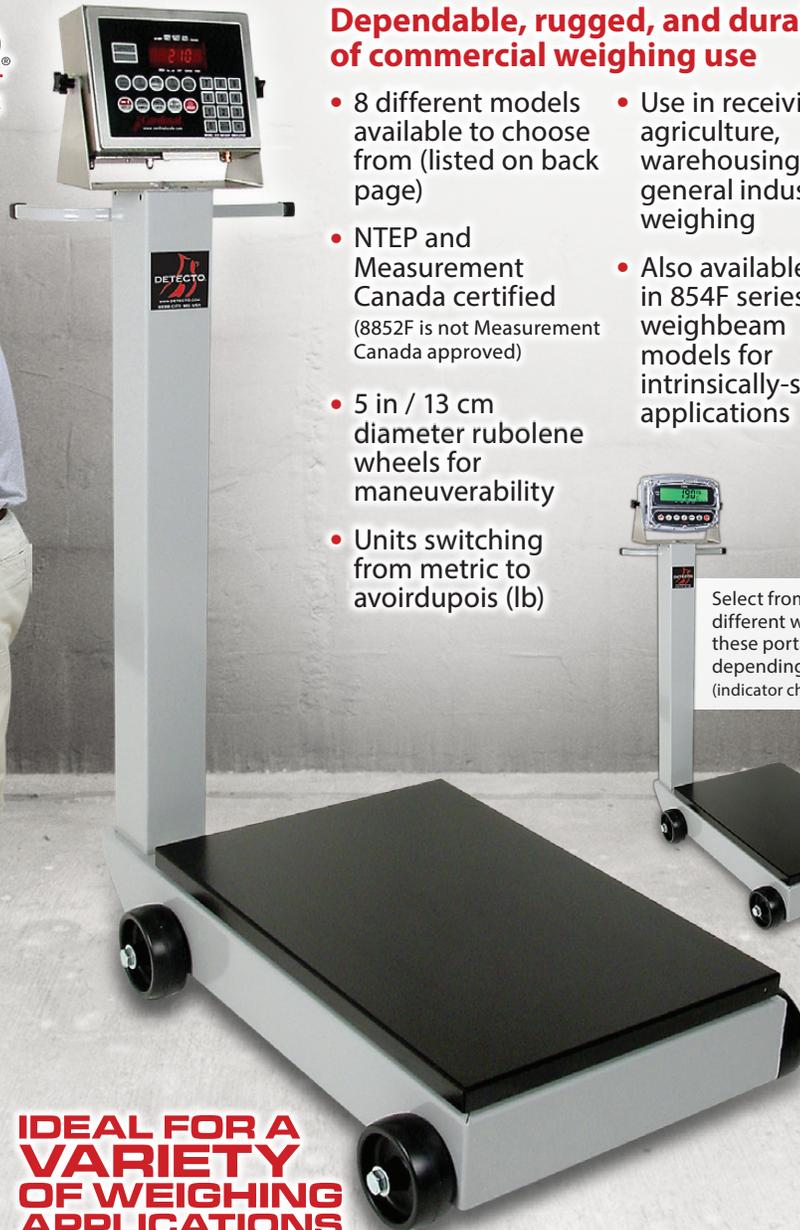

### Dependable, rugged, and durable for years of commercial weighing use

- 8 different models available to choose from (listed on back page)
- NTEP and Measurement Canada certified (8852F is not Measurement Canada approved)
- 5 in / 13 cm diameter rubolene wheels for maneuverability
- Units switching from metric to avoirdupois (lb)
- Use in receiving, agriculture, warehousing, or general industrial weighing
- Also available in 854F series weighbeam models for intrinsically-safe applications



Select from your choice of four different weight indicators on these portable floor scales, depending on your application (indicator chart listed on back page).

These legal-for-trade portable floor scales let the weighing come to you. The 5852F/8852F series is adaptable for versatile use in receiving departments, inventory management, commercial foodservice, in-plant weighing, material handling, bag filling, and general weighing applications. The scales are lightweight and easy to maneuver with their four large rubolene wheels. Switch easily between pounds and kilograms readouts. These scales provide cost-effective digital solutions for commercial utility scale applications. Enjoy digital speed and precision with your choice of weight indicators to suit your specific application's needs.

### IDEAL FOR A VARIETY OF WEIGHING APPLICATIONS

The scales' weight indicators come with either 1-inch-high backlit LCD or 0.6-inch-high red LED, depending on the model selected. The stainless steel indicator mounting bracket lets you adjust the angle of the weight indicator where it's easiest to read. Some models offer ticket printing capabilities when connected to a printer and others offer checkweighing mode. The -185B and -190 models have battery options for complete portability. The -185B models can be powered by six standard, off-the-shelf AA Alkaline or rechargeable Ni-Cad or NiMH batteries. The -210 models have a full alphanumeric keypad allowing manual input of tare weights and IDs.



# LOADED WITH FEATURES FOR PORTABLE WEIGHING APPLICATIONS



Select from your choice of four different Cardinal Scale digital weight indicators, depending on your application.

The column-mounted indicator allows plenty of room to see the weight display over items on the scale platform.



**BRING  
YOUR  
SCALE  
TO THE JOB  
INSTEAD  
OF THE  
JOB TO  
YOUR  
SCALE**



Integrated bubble level for finding the most level surface to provide accurate weighing.



Ideal for farmers markets, agriculture, inventory, warehousing, and general weighing.



5 in/13 cm diameter x 2 in/5 cm depth rubolene wheels with 550-lb load rating per wheel.



Guide handles for steering the platform scale during transport. It's easy to maneuver, even in tight places.



Easily roll the 5852F/8852F scale wherever it's needed in your facility. Bring your scale to the location it's needed!



LEGAL FOR TRADE

MEASUREMENT CANADA

CC 88-106


S.WA-4233

								
<b>MODEL</b>	<b>5852F-185B</b>	<b>8852F-185B</b>	<b>5852F-190</b>	<b>8852F-190</b>	<b>5852F-205</b>	<b>8852F-205</b>	<b>5852F-210</b>	<b>8852F-210</b>
<b>Capacity</b>	500 lb x 0.2 lb / 220 kg x 0.1 kg	1,000 lb x 0.5 lb / 440 kg x 0.2 kg	500 lb x 0.2 lb / 220 kg x 0.1 kg	1,000 lb x 0.5 lb / 440 kg x 0.2 kg	500 lb x 0.2 lb / 220 kg x 0.1 kg	1,000 lb x 0.5 lb / 440 kg x 0.2 kg	500 lb x 0.2 lb / 220 kg x 0.1 kg	1,000 lb x 0.5 lb / 440 kg x 0.2 kg
<b>Platform Dimensions</b>	19 in W x 28 in D / 48 cm W x 71 cm D							
<b>Overall Dimensions</b>	24.1 in W x 35 in D x 48.8 in H / 61.2 cm W x 88.9 cm D x 124 cm H		24.1 in W x 35 in D x 48.8 in H / 61.2 cm W x 88.9 cm D x 124 cm H		24.1 in W x 35 in D x 50.5 in H / 61.2 cm W x 88.9 cm D x 128.3 cm H		24.1 in W x 35 in D x 50.5 in H / 61.2 cm W x 88.9 cm D x 128.3 cm H	
<b>Power</b>	6 AA batteries (not included) or 12 VDC at 1A AC power adapter		100 - 240 VAC (50/60 Hz) at 0.4A max. or optional BP190 battery pack lithium ion 7.2V, 2600 mAh		100-240 VAC (50/60 Hz) at 0.4A max.		100-240 VAC (50/60 Hz) at 0.4A max.	
<b>Platform, Base, and Column</b>	Mild steel with gray and black powder coat paint							
<b>Wheels</b>	5 in / 13 cm diameter x 2 in / 5 cm depth rubolene with 550 lb load rating							
<b>Net Weight</b>	105 lb / 48 kg		105 lb / 48 kg		109 lb / 49 kg		109 lb / 49 kg	
<b>Shipping Wt.</b>	115 lb / 52 kg		115 lb / 52 kg		119 lb / 54 kg		119 lb / 54 kg	
<b>Certifications</b>	NTEP, Measurement Canada	NTEP	NTEP, Measurement Canada	NTEP	NTEP, Measurement Canada	NTEP	NTEP, Measurement Canada	NTEP
<b>UPC Code</b>	809161321807	809161321906	809161191905	809161192001	809161150605	809161150704	809161122800	809161122909



<b>INDICATOR</b>	<b>185B</b>	<b>190</b>	<b>205</b>	<b>210</b>
<b>Power Requirements</b>	6 AA batteries	AC	AC	AC
<b>Battery Power Optional</b>	Battery operation is standard	BP190 (7.2V @ 2600 mAh LI-ION pack)		
<b>Indicator Construction</b>	ABS	Thermoplastic	Stainless steel	Stainless steel
<b>IP Rating</b>	IP66	IP69K	IP66	IP66
<b>USB Interface</b>			●	●
<b>Counting</b>	●			Yes, with accumulator
<b>Checkweigher Mode</b>		●		●
<b>Keypad Tare Entry</b>				●
<b>Pushbutton Tare</b>	●	●	●	●
<b>Date and Time</b>		●		●
<b>RS232 Ports</b>	1	1	4	4
<b>Display Type</b>	1-in-high backlit green LCD	1-in-high LCD with multi-color backlight	0.6-in-high red LED	0.6-in-high red LED
<b>Keypad Type</b>	7-key membrane	7-key color-coded capacitive touch	7-key membrane	22-key color coded membrane
<b>Alphanumeric Keypad</b>				●
<b>Selectable Key Lockout</b>		●	●	●
<b>nControl Compatible</b>		Yes, 1 ticket	Yes, 2 tickets	Yes, 2 tickets
<b>ID Storage</b>				●
<b>Optional Ethernet/Wireless</b>		●	●	●
<b>Remote Inputs</b>		4 inputs	8 inputs	8 inputs
<b>Remote Outputs</b>		3 outputs		8 outputs

DETECTO reserves the right to improve, enhance, or modify features and specifications without prior notice.

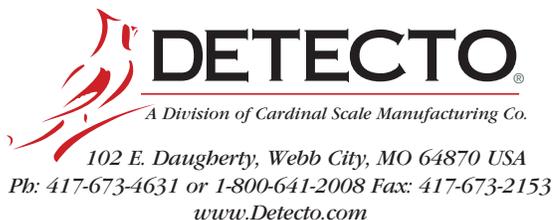

**SOLD BY:**