

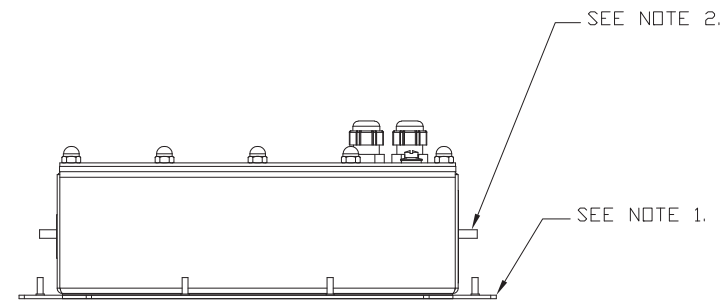


REVISION RECORD			
LTR	DESCRIPTION	DATE	BY
A	RELEASE FOR PRODUCTION	5/8/12	25889 BP

- NOTES:
 1. REPLACE STANDARD BEZEL WELDMENT WITH 2XX-PANEL BEZEL WELDMENT (8200-C331-0A).
 2. REMOVE GIMBAL MOUNT STUDS.
 3. PREPARE MOUNTING AREA AS SHOWN IN MOUNTING DETAIL VIEW.

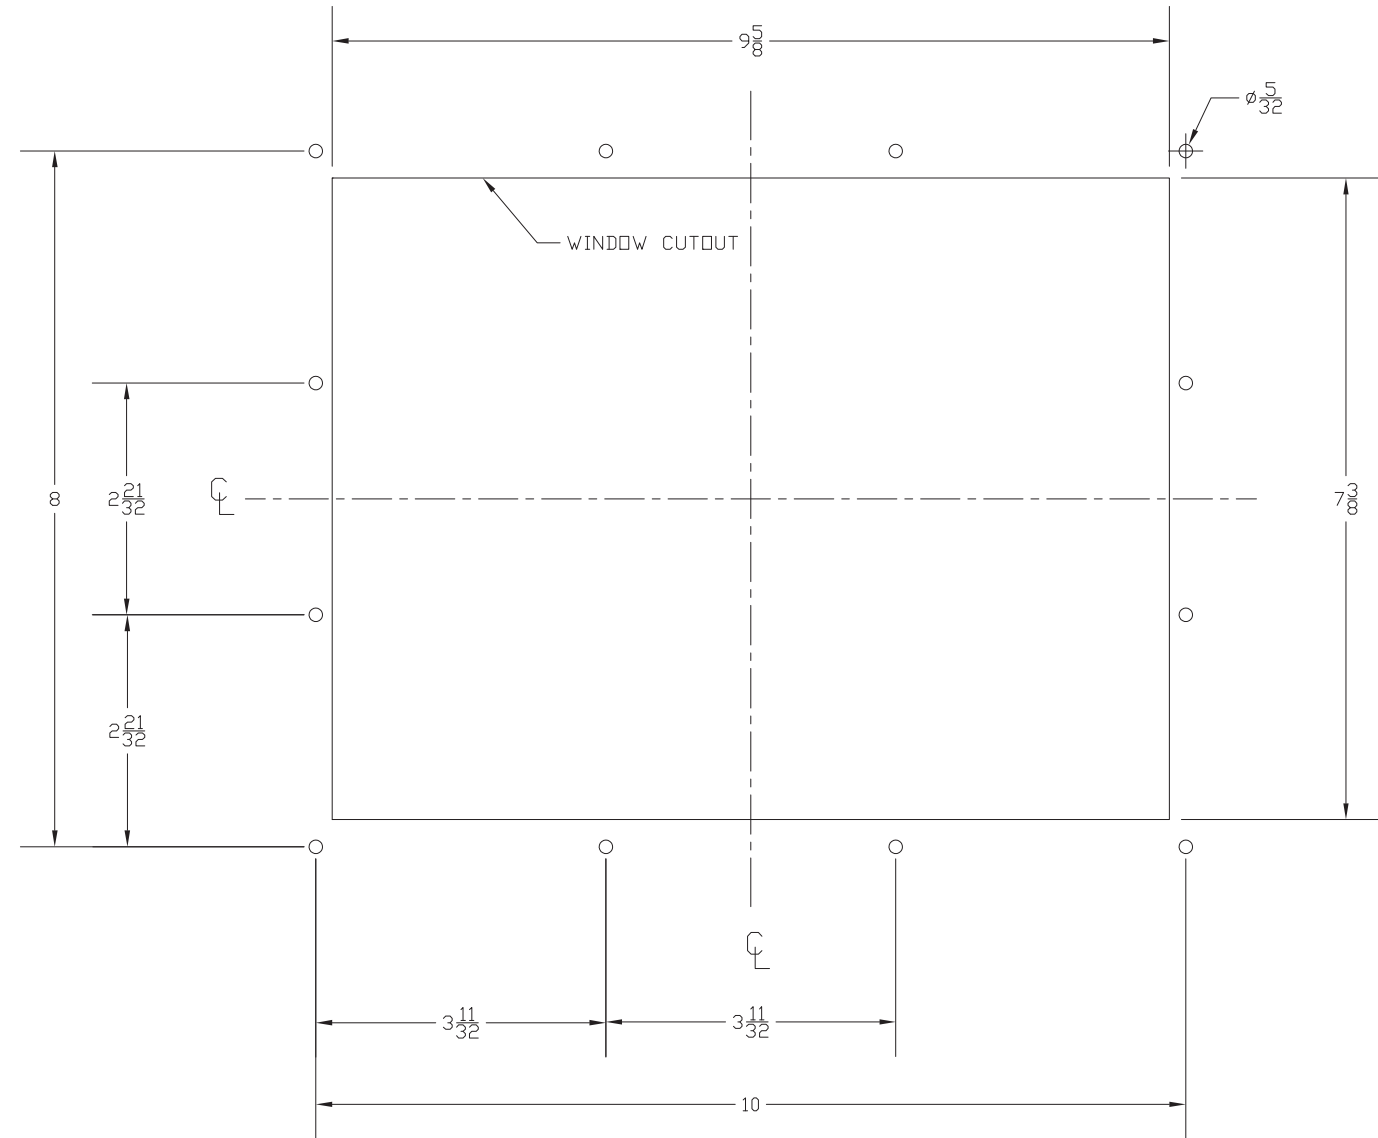

TOP VIEW

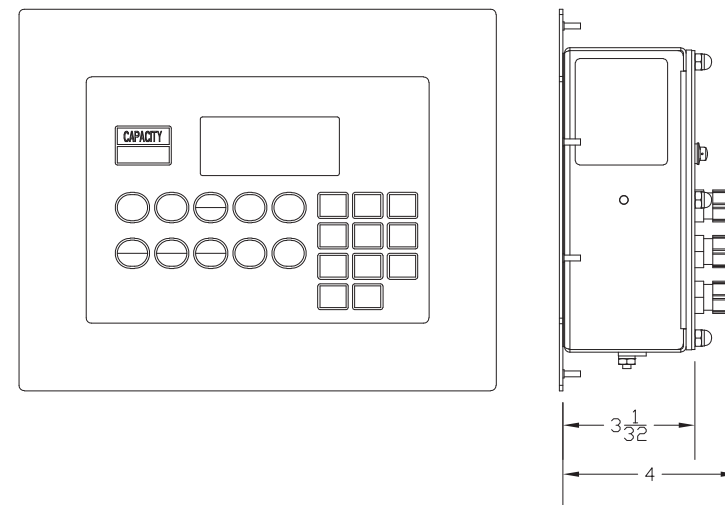

MOUNTING DETAIL

QTY.	QTY.	QTY.	ITEM ASSY	PART/DWG. NUMBER	DESCRIPTION	MATERIAL OR SOURCE	WT. EACH
PARTS/MATERIAL LIST							
<small>UNLESS OTHERWISE SPECIFIED TOLERANCE ON DIMENSIONS ARE: ANGLES ± 1/2° INTEGERS/FRACTIONS ± 1/16 IN. DECIMALS (.X) ± .03 IN. DECIMALS (.XX) ± .01 IN. DECIMALS (.XXX) ± .005 IN. NOTE: WHOLE NUMBERS MUST BE WRITTEN XX.000 TO INVOKE DECIMAL TOLERANCES.</small>							
				<small>CARDINAL DETECTO FULLER WEIGHING SYSTEMS</small>			
TITLE 2XX-PANEL MOUNTING DIMENSIONS							
SCALE		SCALE		DO NOT SCALE DRAWING		NEXT ASSEMBLY	
DR. BMP		DATE 05/08/12		CH.		DATE	
MODEL 2XX-PANEL		SHEET 1 OF 1		DWG. NO. 8200-D162-GS		REV. A	