



- Networkable price computing and label printing scale
- 5,990 PLUs (highest in the industry out of the box)
- 30 lb x 0.01 lb or 60 lb x 0.02 lb capacity
- · Integrated thermal label printer
- Available with or without tower pole display
- 12.8 in W x 8.9 in D stainless steel platform
- Inventory reporting capabilities by PLU
- Alphanumeric display (upper and lower case characters)
- NTEP legal-for-trade certified
- 4 LED display windows and 1 dot matrix text screen



with Scale-to-Scale and **PC Networking Capabilities** 



### **VIVID DISPLAY**

Bright green, easy-to-read LED display readouts ensure visual accuracy for both the operator and the customer. The 5-window display includes 1 dot matrix message display.

- Economical NTEP scale with high-end features
- Communication is easy with built-in Ethernet, RS232 serial, and USB
- · Quick and easy loading of receipt paper or label rolls

DETECTO's versatile DL series price computing scales with integral label printers are designed for highlycustomizable retail use in delis, supermarkets, produce sections, convenience stores, and grocery store meat sections. With 5,990 PLUs and 2-MB memory, the DL series is economical, durable, user-friendly and incorporates all of the essential features needed for legal-for-trade weighing and label printing.





DL1030P/DL1060P **Customer View** 



DL1030/DL1060 **Customer View** 

#### **CUSTOMER VIEW LCDs**

The LED dual display allows for easy viewing for both the operator and the customer providing product and pricing information.

### **Function Keys**

- · Equipped with 5990 PLU's
- Pole Display: 103 keys including 63 speed kéys; Rear Display: 78 keys - including 40 speed keys
- Fast program key to modify frequently-used settings such as:
  - · Label, date, and time formats
  - Label/paper type
  - Communication parameters

### **Security**

Programming password protected optional


### **PLU – Direct Price Editing**

· User selectable fields



**DETECTO's DL series** prints labels in a wide variety of styles, sizes, and printed information: bar codes, QR codes, safe handling images, ingredients, weights, date formats with month/day or time, nutritional facts, discounts, logos, and more.

50 label types available via included software with the DL series.

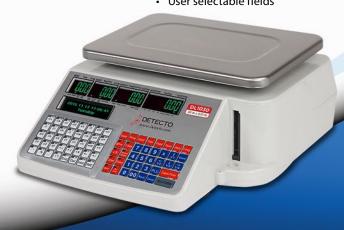





# INTERNAL EASY-ACCESS PRINTER

- Space-saving compact design
- Gap and continuous thermal paper
- · Fully customizable labels or receipts
  - Stores up to 15 black-and-white bitmap images to customize your labels, including QR codes and store logos
- Scale is preprogrammed to use DETECTO stock labels
- Printed reports for different time periods and classifications
- Bar code flexibility: 9 kinds of default bar code settings
- · Crisp, clear printouts
- Capable of printing ingredients, nutritional facts (USA and Canada ready), safe handling instructions, storage instructions, allergy warnings and logos, cooking instructions and recipes


# INCLUDES PC SOFTWARE CD

Flexible and easy-to-use PC software with drag-and-drop graphics set-up:

- Over 50 label types are available to set up via included software
- Simplified exporting and importing PLUs to and from Excel
- · Full control over PLU data
- Easy firmware USB upgrades using USB drive (flash memory) with no need to break the NTEP inspection seal
- Full back up of all specifications (duplicates a scale's setup in minutes)

4 2 of 14 > 14 - Add New X Delete (2) Clone					- 🔝 🤘 Elimport Export All 🐛 This File 🎡 Ethernet		
Nation		io Nane	U.Price	CHE	Best Mr Pet Me Test	His Sine His Decourt His	
304	13	Apples	0.09	0.00			
		From 6			Number	1402	101
100	15	No.	0.55	0.00	ImportExport	E5:	
104	[2]	Badibenes	4.16	0.00	Name	Pean	
105	B	Camora	0.50	0.00			
106	10	Baranes	0.50	0.00	Tem Code:	456	101
201	- 83	Rheye	22.19	0.00		-44	30.
202	0	Pulled Folk	6.92	0.00	Index Barcode:		
200	10	Ground Beef	3.95	0.00	Affiliated Class:	5 - Default	
204	E3	Ground Fork	3.49	0.00	Unit	1-Weight	
205	E3	Bacon	6.38	0.00	URice	1.29	101
206	(2)	Am Road	2.59	0.00	100000		
301	- 65	Patazone	0.56	0.00	Cost	0.00	(0)
302	100	French Bread	2.20	0.00	Tave	0.000	(4)

Each PLU can easily be created, viewed, and modified within the DLX50 utility. PLUs created at the scale can be imported to the utility and viewed/modified as well.




PLU and setup information can be imported and exported via RS232, USB, or Ethernet at the click of a button.



Custom bitmap graphics can be loaded onto the DL Series scales for use in label printing.

DETECTO's DL retail scale is as intuitive to set up as it is to use, simplifying both management and employees tasks. The scale comes with versatile PC setup software and networking capabilities allowing you to make updates to multiple scales for your facility. Customized reporting features provide you with all the information you require to make your accurate business decisions for your store.

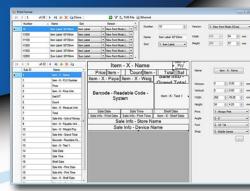

Labels have fully customizable layouts and font sizes by use of this user-friendly graphic interface.



This graphic display allows PLUs to be quickly assigned to quick keys. This page can then be printed and used as the quick key overlay for the DL Series scale.



The DL series scales' USB drive allows you to download PLUs, shortcut keys, and other setup information, including custom labels, to the scale. Upload these same items from the scale to the USB drive which can be viewed in the included utility software.

### **Extensive Connectivity Available**

The DL Series comes with four communication ports to accommodate the interface requirements of various integration communication setups.



**USB** 





Cash Drawer









# Includes:

- Scale (and tower display on models DL1030P/DL1060P)
- · Operation manual
- DL series set-up utility CD for PC software
- Four (4) overlays for PLU shortcuts
- AC power cord



NALC	ONFE
(30)	
/ <u>₹</u> /A	ILD.
lol	iry .
2	
1	<b>L</b> 1/9
CHISA	UD ME

Models	DL1030	DL1060	DL1030P	DL1060P					
Tower Pole Display			•	•					
Capacity	30 lb X .01 lb	60 lb X .02 lb	30 lb X .01 lb	60 lb X .02 lb					
Display	Front – 4 seven-segment LED screens and 1 dot matrix text screen (with upper and lower case characters); Back: 4 seven-segment LED screens Back: 4 seven-segment LED screens Back: 4 seven-segment LED screens and text screen (with upper and lower case text screen (with upper and lower case			d lower case characters); O screens and 1 dot matrix					
Display Digits	4 digit Tare, 6 digit Unit Price, 5 digit Weight, 6 digit Total Price								
Max PLU	5,990 PLU's								
Total Keys	8	9	103						
Speed Keys	40 (doubles to 80 whethe quick key for a secon		63 (doubles to 126 when pressing SHIFT + the quick key for a second PLU from the same key)						
Measurement Type	Load Cell								
Printer	Thermal Print								
Label Size	Width: 40 mm – 60 mm; Length: 128 mm								
Interface	USB, Ethernet, RS232 serial, and cash drawer port								
Power Source	120VAC, 50-60 Hz (AC power cord included)								
Operating Temperature		32° F - 104° F	7/0° C - 40° C						
Operating Humidity	15% - 85% relative humidity non-condensing								
Construction									
Platform Size	12.8 in W X 8.9 in D / 32.5 cm W X 22.6 cm D								
Overall Dimensions	Overall Dimensions         13.8 in W x 15.5 in           35.1 cm W X 39.4 cm		13.8 in W x 17.4 in D x 18.1 in H / 35.1 cm W X 44.2 cm D X 46 cm H						
Minimum Weight	0.2 lb per NTEP								
Certification		NTEP legal for	trade certified						
Product Net Weight	13.4 lb	/ 6.1 kg	15.1 lb / 6.8 kg						
Shipping Weight	15.4 lb / 7 kg		17 lb / 7.7 kg						
UPC Codes	809161199406	809161199604	809161199505	809161199703					

DETECTO reserves the right to improve, enhance, or modify features and specifications without prior notice.





code on your smartphone for more product info.

203 E. Daugherty, Webb City, MO 64870 USA Ph: 417-673-4631 or 1-800-641-2008 Fax: 417-673-2153

Mobile: m.detecto.com

## **SOLD BY:**