


EH Series Junction Box Wiring Diagram



CARDINAL®

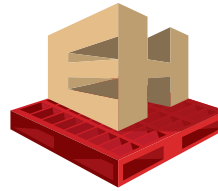

ECHELON

EH-544 / EH-1044
Economy Floor Scale

Load Cell to J- Box (1-4)




- + EXE Red
- + SIG Green
- SHIELD May be any color
- SIG White
- EXE Black


J-Box Connector Out



- + EXE Red
- + SIG Green
- SHIELD May be any color
- SIG White
- EXE Black

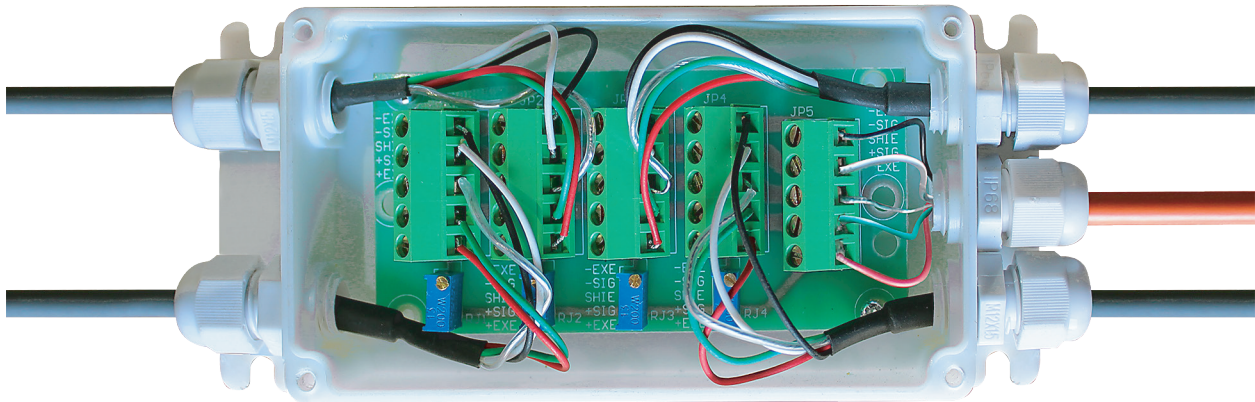

Male 9 Pin Connector Scale to Cardinal Indicator

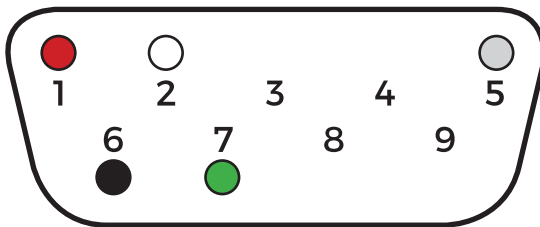

- 1 Red + Excitation
- 2 White - Signal
- 3
- 4
- 5 May be any color Shield
- 6 Black - Excitation
- 7 Green + Signal
- 8
- 9