



CARDINAL®



HARVESTER®

PRECAST CONCRETE SCALE




LSC SERIES LIVESTOCK SCALES



- Ideal For Stockyards, Sale Barns and Private Farms
- Up to 30 Ton Full Scale Capacity and 52.5 ft. Long x 10 ft. Wide Sizes
- Factory Assembled Concrete Weighbridge and Steel Livestock Pens

The rancher's choice for weighing

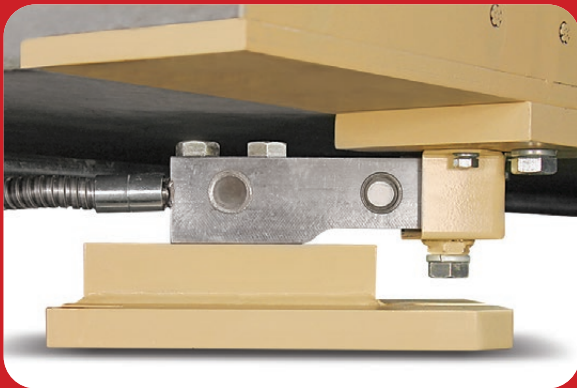

STAINLESS STEEL LOAD CELLS

The LSC series utilizes Cardinal's 20,000-lb model SB stainless steel shear beam load cells which feature superior welded waterproof seals and protection against caustic, corrosive environments.



STAINLESS STEEL JUNCTION BOX

The Harvester's stainless steel junction box is mounted on the side of the steel cattle pen for easy access.



OPTIONAL DIGITAL WEIGHT INDICATORS

Cardinal offers a wide variety of weight indicators to use with your Harvester®, such as the 212GX.




Quality construction and durability for weighing sheep, goats, cattle, hogs, horses, and more.



66.5-in-high gates and cattle pens

Four hinge points on each gate for heavy-duty stability

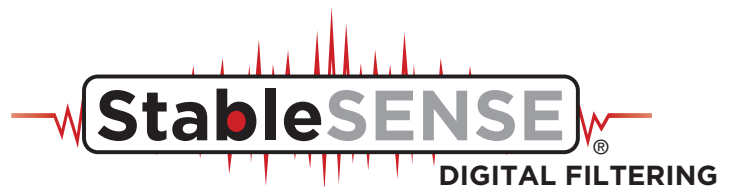

Cardinal Scale's weight indicators feature StableSENSE® digital filtering that filters the weight signal to produce a stable weight display in spite of motion on the scale platform due to animal movement.

livestock.



Factory-poured precast concrete scales



- **Steel Livestock Pen and Gates Included**
- **High Tensile Strength Concrete Decks**
- **Low-Profile Design - Easy Load Cell Access**
- **Stainless Steel Load Cells**
- **Modular Construction allows Multiple Platform Lengths**
- **NTEP Legal for Commercial Trade**
- **Patent-Pending Concrete Deck Design**
- **Single Source Convenience for Indicators, Remote Displays, and Load Cells**





HARVESTER®

PRECAST CONCRETE SCALE

LIVESTOCK SCALES

Cardinal Scale's Harvester® series factory-poured concrete deck livestock scale includes load cell stands, 20,000-lb stainless steel shear beam load cells, stainless steel junction box, livestock pen, gates, and curb angle. A variety of peripheral equipment is available.

Fully-electronic, low-profile NTEP weighing




Optional Horse Risers
Raises top bar 30 inches from 81-in clearance up to 111-in for horses.



OPTIONS
Optional Dual Latch
Dual latch offers stronger holding power for full cattle loads and features rope pulling bar that engages both latches.

Model Number	Platform Size	Overall Capacity	Increments	Section Capacity	Number of Sections	Shipping Weight
1217-LSC	17.5 ft L x 10 ft W	12.5 tons	5 lb	12.5 tons	2	16,500 lb
2535-LSC	35 ft L x 10 ft W	25 tons	5 lb	12.5 tons	3	32,750 lb
3052-LSC	52.5 ft L x 10 ft W	30 tons	10 lb	12.5 tons	4	49,250 lb

Also available from Cardinal Scale Manufacturing....

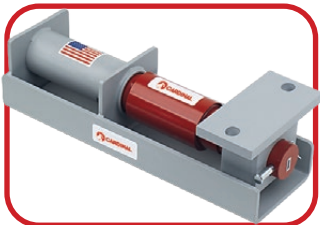

AGBAR Load Cell Assemblies



200 Series Weight Indicators



Large Readout Remote Displays



Harvester® Precast Concrete Truck Scales

Cardinal Scale reserves the right to improve, enhance or modify features and specifications without prior notice. All registered trademarks are the property of their respective owners.



SOLD BY:



102 East Daugherty St., Webb City, MO 64870 USA
Toll-Free: (800) 441-4237 E-mail: cardinal@cardet.com
www.CardinalScale.com

