
## **Load Bars**

LB series



- Cables Included No Summing Box Needed
- Mild Steel Construction
- Stainless Steel Load Cells

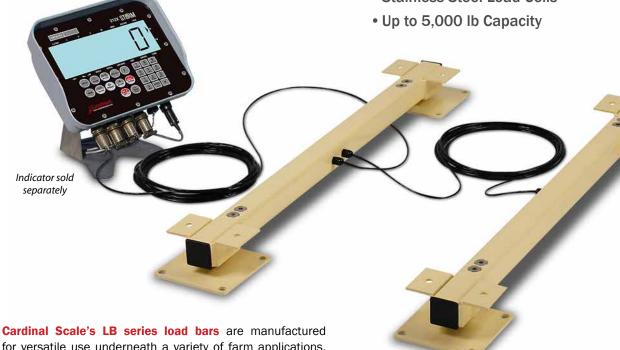

Cardinal Scale's LB series load bars are manufactured for versatile use underneath a variety of farm applications, including alleyway platforms, cages, squeeze chutes, bins, hoppers, and other types. They feature rugged structural steel tube frame construction with extra-wide foot plates on each end and receiver tabs on top and four model TB 2500-lb stainless steel load cells with adjustable support feet. Requires firm level surface and a rigid crate or platform. No summing box required. Accurate to within +/- 1%. Indicator sold separately. Included cables: 12 ft. between load bars and 20 ft for indicator.



	REGISTERED 9001

Model	Capacity	Length (inches)
2.524-LB	2,500 lb	24
524-LB	5,000 lb	24
2.536-LB	2,500 lb	36
536-LB	5,000 lb	36
548-LB	5,000 lb	48

Custom sizes available, please consult factory.

**Your Authorized Cardinal Dealer:** 



203 East Daugherty Street • P.O. Box 151 • Webb City, Missouri 64870 Toll-Free: (800) 441-4237 • Fax: (417) 673-5001 • cardinal@cardet.com