
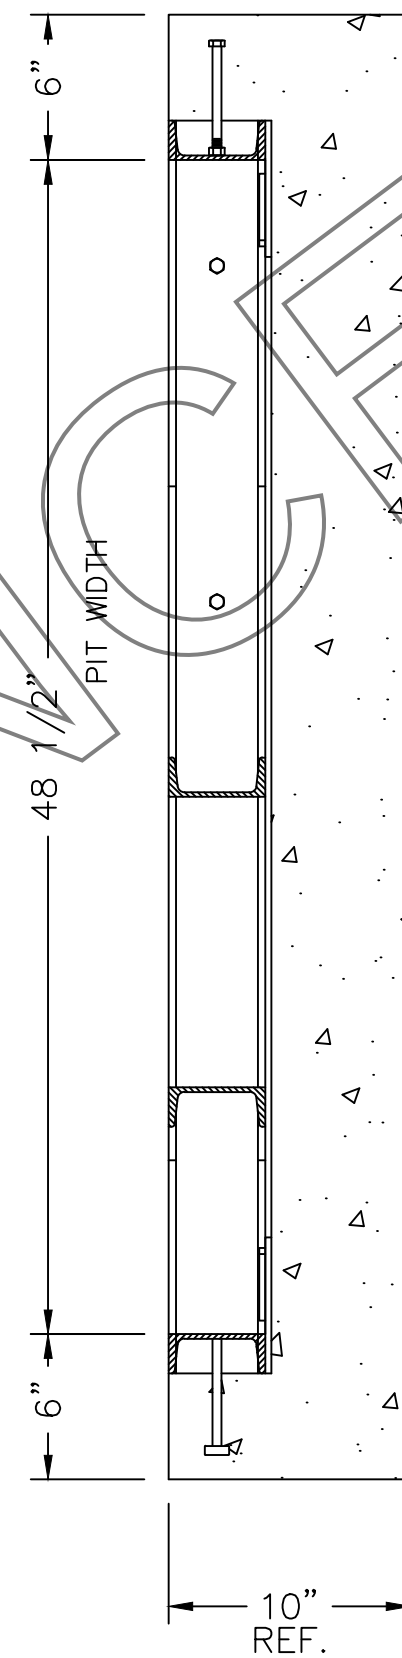



REVISION RECORD			
LTR	DESCRIPTION	DATE	BY
A	RELEASED FOR PRODUCTION	6/26/08	GPL 24385
B	ADDED ITEM 2, NOTE 5	4/23/14	26830 GPL

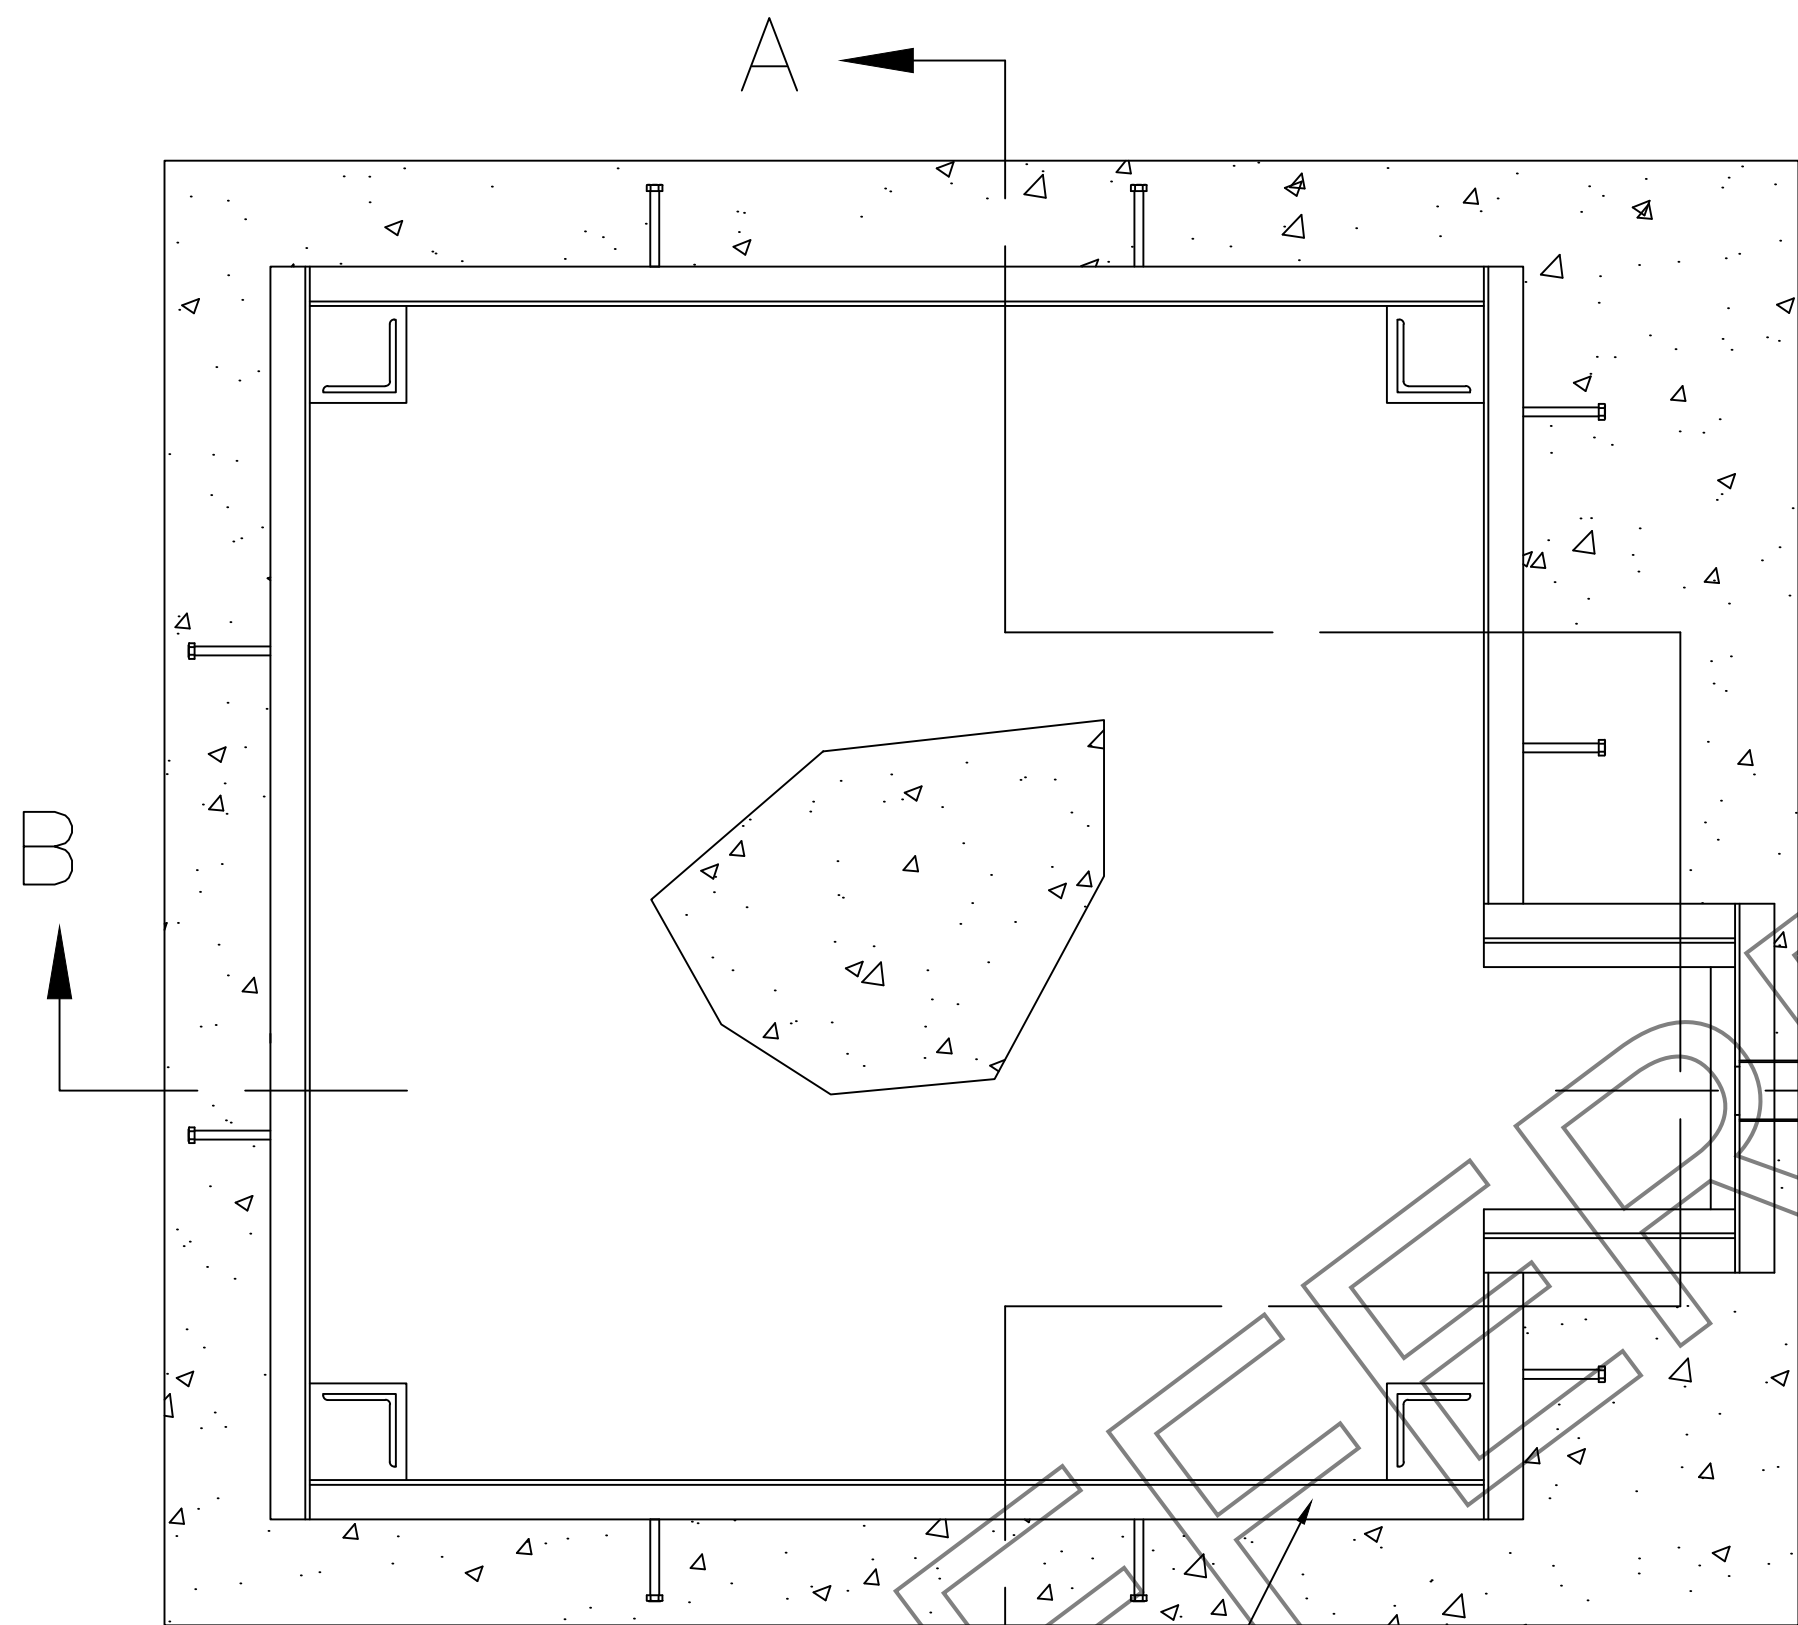

SECTION A-A

GENERAL NOTES:

1. PIT FLOOR MUST BE SMOOTH, LEVEL, AND TRUE TO PLANE.
2. PROVIDE DRAIN FOR PIT IF NEEDED.
3. ALL PIT STEEL FURNISHED BY CUSTOMER UNLESS OTHERWISE SPECIFIED ON SALES ORDER.
4. TRANSMISSION CABLE FROM LOAD CELL TO INDICATOR MUST BE IN 2 1/2" MIN. SIZE STEEL CONDUIT AT LEAST 24" FROM CLOSEST ELECTRICAL LINE. THEY MAY CROSS AT 90° ONLY.
5. ITEM 2 TO BE SCREWED IN SNUGLY BEFORE POURING CONCRETE.

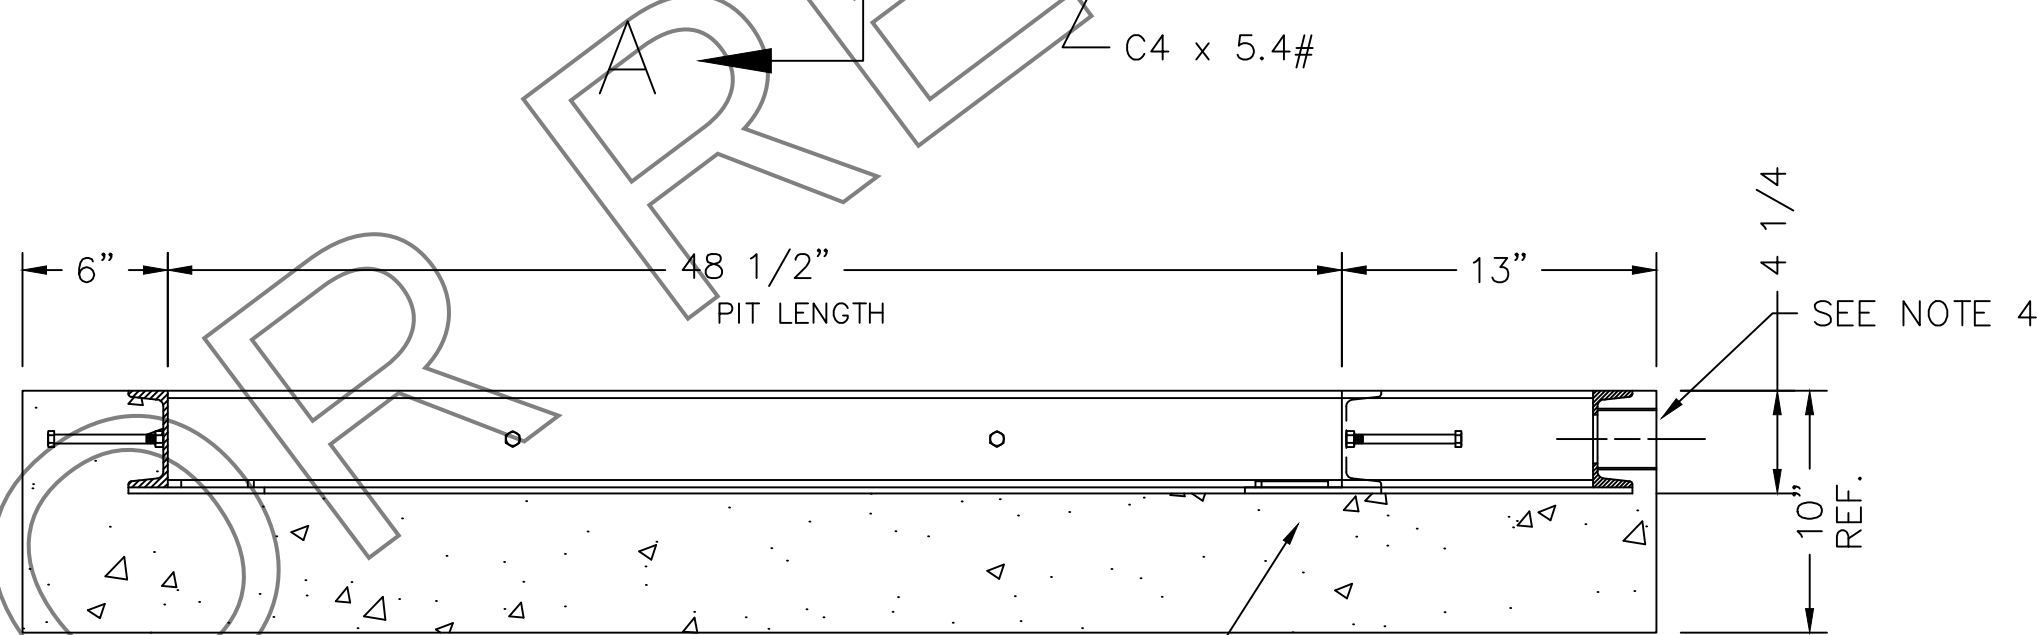

SECTION B-B

VIBRATE CONCRETE TO PROVIDE FIRM SUPPORT WITHOUT ANY VOIDS IN THE CONCRETE UNDER THE LOAD CELL SUPPORT PADS.

			2	6007-0071	BLT HEX HD	3/8-16 x 4 1/2	0.0
			1	1932-C120-0A	CHANNEL ASS'Y	SEE NOTE 3	121.7
QTY.	QTY.	QTY.	ITEM	PART/DWG. NUMBER	DESCRIPTION	MATERIAL OR SOURCE	WT. EACH
			ASSY				
			WT.	PARTS/MATERIAL LIST			
UNLESS OTHERWISE SPECIFIED TOLERANCE ON DIMENSIONS ARE:				 CARDINAL DETECTO FULLER WEIGHING SYSTEMS			
ANGLES ± 1/2°							
INTEGERS/FRACTIONS ± 1/16 IN.				PIT PLAN			
DECIMALS (.X) ± .03 IN.							
DECIMALS (.XX) ± .01 IN.							
DECIMALS (.XXX) ± .005 IN.				SCALE NTS DO NOT SCALE DRAWING NEXT ASSEMBLY			
NOTE: WHOLE NUMBERS MUST BE WRITTEN XX.000 TO INVOKE DECIMAL TOLERANCES.							
THIS DRAWING IS THE PROPERTY OF THE CARDINAL SCALE MFG. CO. AND SHALL NOT BE USED NOR REPRODUCED EITHER WHOLLY OR IN PART EXCEPT WITH WRITTEN AUTHORIZATION. ALL RIGHTS OF DESIGN OR INVENTION ARE RESERVED.							
DR. GPL				DATE 6/26/08			
CH.				DATE			
MODEL FHN-544				SHEET 1 OF 1		DWG. NO. 1932-C119-0A	
						REV. B	