



REVISION RECORD			
LTR	DESCRIPTION	DATE	BY
A	RELEASED FOR PRODUCTION	6/14/17	28252 CM

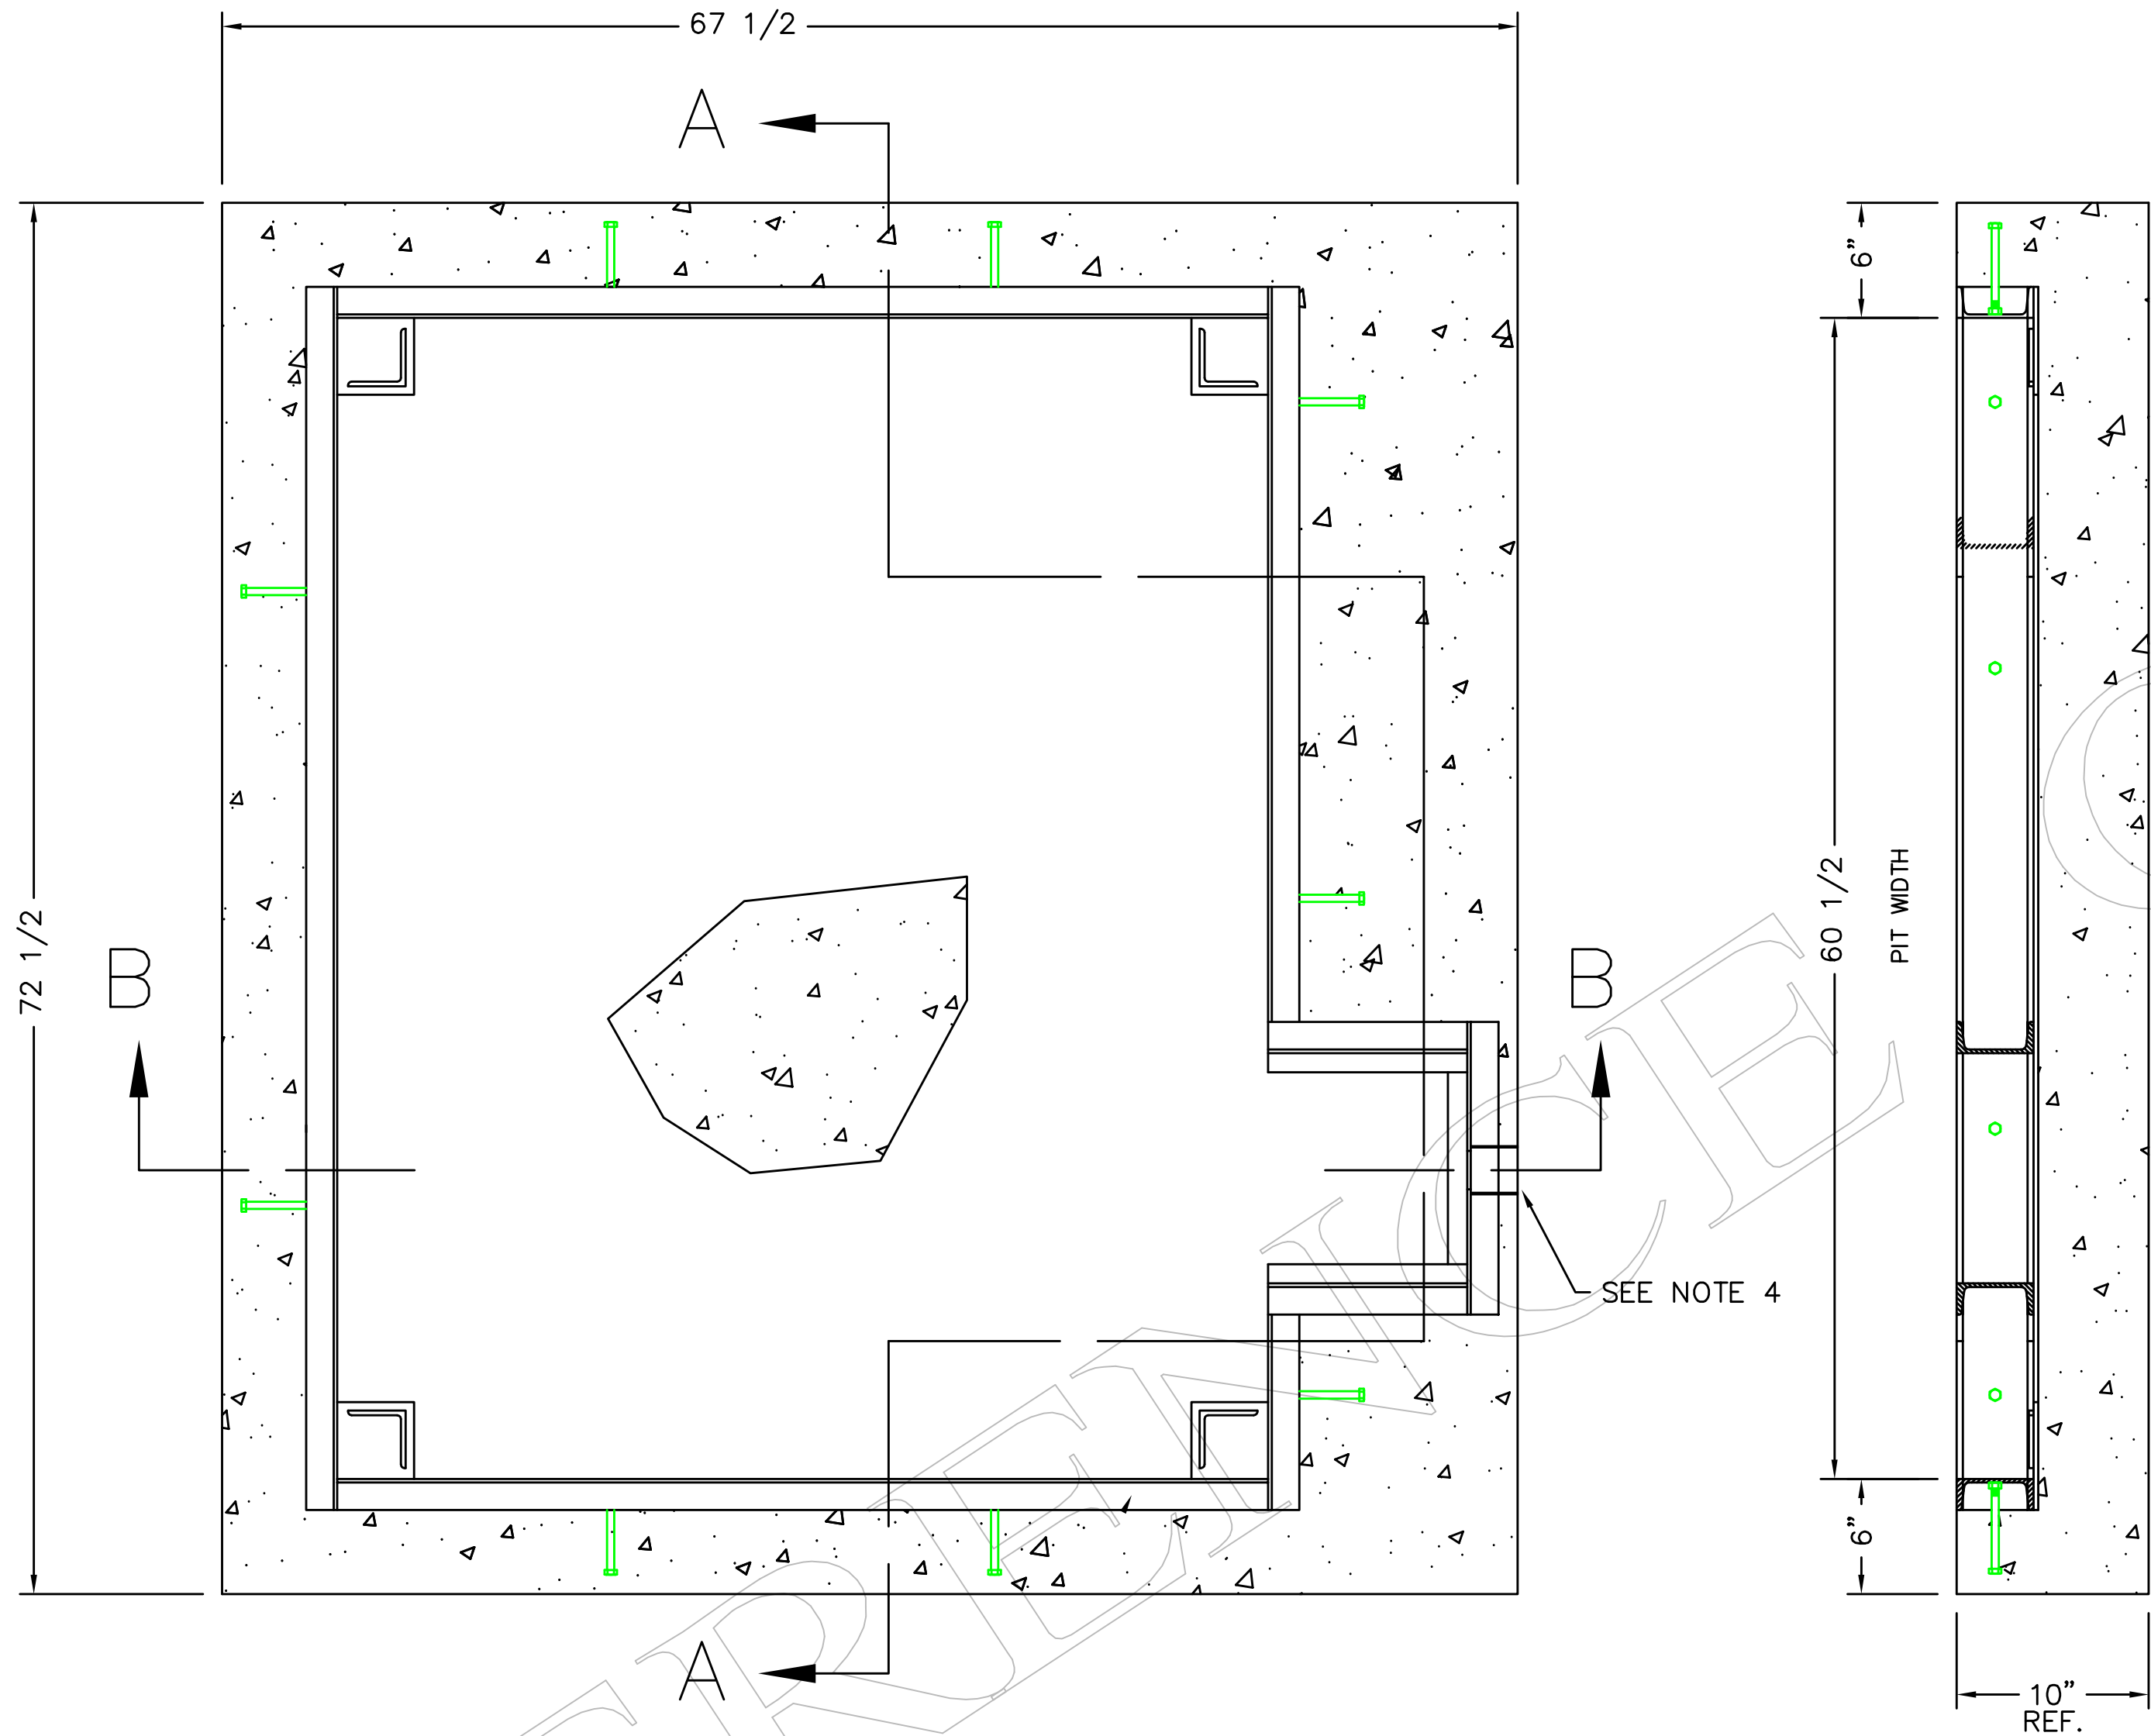

GENERAL NOTES:

1. PIT FLOOR MUST BE SMOOTH, LEVEL, AND TRUE TO PLANE.
2. PROVIDE DRAIN FOR PIT IF NEEDED.
3. ALL PIT STEEL FURNISHED BY CUSTOMER UNLESS OTHERWISE SPECIFIED ON SALES ORDER.
4. TRANSMISSION CABLE FROM LOAD CELL TO INDICATOR MUST BE IN LOCAL CODE SIZED STEEL CONDUIT AT LEAST 24" FROM CLOSEST ELECTRICAL LINE. THEY MAY CROSS AT 90° ONLY.
5. ITEM 2 TO BE SCREWED IN SNUGLY BEFORE POURING CONCRETE.

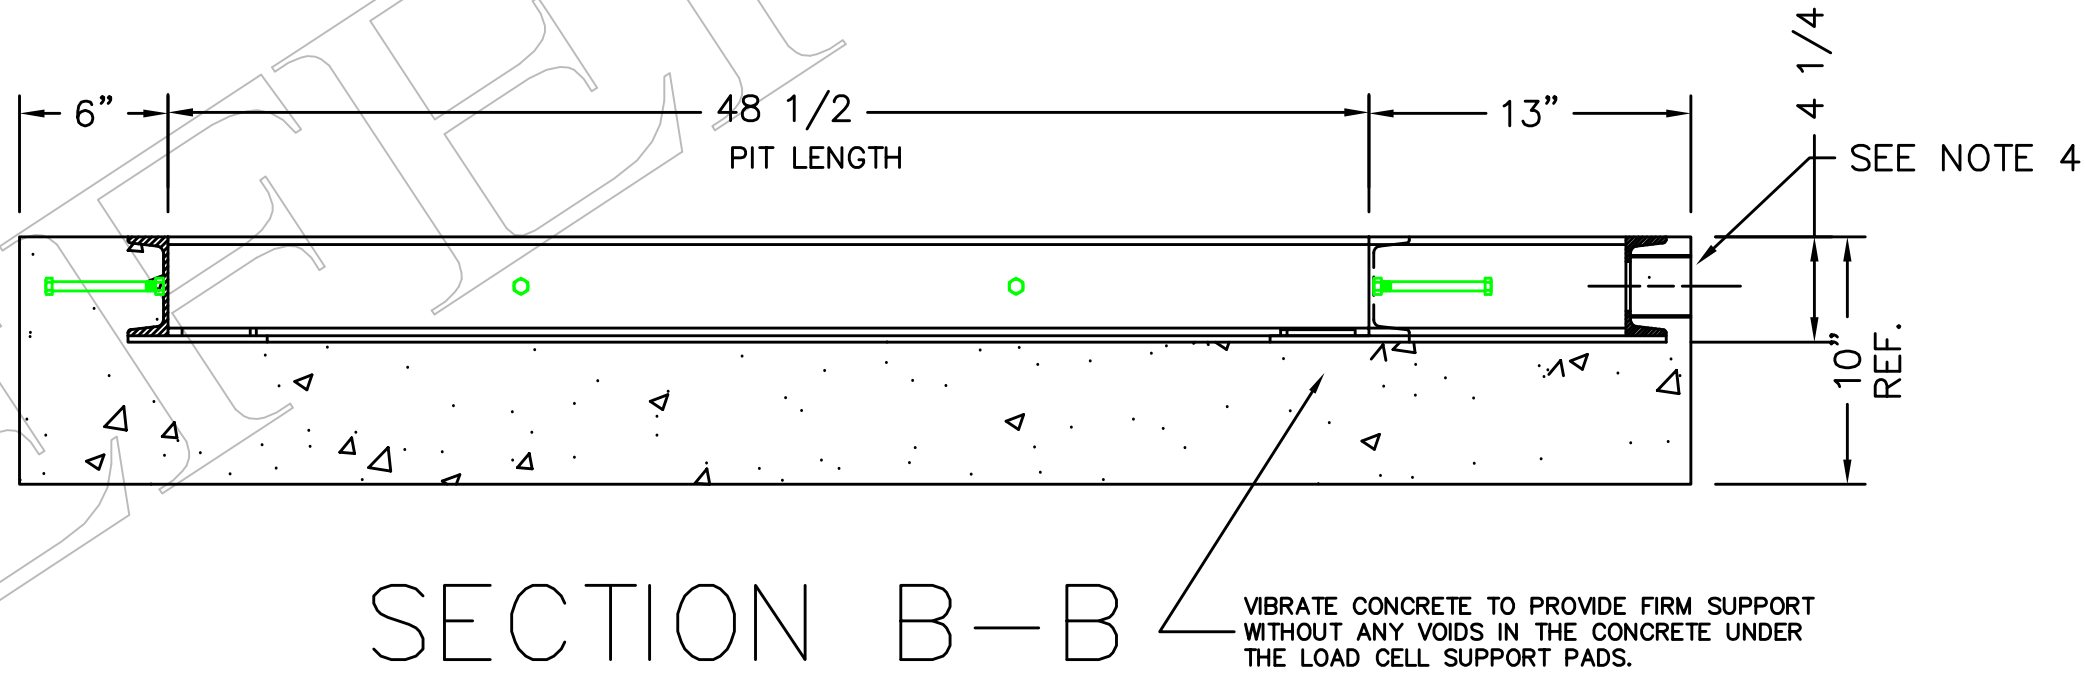

			1	1932-0220-0A	CHANNEL ASS'Y	SEE NOTE 3	143
QTY.	QTY.	QTY.	ITEM	PART/DWG. NUMBER	DESCRIPTION	MATERIAL OR SOURCE	WT. EACH
			ASSY				
			WT.	PARTS/MATERIAL LIST			
UNLESS OTHERWISE SPECIFIED TOLERANCE ON DIMENSIONS ARE: ANGLES ± 1/2" INTEGERS/FRACTIONS ± 1/16 IN. DECIMALS (.X) ± .03 IN. DECIMALS (.XX) ± .01 IN. DECIMALS (.XXX) ± .005 IN. NOTE: WHOLE NUMBERS MUST BE WRITTEN XX.000 TO INVOKE DECIMAL TOLERANCES. THIS DRAWING IS THE PROPERTY OF THE CARDINAL SCALE MFG. CO. AND SHALL NOT BE USED NOR RE- PRODUCED EITHER WHOLLY OR IN PART EXCEPT WITH WRITTEN AU- THORIZATION. ALL RIGHTS OF DE- SIGN OR INVENTION ARE RESERVED.				 CARDINAL DETECTO FULLER WEIGHING SYSTEMS TITLE PIT PLAN, PTN54 SCALENTSDO NOT SCALE DRAWING NEXT ASSEMBLY DR. C. MOOREDATE6/14/17 CH. DATE MODEL FHN-554 SHEET 1 OF 1 DWG. NO. 1932-0221-0A REV. A			