



CARDINAL®

PRL

S E R I E S

HEAVY-DUTY SELF-CONTAINED PORTABLE TRUCK SCALES



SELF-CONTAINED PORTABILITY
FOR
USE IN **MULTIPLE**
LOCATIONS

- Lever Design Built to Last
- Single Units or Tandem Models Available
- Durable, Anti-Corrosion Powder Paint
- Capacities Available from 20 tons up to 100 tons
- Available in 10 ft or 12 ft widths




88-135



PRL

S E R I E S

HEAVY-DUTY SELF-CONTAINED PORTABLE TRUCK SCALES

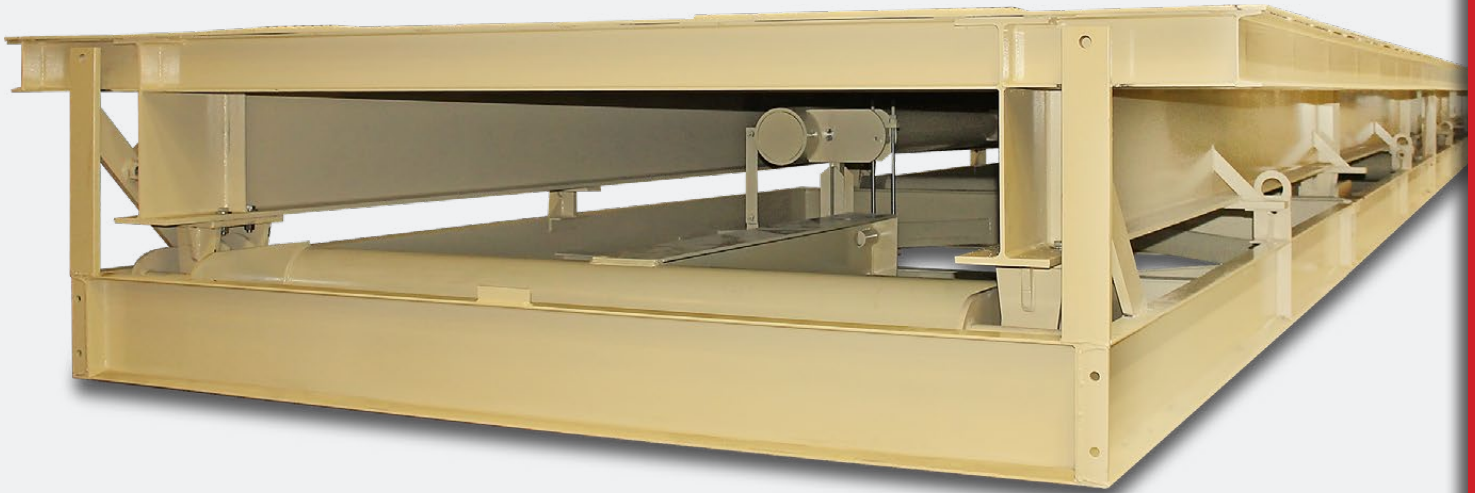

Easy Access Below Scale Deck

Top-side access covers allow quick and easy accessibility to beneath the scale platform.



Self-Contained Tandem Units

Each unit is a self-contained scale in itself. Split units offer 3-in-1 scale flexibility.

Cardinal Scale's PRL series heavy-duty, self-contained mechanical truck scales are made for endurance and accuracy, while remaining completely self-contained. Tandem units are composed of two or more scales of varying platform lengths, tandem-connected for greater capacity. When split, each unit is a self-contained scale in itself, offering 3-in-1 scale flexibility.

A rock-solid, 5/16-inch-thick checkered steel deck plate is standard and available in many different models for lengths and capacities listed below. The PRL is NTEP legal-for-trade certified and includes the ZX-2500 load cell assembly.

Single Weighbridge

Model	Platform Size	Capacity	CLC	Shipping Weight
2020PRL	20' x 10'	20 tons	20 tons	10,900 lb
2530PRL	25' x 10'	30 tons	30 tons	11,850 lb
3030PRL	30' x 10'	30 tons	30 tons	16,375 lb
3540PRL	35' x 10'	40 tons	30 tons	18,840 lb
4050PRL	40' x 10'	50 tons	30 tons	19,950 lb

Tandem Connected

Model	Platform Size	Capacity	CLC	Shipping Weight
2525-60PRL	50' x 10'	60 tons	30 tons	29,260 lb
3030-60PRL	60' x 10'	60 tons	30 tons	33,840 lb
3535-60PRL	70' x 10'	60 tons	30 tons	37,700 lb
3030-80PRL	60' x 12'	80 tons	45 tons	46,990 lb
3535-80PRL	70' x 12'	80 tons	45 tons	55,093 lb
2525-100PRL	50' x 12'	100 tons	60 tons	45,150 lb
3030-100PRL	60' x 12'	100 tons	60 tons	54,218 lb
3535-100PRL	70' x 12'	100 tons	60 tons	58,970 lb

Optional

Model	Description
PR-1	PRL bulkhead (pair)



LEGAL FOR TRADE

88-135



Cardinal Scale reserves the right to improve, enhance or modify features and specifications without prior notice. All registered trademarks are the property of their respective owners.



102 East Daugherty St., Webb City, MO 64870 USA
Toll-Free: (800) 441-4237 E-mail: cardinal@cardet.com
www.CardinalScale.com

SOLD BY: