




# PATHWAY



SCALE ID MOBILE WEIGHING APP

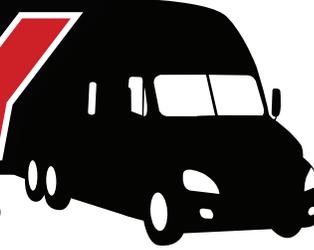

Cardinal 825 Spectrum indicator shown here with optional S2WIFI Wi-Fi Ethernet connectivity

## Mobile App for Truck Weights and ID Storage Remote Control

Imagine inexpensive unattended truck scale weighing all without ever even having to roll down your window! Cardinal Scale's **Pathway** mobile app provides all of the standard truck scale ID storage functions that are normally performed at the weight indicator directly in the palm of your hand with your smart phone. **Pathway** gives you the power of the NTEP 825 Spectrum indicator's weight display in a mobile device which allows truck drivers the efficiency and safety of remaining in their truck while weighing.


**Greatly improves safety and efficiency by the driver never leaving their truck.**

- Virtually unlimited IDs and transactions.
- Remote control operation of the 825 indicator.
- E-mail or print tickets through your smart phone.
- Self-prompting truck scale IDs (enter up to 4 customized IDs).
- Interface via standard TCP/IP to a wireless router or use Cardinal's optional S2WIFI.
- Available on Google Play for Android® devices and the App Store for Apple® devices.







The Pathway mobile app works with a standard off-the-shelf 825 indicator (requires latest 825 update available on CardinalScale.com).

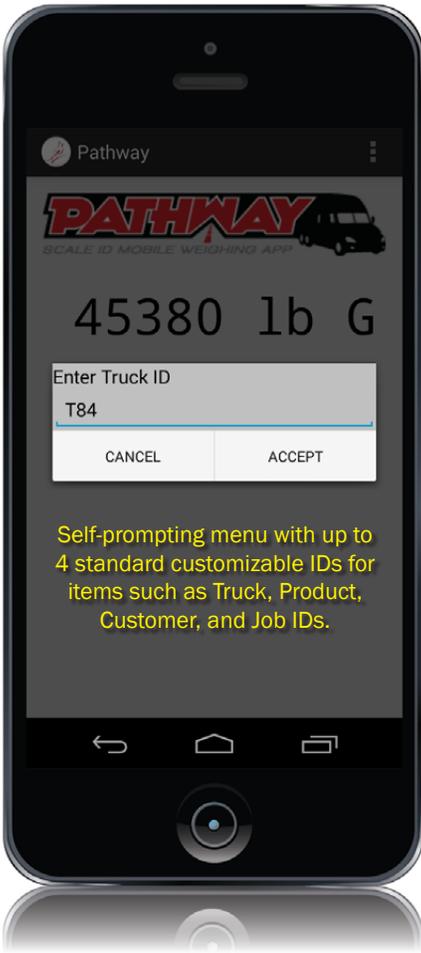

Self-prompting menu with up to 4 standard customizable IDs for items such as Truck, Product, Customer, and Job IDs.

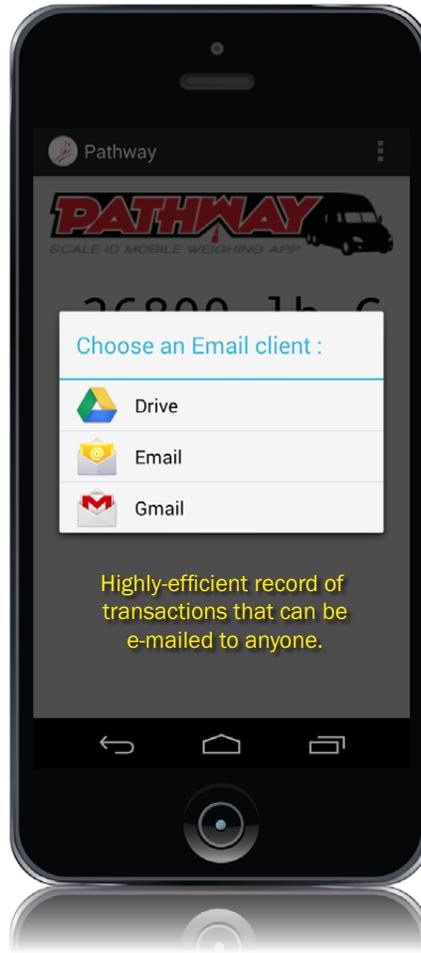


Highly-efficient record of transactions that can be e-mailed to anyone.

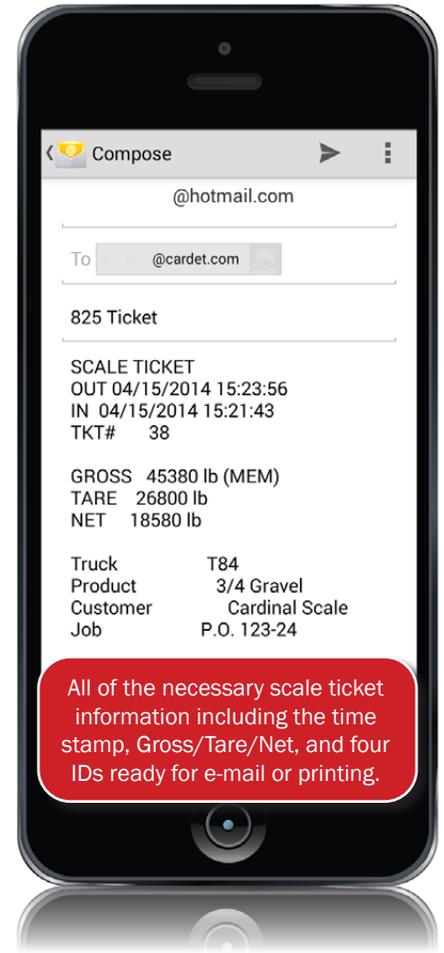

All of the necessary scale ticket information including the time stamp, Gross/Tare/Net, and four IDs ready for e-mail or printing.

Using Cardinal Scale's S2WIFI or the customer's wireless network for Wi-Fi connectivity, **Pathway** provides your truck scale operation with unattended weighing for a very minimal cost. All transactions are recorded automatically on the legal-for-trade 825 indicator's onboard memory and may be retrieved later with a USB memory stick or by Ethernet. Additionally, these individual transactions may be e-mailed or printed directly through the mobile device at the time of weighing. **Pathway** places the 825 indicator's remote keyboard and display in the cab of the truck to operate standard ID storage via Wi-Fi.

Once the truck driver pulls onto the scale, the **Pathway** mobile app self-prompts through four different customizable IDs such as truck number, product type, customer, job number, etc. These IDs are easily set up through the 825 indicator's QWERTY keyboard during configuration. **Pathway** prompts for in-and-out, two-pass weighing with transaction tickets generated for Gross, Tare, and Net which may be printed and/or e-mailed through your Android® or Apple® mobile device.

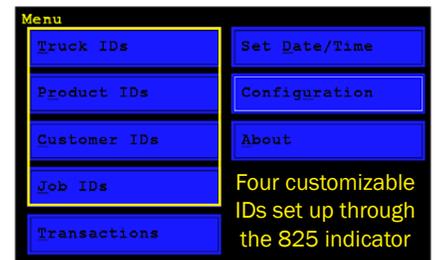

Four customizable IDs set up through the 825 indicator



Cardinal Scale reserves the right to improve, enhance or modify features and specifications without prior notice. All registered trademarks are the property of their respective owners.



102 East Daugherty St., Webb City, MO 64870 USA  
Toll-Free: (800) 441-4237 E-mail: cardinal@cardet.com  
www.CardinalScale.com

**SOLD BY:**