




## Run-A-Weigh



PORTABLE FLOOR SCALES

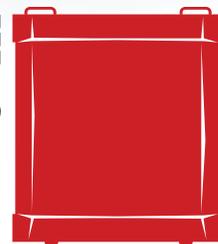

**TWO-WAY  
EASY-ACCESS  
INTEGRAL RAMPS**

*Features Built-in  
Handles, Wheels, and a  
Lightweight Frame for  
Easy Mobility and Use  
in Multiple Locations.*

Cardinal  
Scale model  
RW-1000 Run-a-Weigh  
portable floor scale



- Weigh Drums, Barrels, Boxes
- Checkered Steel Rugged Decking
- Up to 1,000-lb Capacity



- Portable for Convenient Use
- Ultra-Low Profile Design
- Easily Accessible for Heavy Loading
- Under 100 lbs for Easy Mobility

*The Run-a-Weigh  
Allows You to Set a  
Weighing Platform  
Where You Need It,  
When You Need It!  
Easily Fits Through  
Standard Doors.*

Cardinal Scale  
model RW-1000  
Run-a-Weigh portable floor scale

### Cardinal Scale's

**Run-a-Weigh Portable Floor Scale** rolls to any part of a facility and is instantly ready for accurate weighing. The Run-a-Weigh weighs in at less than 100 pounds and features built-in handles and wheels, so it's easy to lift and roll wherever you need it. Whether it's weighing multiple locations at a single facility or the need to take the scale to a special job site, the Run-a-Weigh gives you true portability. The Cardinal weight indicator can be set on the floor for mobile use or mounted on a wall or desk for convenient viewing.



**Integral Wheels** allow you to easily lift and roll the scale to your next location.



**Carrying Handles** help efficiently guide the mobile scale during transport.




**Coiled Load Cell Cable** provides 15 ft. extension for connection to indicator.



**Stainless Steel Load Cells** feature self-aligning swivel feet.

## RW-500 / RW-1000

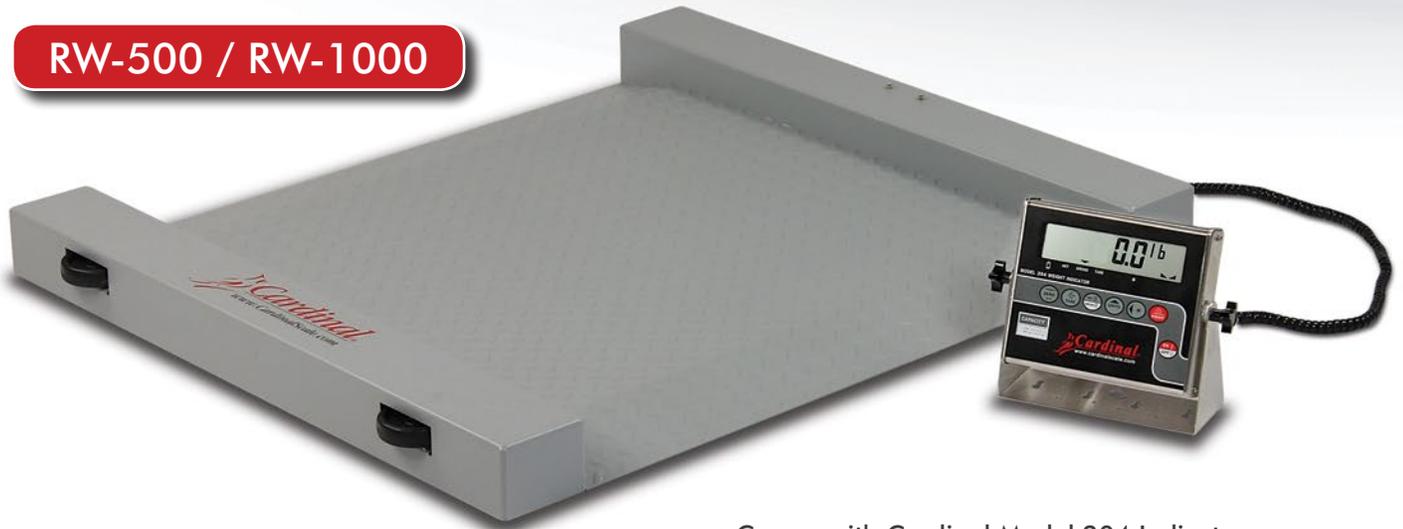

- Heavy-Duty Checkered Mild Steel Deck
- Light Gray Baked-on Powder Paint Finish
- 500 lb x 0.2 lb / 225 kg x 0.1 kg or 1,000 lb x 0.5 lb / 450 kg x 0.2 kg Capacities
- Comes with Cardinal Model 204 Indicator
- (6) Readily-Available C Batteries or Rechargeable Ni-Cad Batteries (not included)
- (1) RS232 Serial Port for Printer Connectivity
- All-Purpose Indicator Mounting Bracket



*The Run-a-Weigh's base is engineered to completely protect the stainless steel load cells and internal components from damage with heavy-duty structural steel channel fabrication.*

*(RW-1000 shown to the left)*





### SPACIOUS WEIGHING PLATFORM

Cardinal Scale's Run-a-Weigh provides plenty of room for weighing drums, barrels, industrial containers, and small crates. The ultra-low, 2.2-inch-high profile allows easy loading of heavy items.

*Cardinal Scale model RW-1000 Run-a-Weigh portable floor scale shown here with IP69K-rated 190 indicator.*



Choose the Run-a-Weigh Scale Model That Best Fits Your Weighing Requirements

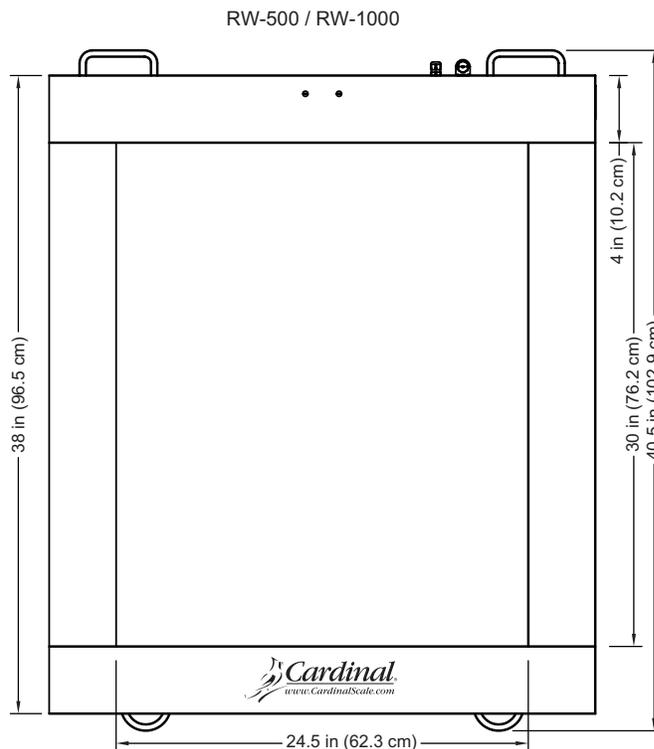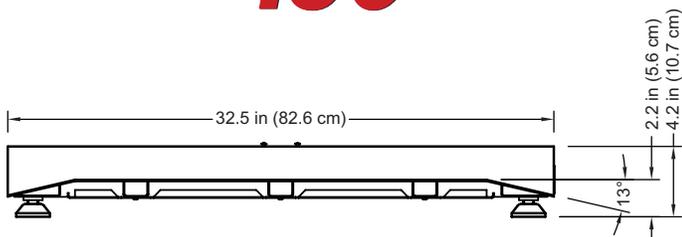

Model:	RW-500	RW-1000
<b>Capacity:</b>	500 lb x 0.2 lb / 225 kg x 0.1 kg	1,000 lb x 0.5 lb / 450 kg x 0.2 kg
<b>Scale Material:</b>	Heavy-duty mild steel with checkered deck and baked-on powder paint	Heavy-duty mild steel with checkered deck and baked-on powder paint
<b>Washdown:</b>	No	No
<b>Platform Size:</b>	24.5 in x 30 in (62 cm x 76 cm)	24.5 in x 30 in (62 cm x 76 cm)
<b>Weight Indicator:</b>	Cardinal model 204 general purpose stainless steel with 6 C batteries (not included)	Cardinal model 204 general purpose stainless steel with 6 C batteries (not included)
<b>Display:</b>	Six-digit, seven-segment, 1.0-in (25-mm) high LCD	Six-digit, seven-segment, 1.0-in (25-mm) high LCD
<b>Power:</b>	115 VAC 60 Hz adapter, or 230 VAC 50/60 Hz, or 6 C cell alkaline or rechargeable Ni-Cad batteries	115 VAC 60 Hz adapter, or 230 VAC 50/60 Hz, or 6 C cell alkaline or rechargeable Ni-Cad batteries
<b>Load Cell:</b>	(4) Cardinal model LFB-250M stainless steel shear beam with self-aligning swivel feet	(4) Cardinal model LFB-500HMT stainless steel shear beam with self-aligning feet
<b>Cable (included):</b>	15 ft (4.5 m) coiled load cell connection	15 ft (4.5 m) coiled load cell connection
<b>Temperature Range:</b>	14° to 104° F (-10° to +40° C)	14° to 104° F (-10° to +40° C)
<b>Product Weight:</b>	95 lb / 43 kg	95 lb / 43 kg
<b>Shipping Weight:</b>	105 lb / 48 kg	105 lb / 48 kg

Both scales are also available to order LPAN (without an indicator). To order, specify model RW-1000-LPAN, etc.

Cardinal Scale reserves the right to improve, enhance or modify features and specifications without prior notice. All registered trademarks are the property of their respective owners.



Mobile: [m.cardinalscale.com](http://m.cardinalscale.com)

**SOLD BY:**