



# SLS

# SINGLE ANIMAL LIVESTOCK SCALES

## Cattle Industry Standard Design



- Available With or Without Livestock Pen and Gates
- Extreme Accuracy to Within 0.5 lb
- Up to 5,000-lb Capacity

*Model 53096-SLS with  
optional 190 Indicator*





# SLS

## LIVESTOCK PEN & GATE MODELS

# SINGLE ANIMAL

## SINGLE ANIMAL LIVESTOCK SCALES

Cardinal Scale's NTEP-certified SLS series steel deck single animal livestock scale offers extreme durability and high-quality construction for weighing cattle, swine, horses, sheep, goats, and more. The unique easy-close slide-track gates increase efficiency for the operator and secure livestock inside the pen while weighing. The SLS series is available in varying widths and lengths, both with and without the livestock pen, and is extremely accurate up to 2,500 lb x 0.5 lb or 5,000 lb x 1 lb capacities.

- All-welded cage for strength and stability
- Rugged checkered steel kick-panel interior
- Dual slide-out gates for in/out access with easy-close large handles
- Anti-corrosion, baked-on polyester tan powder paint
- Heavy-duty, 5/8-inch-thick rubber mat for sure footing and noise reduction (included)
- Four model TB 2,500-lb stainless steel load cells with adjustable support feet



Model  
53096-SLS

*Indicator sold separately (multiple models available from Cardinal Scale). Composite flooring must be used for NTEP approved weighing (supplied with scale).*



## DUAL SLIDE-OUT GATES


- Large grab-handle gate for convenience and easy accessibility
- Gate enclosed on both sides by scale framework to firmly and safely secure livestock
- Automatic stop for gate in livestock pen framework facilitates easy latching
- Dual slide-track gates easily close and open with one hand
- Exterior latch inaccessible to livestock for safety




# ANIMAL LIVESTOCK SCALES

## DECK-ONLY MODELS

- Ideal for horse weighing or versatile integration into pre-existing chutes and pens
- Anti-corrosion, baked-on polyester powder paint
- Heavy-duty, 5/8-inch-thick rubber composite mat for sure footing and noise reduction (included)
- Four model TB 2,500 lb stainless steel load cells with adjustable support feet

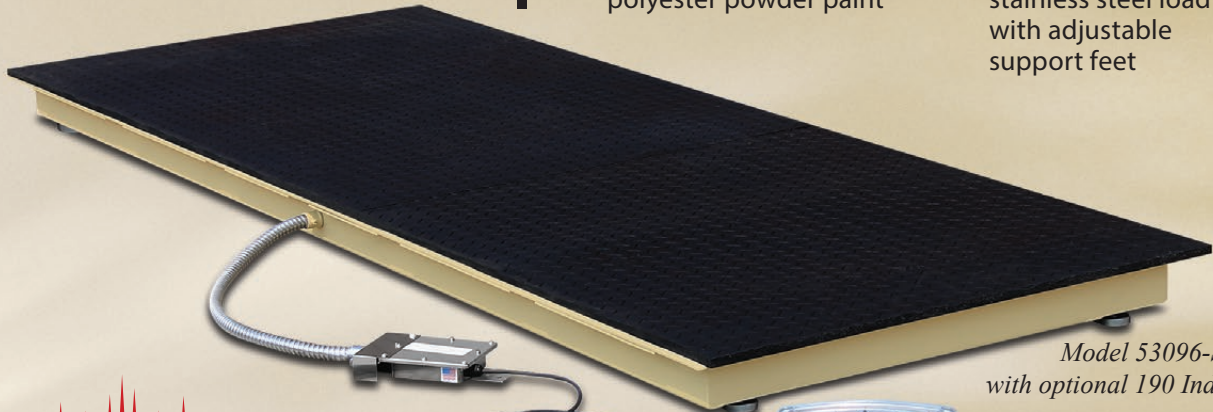

*Model 53096-SLS-D  
with optional 190 Indicator*

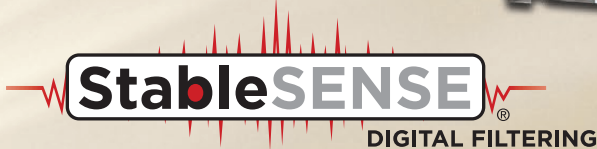

Cardinal Scale's weight indicators feature StableSENSE® digital filtering that filters the weight signal to produce a stable weight display in spite of motion on the scale platform due to animal movement.

AVAILABLE IN  
MULTIPLE  
**Capacities AND  
Dimensions**  
TO MEET  
YOUR **Various Needs**



*Model 190,  
205,*

## JUNCTION BOX

- Easy side-access stainless steel junction box avoids complicated access beneath the scale
- Stainless steel flex conduit protects wiring




Composite flooring must be used for NTEP approved weighing (supplied with scale).



# SLS

# SINGLE ANIMAL LIVESTOCK SCALES

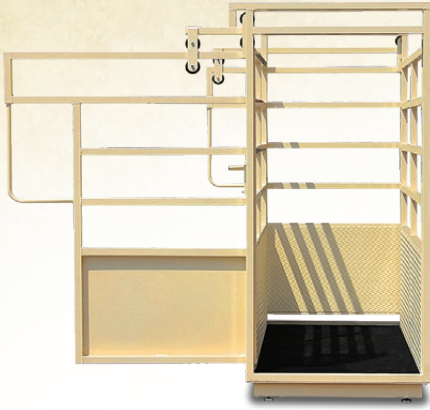

- All-welded cage for strength and stability
- Dual slide-out gates for in/out access with easy-close large handles allow one-handed operation
- Exterior latch inaccessible to livestock for safety

## LIVESTOCK PEN & GATE MODELS

LIVESTOCK PEN & GATE SCALE MODELS	Capacity / Division	Width	Length
2.53096-SLS	2,500 lb x 0.5 lb	30 in	96 in
2.53696-SLS	2,500 lb x 0.5 lb	36 in	96 in
2.536120-SLS	2,500 lb x 0.5 lb	36 in	120 in
2.54896-SLS	2,500 lb x 0.5 lb	48 in	96 in
2.548120-SLS	2,500 lb x 0.5 lb	48 in	120 in

53096-SLS	5,000 lb x 1 lb	30 in	96 in
53696-SLS	5,000 lb x 1 lb	36 in	96 in
536120-SLS	5,000 lb x 1 lb	36 in	120 in
54896-SLS	5,000 lb x 1 lb	48 in	96 in
548120-SLS	5,000 lb x 1 lb	48 in	120 in

## DECK-ONLY MODELS



- Deck-only models are ideal for horse weighing or versatile integration into pre-existing chutes and pens

DECK ONLY SCALE MODELS	Capacity / Division	Width	Length
2.53096-SLS-D	2,500 lb x 0.5 lb	30 in	96 in
2.53696-SLS-D	2,500 lb x 0.5 lb	36 in	96 in
2.536120-SLS-D	2,500 lb x 0.5 lb	36 in	120 in
2.54896-SLS-D	2,500 lb x 0.5 lb	48 in	96 in
2.548120-SLS-D	2,500 lb x 0.5 lb	48 in	120 in

53096-SLS-D	5,000 lb x 1 lb	30 in	96 in
53696-SLS-D	5,000 lb x 1 lb	36 in	96 in
536120-SLS-D	5,000 lb x 1 lb	36 in	120 in
54896-SLS-D	5,000 lb x 1 lb	48 in	96 in
548120-SLS-D	5,000 lb x 1 lb	48 in	120 in

## ALL MODELS FEATURE:

- Heavy-duty, 5/8-inch-thick rubber mat for sure footing and noise reduction (included)
- Four model TB 2,500-lb stainless steel load cells with adjustable support feet



**OPTIONS:** Box Panel Kits • Weight Indicators • Remote Displays • Ticket Printers • Wi-Fi Connectivity • Mobile Apps

Cardinal Scale reserves the right to improve, enhance or modify features and specifications without prior notice. All registered trademarks are the property of their respective owners.



102 East Daugherty St., Webb City, MO 64870 USA  
Toll-Free: (800) 441-4237 E-mail: cardinal@cardet.com  
www.CardinalScale.com

**SOLD BY:**