



CARDINAL®


SATELLITE

UNATTENDED WEIGHING



Satellite
Unattended
Weighing Kiosk
Model SAT225PHB1
Shown Here

Weatherproof Truck Scale Kiosk

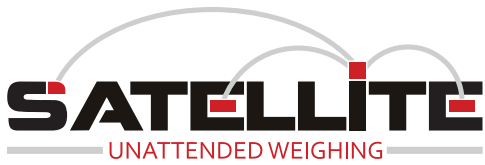

Unattended Truck Scale Terminals


Cardinal Scale's Satellite series unattended weighing kiosks provide the ultimate experience in unmanned truck scale efficiency and streamlined data integration. The lockable, weather-proof enclosure features a modern design aesthetic with optional rainhood/sun deflector. Select a Satellite model with the features you need, including a high-speed thermal cutbar tape printer, proximity badge reader (AWID and HID), backlit LCD graphics display, and with or without a rainhood.

True to its name, the Satellite offers independent remote control over your weighing operations and connects the truck scale to SB500 remote displays with integrated traffic signals, existing computer networks, other digital weight indicators, and WinVRS vehicle recording software.



LED lighting strip included for night time visibility on all models that include a rainhood.

Allows the Driver to Remain in the Vehicle While Weighing Reduces Risk Associated with Drivers Walking Across Platforms

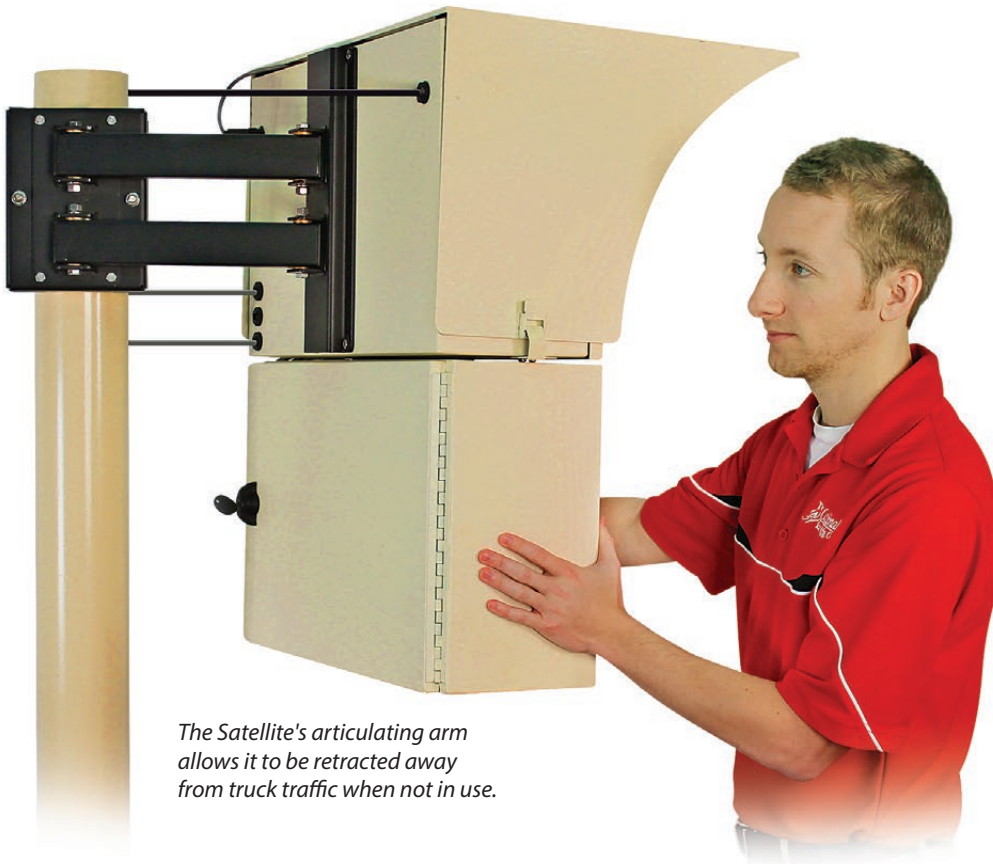

The Satellite's articulating arm allows it to be retracted away from truck traffic when not in use.

Retractable Articulating Arm

Cardinal's Satellite may be mounted on a wall or pole (complete mounting bracket included), and the unique articulating arm allows the kiosk to be pulled toward the truck driver while weighing and then retracted away from the truck when not in use (11 in/27 cm extension).

The weatherproof QWERTY keyboard with navigation arrow keys and main soft keys provides driver input prompting controls. Fast, accurate, and easy to operate, the Satellite series offers models with a brilliant 640 x 480 pixel full-color graphics LCD touch-screen display and 10/100 Base-T Ethernet standard (TCP/IP or EIP). USB-B connectivity is standard on all models.

Easily Change Ticket Rolls

Printing unattended truck weight tickets has never been easier than with the Satellite's high-speed thermal cutbar tape printer. The printer with silkscreened sign on the front of the enclosure easily identifies for drivers where they are to retrieve their ticket. To easily refill paper rolls, simply swing out the articulating arm and unlock the cabinet from the back for internal printer access. An interior heater with thermostat comes standard in all Satellite printer cabinets for year-round, weather-proof usage.

These unattended weighing terminals allow the driver to remain in their vehicle while weighing which reduces the risk associated with walking across truck scale platforms and traffic lanes. Not only is this a safer method of receiving truck weights, but it also speeds the weighing process for optimal efficiency and reduces overall operating costs.



6-inch diameter x 3.15-inch wide
direct thermal paper roll (6600-1080)

High-Speed Thermal Printer | Easy to Refill Paper Rolls



WinVRS

Vehicle Recording Software Data Management Integration

The Satellite unattended weighing kiosk may be interfaced via Wi-Fi or wired Ethernet to Cardinal's WinVRS Vehicle Recording System for seamless acquisition and integration of weight data to generate versatile reports of transactions. Truck ID storage comes standard in the Satellite series, and versatile connectivity ports allow weight data to be sent directly into recordkeeping software.

- Transportation / Ports
- Solid Waste / Landfills / Transfer Stations
- Mining / Sand & Gravel / Aggregates
- Agriculture / Grain Terminals
- Construction Materials / Recycling
- Manufacturing / Textiles
- Load-out Facilities
- Chemical Plants



SAT225PH	Unattended Weighing Kiosk with 225 Indicator / Printer / Rainhood	<ul style="list-style-type: none"> • 225 Weight Indicator/Terminal • Thermal Cutbar Tape Printer • Wall or Pole Mounted, Weatherproof Enclosure with Articulating Arm • Internal Heater With Thermostat • With Rainhood And LED Lamp
SAT225P	Unattended Weighing Kiosk with 225 Indicator / Printer	<ul style="list-style-type: none"> • 225 Weight Indicator/Terminal • Thermal Cutbar Tape Printer • Wall or Pole Mounted, Weatherproof Enclosure with Articulating Arm • Internal Heater With Thermostat
SAT225PHB1	Unattended Weighing Kiosk with 225 Indicator / Printer / Proximity Badge Reader / Rainhood	<ul style="list-style-type: none"> • 225 Weight Indicator/Terminal • Proximity Badge Reader • Thermal Cutbar Tape Printer • Wall or Pole Mounted, Weatherproof Enclosure with Articulating Arm • Internal Heater With Thermostat • With Rainhood And LED Lamp
SAT225PB1	Unattended Weighing Kiosk with 225 Indicator / Printer / Proximity Badge Reader	<ul style="list-style-type: none"> • 225 Weight Indicator/Terminal • Proximity Badge Reader • Thermal Cutbar Tape Printer • Wall or Pole Mounted, Weatherproof Enclosure with Articulating Arm • Internal Heater With Thermostat
SAT825PH	Unattended Weighing Kiosk with 825 Indicator / Printer / Rainhood	<ul style="list-style-type: none"> • 825 Weight Indicator/Terminal • Thermal Cutbar Tape Printer • Wall or Pole Mounted, Weatherproof Enclosure with Articulating Arm • Internal Heater With Thermostat • With Rainhood And LED Lamp
SAT825P	Unattended Weighing Kiosk with 825 Indicator / Printer	<ul style="list-style-type: none"> • 825 Weight Indicator/Terminal • Thermal Cutbar Tape Printer • Wall or Pole Mounted, Weatherproof Enclosure with Articulating Arm • Internal Heater With Thermostat
SAT825PHB1	Unattended Weighing Kiosk with 825 Indicator / Printer / Proximity Badge Reader / Rainhood	<ul style="list-style-type: none"> • 825 Weight Indicator/Terminal • Proximity Badge Reader • Thermal Cutbar Tape Printer • Wall or Pole Mounted, Weatherproof Enclosure with Articulating Arm • Internal Heater With Thermostat • With Rainhood And LED Lamp
SAT825PB1	Unattended Weighing Kiosk with 825 Indicator / Printer / Proximity Badge Reader	<ul style="list-style-type: none"> • 825 Weight Indicator/Terminal • Proximity Badge Reader • Thermal Cutbar Tape Printer • Wall or Pole Mounted, Weatherproof Enclosure with Articulating Arm • Internal Heater With Thermostat
SATP	Satellite Outdoor Printer	Aftermarket Add-on Option
SATH	Satellite Rainhood	Aftermarket Add-on Option

DIMENSIONS

SAT225PH / SAT225PHB1 / SAT825PH / SAT825PHB1	21.7 in W x 18.1 in D x 28 in H / 55 cm W x 46 cm D x 71 cm H
SAT225P / SAT225PB1 / SAT825P / SAT825PB1	21.3 in W x 8.3 in D x 28 in H / 54 cm W x 21 cm D x 71 cm H
SATP (Satellite Printer Only)	21.3 in W x 8.3 in D x 14 in H / 54 cm W x 21 cm D x 36 cm H
SATH (Satellite Rainhood Only)	21.7 in W x 18.1 in D x 13.8 in H / 55 cm W x 46 cm D x 35 cm H

Cardinal Scale reserves the right to improve, enhance or modify features and specifications without prior notice. All registered trademarks are the property of their respective owners.



102 East Daugherty St., Webb City, MO 64870 USA
Toll-Free: (800) 641-4237 E-mail: cardinal@cardet.com
www.CardinalScale.com

SOLD BY: