

# Outdoor Ticket Printer **WINENCL-P**



## Thermal Kiosk Printer with Steel Enclosure



**Easy to Refill Paper Rolls**



**Quick-Access Rear Door**



**Includes Locking Key**

Cardinal Scale's WINENCL-P thermal kiosk printer with steel enclosure provides weatherproof protection for your scale ticket printing. This high-quality, outdoor-grade printing solution accommodates a 6-inch diameter paper roll (included) and features a pole-mounting bracket bolted to the bottom of the printer cabinet, which can be removed for desktop applications.

- Outdoor-Grade Steel Enclosure
- Thermal Cutbar Tape Printer
- Internal Heater with Thermostat
- High Speed: Up to 8.7 in/220 mm per second
- Pole Mounting Bracket Included
- Year-Round, All-Weather Usage


# Outdoor Ticket Printing | Rugged Protection

## Internal Heater with Thermostat for Temperature Extremes

Internal access to the high-speed thermal cutbar tape printer is easy with the WINENCL-P's lockable rear door. The internal quick release mechanism allows you to easily load fresh paper rolls. The innovative looping printer mechanism prevents paper jams by printing the receipt in full before providing it to the user. The large-diameter paper roll provides many hours of unattended operation. The internal thermostat allows Cardinal's WINENCL-P to be used in all weather conditions.

Connect the WINENCL-P printer to Cardinal Scale's 200 series indicators or 825 Spectrum indicator via RS232 serial (other connectivity options are available upon request: USB, Ethernet, Parallel).

The mount on the bottom of Cardinal Scale's WINENCL-P is a 6-in/15-cm nominal Schedule 80 pipe that accommodates up to a 4-in/10-cm nominal pipe for a post. Cardinal Scale recommends using a 4-in/10-cm nominal pipe or 4.5-in/11-cm OD to 5.5-in/14-cm OD tubing as a minimum size for a post.

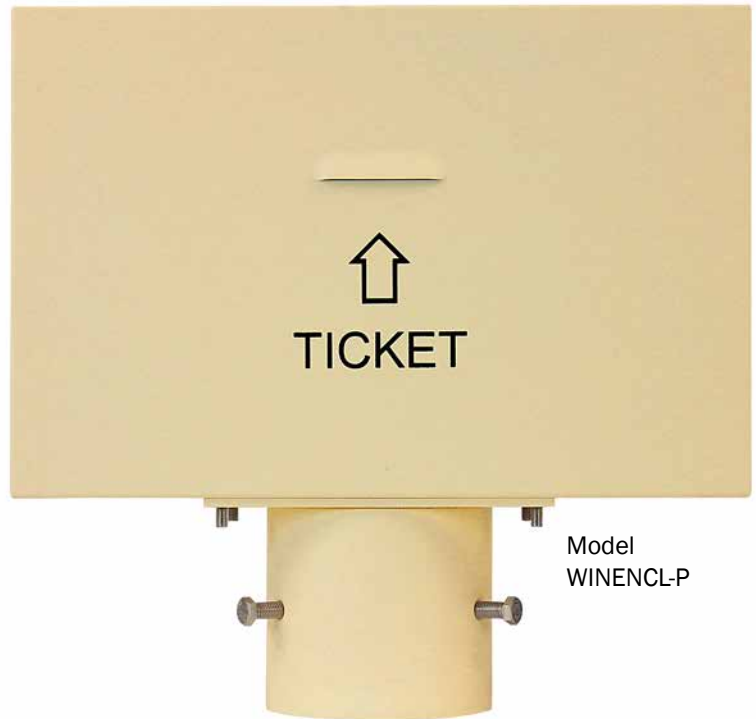

**Enclosure Construction:** Mild steel with baked-on powder paint

**Enclosure Dimensions:** 21 in/53 cm W x 8 in/20 cm D x 14 in/36 cm H (without mounting bracket)  
20 in/51 cm H including 6 in/15 cm H mounting bracket

**Pole Mounting Bracket:** Mounts up to 4 in/10 cm nominal pipe or 4.5 in/11 cm OD to 5.5 in/14 cm OD tubing (bracket may be unbolted and removed for desktop applications)

**Print Method:** Direct Thermal

**Print Resolution:** 203 dpi (8 dots/mm)

**Print Speed:** Up to 8.7 in / 220 mm per sec

**Print Width:** 1.4 - 3.1 in / 37 - 80 mm (adjustable)

**Paper Width:** 1.8 - 3.2 in / 45 - 82.5 mm (adjustable)

**Paper Thickness:** 0.0025 - 0.0059 in / 0.065 - 0.15 mm

**Ticket Paper:** 6 in / 15 cm diameter x 3.15 in / 8 cm wide paper roll (part no. 6600-1080)

**Autocutter:** Full-cut, guillotine style

**Interface:** RS232 serial standard (USB, Ethernet, and Parallel available upon request)

**Power:** 100-240V / 3A (power supply included)

**Product Weight:** 54 lb / 24 kg

**Shipping Weight:** 59 lb / 27 kg



Cardinal Scale reserves the right to improve, enhance or modify features and specifications without prior notice. All registered trademarks are the property of their respective owners.

**Cardinal**  
Cardinal Scale Manufacturing Co.  
203 E. Daugherty, Webb City, MO 64870 USA  
Ph: 417-673-4631 or 800-441-4237 • Fax: 417-673-5001  
[www.CardinalScale.com](http://www.CardinalScale.com)

Mobile: [m.cardinalscales.com](http://m.cardinalscales.com)

**SOLD BY:**