



WEIGHT WRANGLER

★ MOBILE AND PORTABLE ★
LIVESTOCK SCALES



*Model LSM2018-MWC225P
shown with optional solar panel*

MOBILE AND PORTABLE LIVESTOCK SCALES




*Model LSP2018-MWC225P-BB
with battery box included*

- ★ Completely Self-Contained NTEP Legal-for-Trade Mobile Animal Weighing
- ★ Mobile Scales with Wheels and Also Portable Scales with Lower Frame for Transport
- ★ Includes Weight Indicator, Ticket Printer, and Battery (Battery not included on standard LSP models)
- ★ Weigh Groups of Cattle up to 15-20 Head at a Time (20,000-lb Capacity)
- ★ X-Lug Rubber Livestock Flooring Included Standard for Livestock Stability and Assurance
- ★ Scales Come Fully Assembled



★ MOBILE AND PORTABLE LIVESTOCK SCALES ★

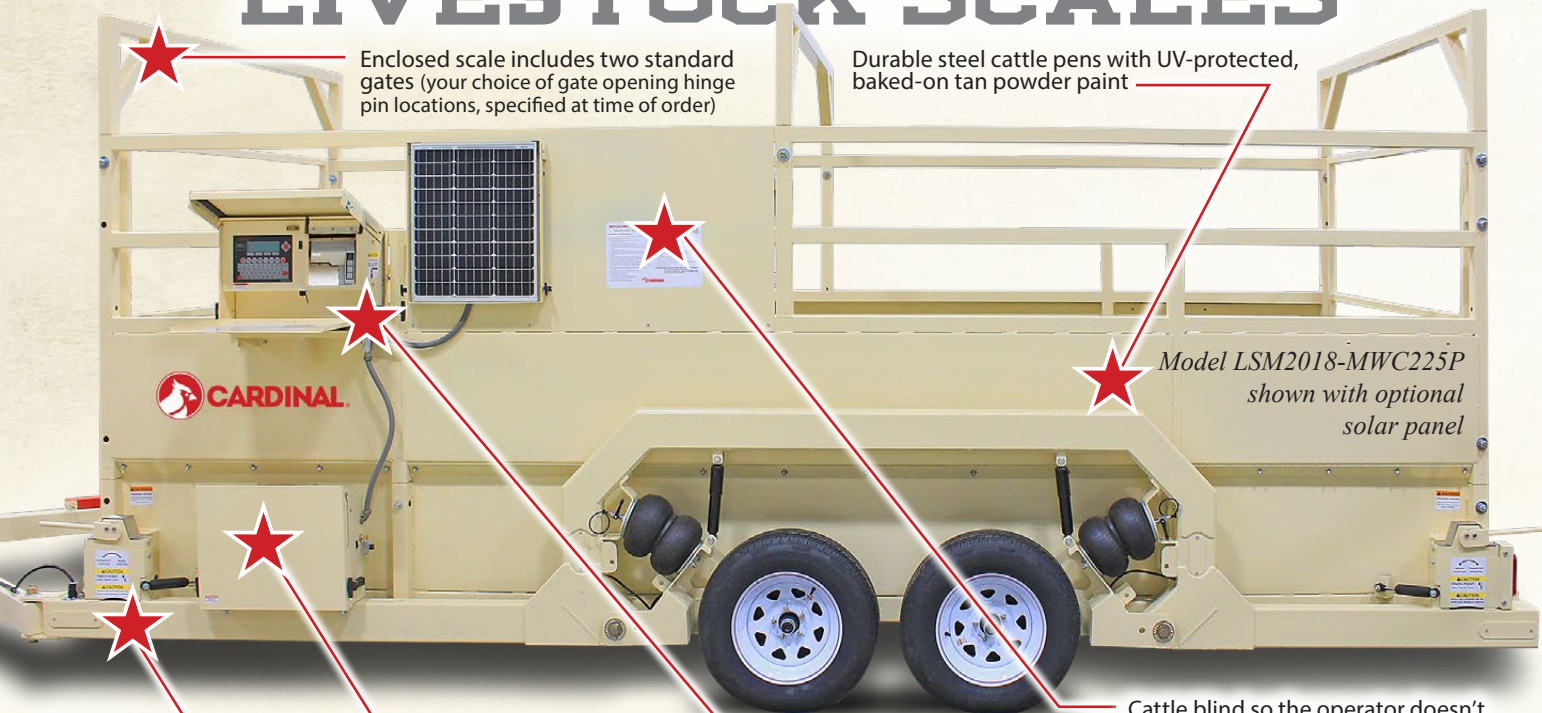

★ Enclosed scale includes two standard gates (your choice of gate opening hinge pin locations, specified at time of order)

★ Durable steel cattle pens with UV-protected, baked-on tan powder paint

★ Model LSM2018-MWC225P shown with optional solar panel



★ 12-volt battery pack included (recharged by towing vehicle)

For battery to be included on LSP models, please specify -BB model suffix

★ Cattle blind so the operator doesn't upset livestock while operating the scale during the weight transaction

★ Weatherproof mobile weighing center indicator and printer is mounted to the exterior of the livestock pen


★ Extra storage shelf in indicator/printer cabinet for spare ticket rolls or EDI reader wand

★ Battery box and weight indicator cabinet feature toolbox latches to properly secure the lids and doors

X-LUG RUBBER LIVESTOCK FLOORING INCLUDED



- ★ Open spacing between X-lug floor boards allows for easy wash out of scale after use.
- ★ Competitors' mobile and livestock scales use a corrugated metal floor with a cover rubber mat, allowing livestock sewage to be trapped which leads to extensive rust damage.
- ★ High under-frame clearance (helpful in maneuvering through bumpy field terrain).
- ★ Load cells easily accessible via side access panel.
- ★ High-quality composite flooring for livestock stability and hoof-gripping assurance.

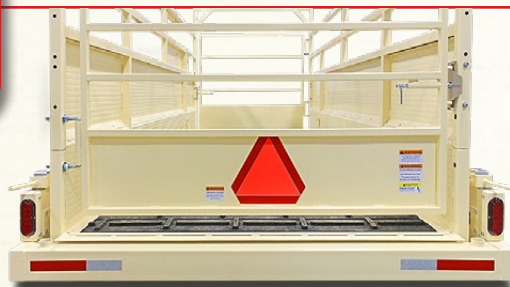


Tail lights and safety reflectors included standard

Adjustable height trailer hitch included standard



SELF-CONTAINED DESIGN

Cardinal Scale's mobile and portable Weight Wrangler group animal scales provide a self-contained NTEP legal-for-trade weighing system that can be used on any firm surface with up to a 5% grade. The livestock scales include an integral air pump to easily lift and lower the trailer's air bag suspension. The rubberized component deck and steel cattle pen enclosure with dual gates are all suspended at four points within a mobile base frame.

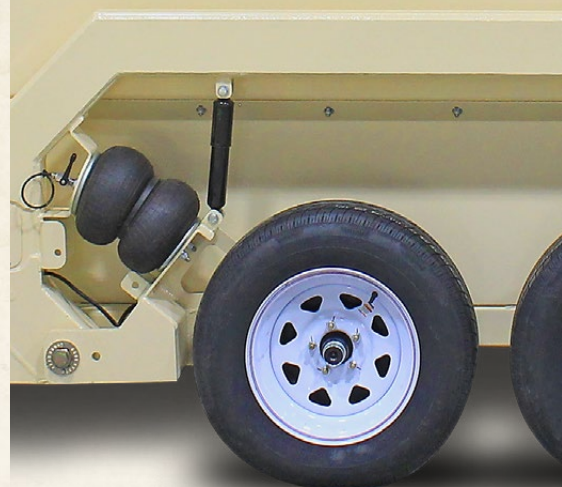

CARDINAL SCALE'S MOBILE WEIGHING CENTER:

- ★ Calculates Shrink Loss for Livestock Group
- ★ Displays Current Head Count, Gross Weight, and Average Weight
- ★ Also Displays Previous and Total Head Count, Gross Weight, and Average Weight
- ★ Displays Transaction Number and Transaction Shrinkage
- ★ Printable Report Summarizing Above Information per Transaction
- ★ Inclinometer Detects Scale Angle to Determine if Angle is Out of Acceptable Tolerance for Weighing
- ★ Weight Indicator Displays Current Tilt Angle (blanks out if out of NTEP tolerance)
- ★ Comes With USB Port to Store Transactions on Portable USB Drive
- ★ Transactions Stored on USB Drive May Be Summarized for Printing

Cardinal Scale's legal-for-trade 225 digital weight indicator, USB drive port, and CTP-1 ticket printer combine in the weatherproof, outdoor enclosure of the Weight Wrangler's mobile weighing center.

225 1 CAL		Trans #: 1	
lb		Shrink: 2.50%	
G			
Last : 2	Current: 3	Total: 6	
Gross: 400	Gross : 600	Gross: 1250	
Avg : 200	Avg : 200	Avg : 208	
WEIGH	SHRINK	FINISH	REPRINT

Livestock weighing transaction results are all displayed on the easy-to-read, transfective LCD screen that remains highly visible, even in direct sunlight.

USER FRIENDLY OPERATION

Lowering the scale into weighing mode after transport is easy and can be quickly done by one person. For the mobile models, pull the safety locking pins for transport mode, pull the pin on the tongue to split apart the two arms on the front of the scale, turn the air purge valve to release the air from the airbags and lower the scale, and then rotate the weighbridge lifting handle inward at each corner.



The Weight Wrangler's mobile weighing center includes an inclinometer that eliminates the need to recalibrate the scale after transport. The self-contained scale provides legal-for-trade weights in multiple locations with up to a 5% tilt angle (maximum allowed by NTEP) in any direction.



StableSENSE[®] DIGITAL FILTERING

Cardinal Scale's weight indicators feature StableSENSE[®] digital filtering that filters the weight signal to produce a stable weight display in spite of motion on the scale platform due to animal movement.

Model LSP2018-MWC225P-BB





★ MOBILE AND PORTABLE
LIVESTOCK SCALES ★

LIVESTOCK WEIGHING SOLUTIONS

Model LSM2018-MWC225P



Cardinal Scale's Weight Wrangler scales come in four types (listed below) and meet the demands of multi-site livestock weighing.

	MOBILE	PORTABLE
CAPACITY	<p>LSM1513-MWC225P</p> <p>13' L x 7' 4" W x 8' 2" H (not including tongue)</p> <p>15,000 lb x 5 lb</p> <p>Single Axle</p>	<p>LSP1513-MWC225P</p> <p>13' L x 7' 4" W x 8' 2" H</p> <p>15,000 lb x 5 lb</p> <p>Lower Frame</p>
	<p>LSM2018-MWC225P</p> <p>18' 5" L x 7' 4" W x 8' 2" H (not including tongue)</p> <p>20,000 lb x 5 lb</p> <p>Tandem Axle</p>	<p>LSP2018-MWC225P</p> <p>18' 5" L x 7' 4" W x 8' 2" H</p> <p>20,000 lb x 5 lb</p> <p>Lower Frame</p>



Each Weight Wrangler model listed here includes weight indicator and ticket printer

- OPTIONAL:**
- Collector Panel Mount Bow (qty. 1)
 - Horse Risers
 - Dual Latch Gate
 - Solar Panel

Cardinal Scale reserves the right to improve, enhance or modify features and specifications without prior notice. All registered trademarks are the property of their respective owners.



102 East Daugherty St., Webb City, MO 64870 USA
Toll-Free: (800) 441-4237 E-mail: cardinal@cardet.com
www.CardinalScale.com

SOLD BY:

